

16. REAR SECTION OF THE VEHICLE: REPAIRING THE SEALING

17. ROOF: REPAIRING THE SEALING

18. UNDERSIDE OF THE VEHICLE: REPAIRING THE SEALING



Repair-60x01-02x99-1-1-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

HAZARD WARNING LIGHTS AND CENTRAL DOOR CONTROL: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts to always be replaced, etc.) [Dashboard assembly: Exploded view](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Switch off the ignition.
- Remove the centre front panel trim [Dashboard assembly: Exploded view](#) .
- Disconnect the air conditioning control panel connector.
- Remove [Dashboard assembly: Exploded view](#) :
 - the centre front panel support screws,
 - the centre front panel support.

- Disconnect the hazard warning light and central door locking switch connectors.

2. REMOVAL OPERATION

- Unclip the hazard warning light and central door locking button by pressing on the clips.

REFITTING

- Proceed in the reverse order to removal.