

REFITTING

1. REFITTING OPERATION



Refit the heating resistors.



Connect the heating resistors connector.

2. FINAL OPERATION



Proceed in the reverse order to removal.



Tighten to torque:



the dashboard cross member reinforcement upper nuts **21 N.m**,

the dashboard cross member reinforcement lower bolts **21 N.m**,

the earth nut on the dashboard cross member reinforcement **8 N.m**.



Repair-30x02x01x05-01x37-1-36-1.xml

