

Switch on the ignition.

Apply the after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerned by the After repair procedure:

"Instrument panel" .



Repair-30x04x01-01x37-1-34-1.xml



XSL version : 3.02 du 22/07/11


mcx30.com

INTERCOOLER AIR INLET PIPE: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts always to be replaced, etc.)[Air inlet assembly:](#)
[Exploded view](#) .

REMOVAL


1. REMOVAL PREPARATION OPERATION

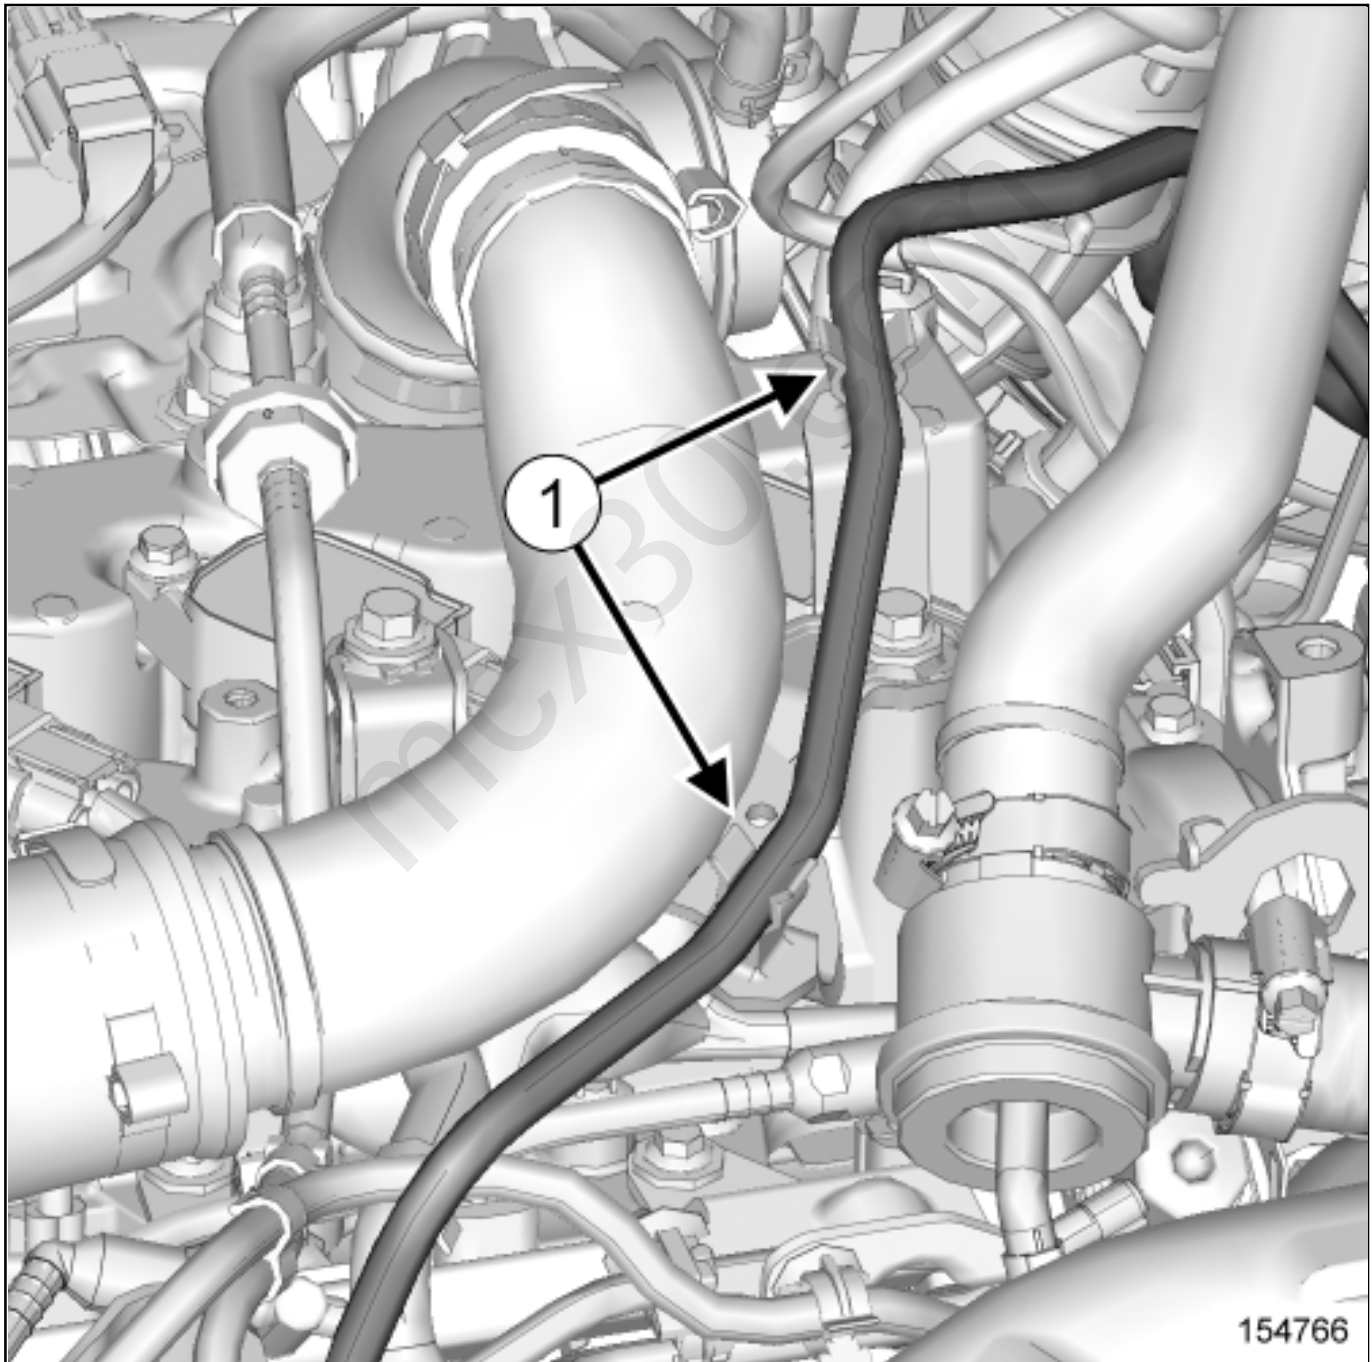


Unclip the brake servo pipe at(1) .

2. REMOVAL OPERATION

Remove the intercooler air inlet pipe nuts [Air inlet assembly: Exploded view](#) .

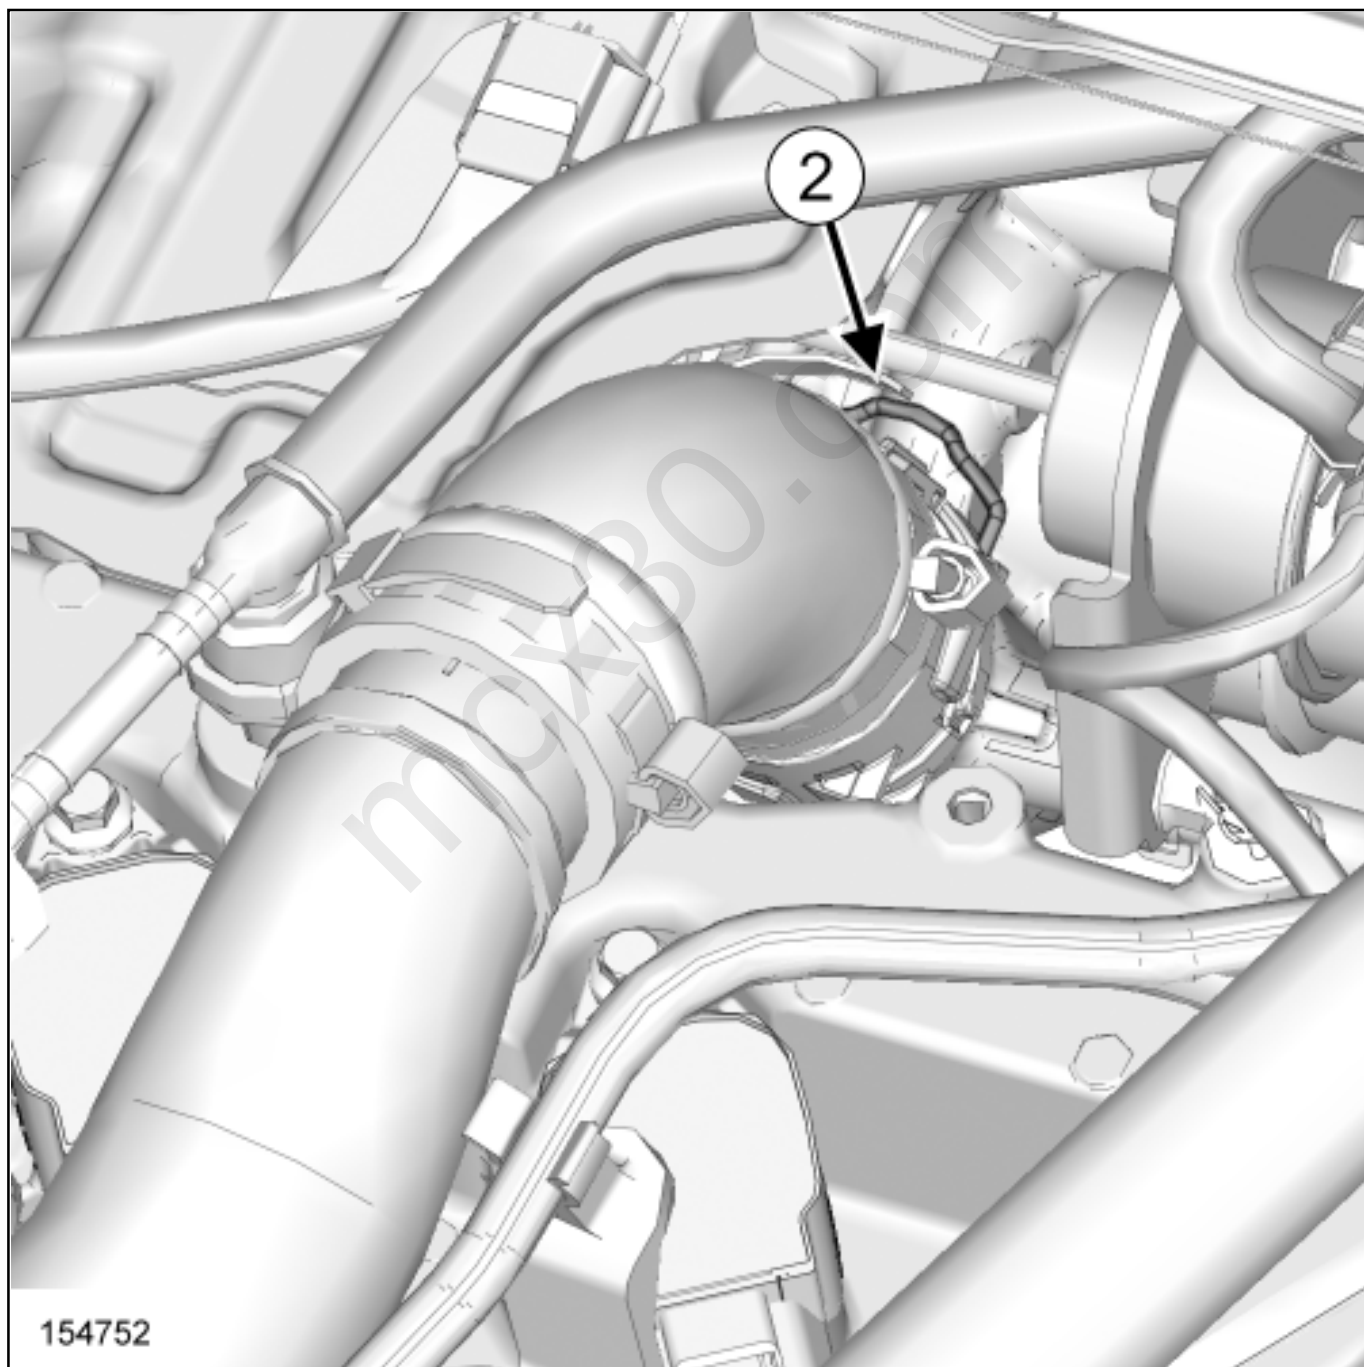

Remove the turbocharger air outlet pipe clip(2) by pulling on the clip.

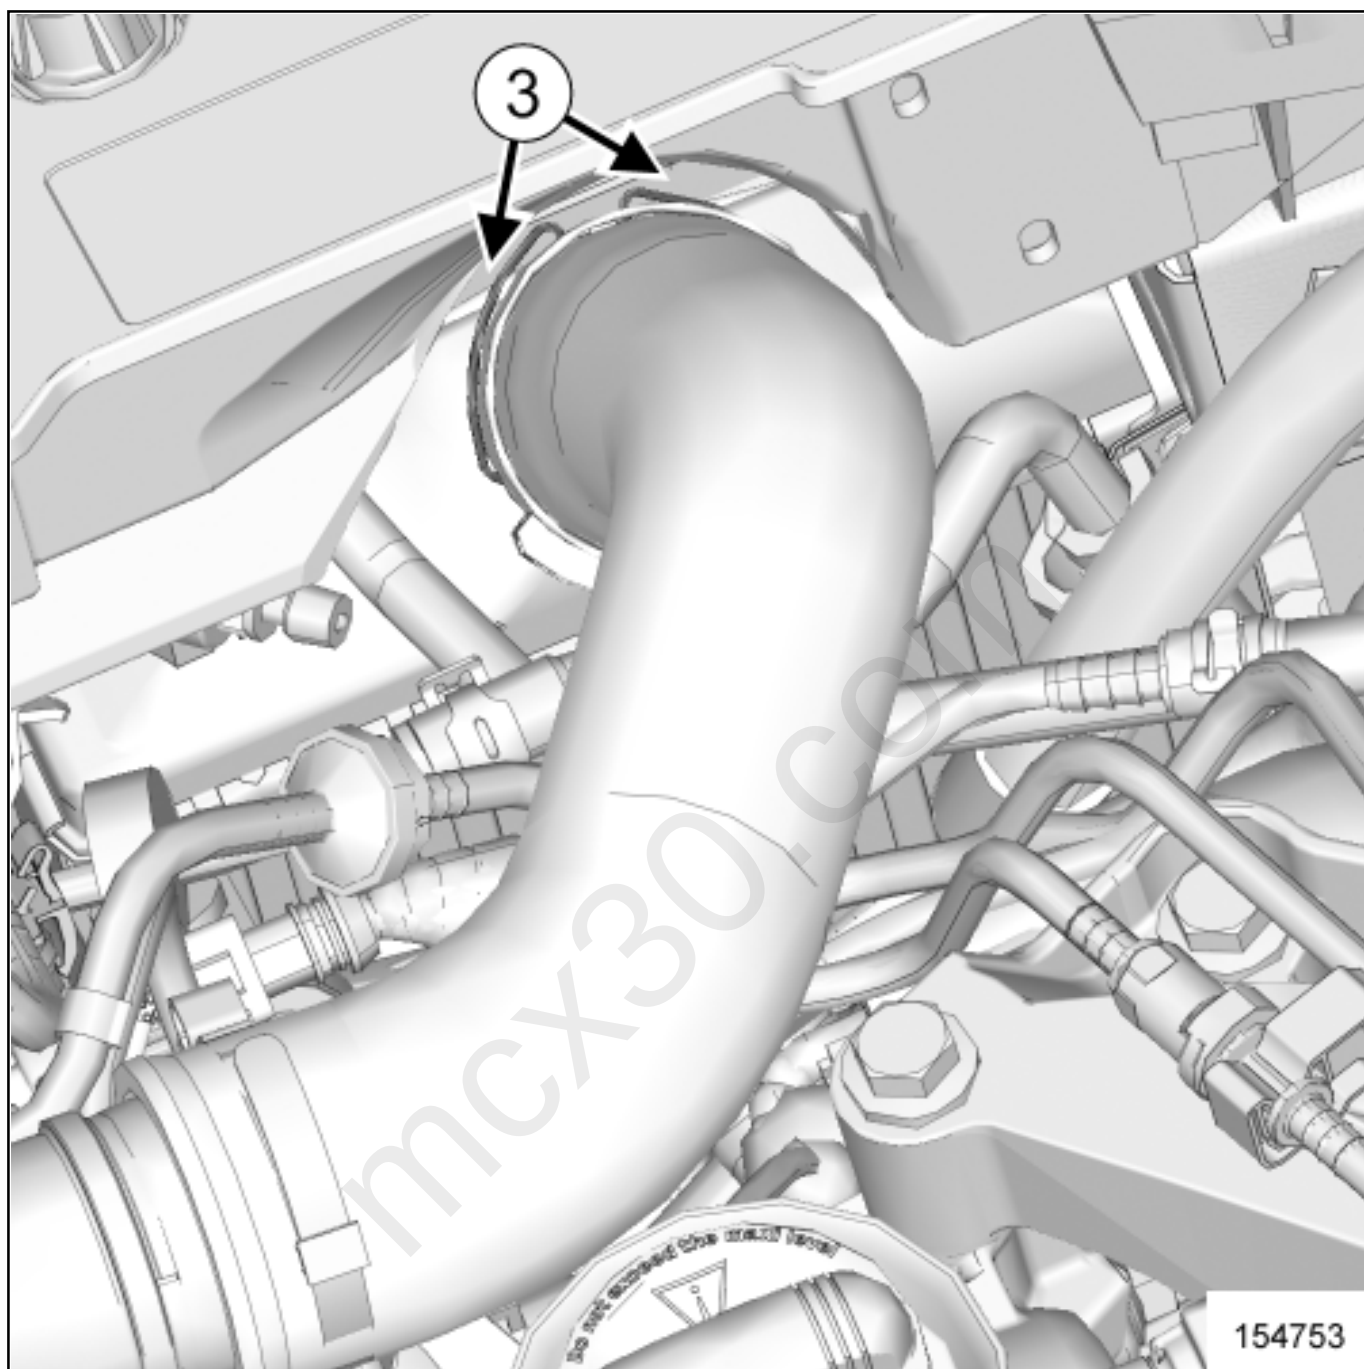

Remove:



the intercooler air inlet pipe clip by pulling on both ends(3) of the clip,



the intercooler air inlet pipe [Air inlet assembly: Exploded view](#) .