



mcx30.com

LPG TANK - NECK PIPE: REMOVAL - REFITTING

REMOVAL

■ It is essential to read the repair precautions([see 17C, LPG injection, LPG injection: Precautions for the repair](#)) .

■ Park the vehicle outside.

■ Disconnect the battery[Battery: Removal - Refitting](#) (80A, Battery).

■ Remove the rear right-hand wheel[Wheel: Removal - Refitting](#) (35A, Wheels and tyres).

■ Cut the retaining clip of the multifunction valve protection (if the vehicle is equipped).



Remove the protection of the multifunction valve.



Disconnect the connector of the LPG tank solenoid valve.



Drain the neck - LPG tank pipe:



gradually undo the nut of the neck - LPG tank pipe on the LPG tank multifunction valve and allow all of the gas to escape.



Refit the rear right-hand wheel[Wheel: Removal - Refitting](#) (35A, Wheels and tyres).



Take the vehicle back inside.



Position the vehicle on a two-post lift[Vehicle: Towing and lifting](#) (02A, Lifting equipment).

