



Repair-11x06x01x03-01x37-1-7-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

LPG TANK SOLENOID VALVE: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING

Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions [Vehicle: Precautions for the repair](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

■ It is essential to read the repair precautions ([see 17C, LPG injection, LPG injection: Precautions for the repair](#)) .



Disconnect the battery [Battery: Removal - Refitting](#) (80A, Battery).



Cut the retaining clip of the multifunction valve protection (if the vehicle is equipped).



Remove the protection of the multifunction valve.

2. REMOVAL OPERATION



Disconnect the connector of the LPG tank solenoid valve.



Remove:



the bolt from the LPG tank solenoid valve,

the LPG tank solenoid valve.