



Note:

The tightening of the parking shaft locating ball cartridge plug allows the correct positioning of the parking shaft locating ball cartridge in its housing.



Torque tighten the parking shaft locating ball cartridge plug 46 N.m.

3. FINAL OPERATION



Proceed in the reverse order to removal.



Repair-12x07x02x28-01x37-1-1-1.xml



XSL version : 3.02 du 22/07/11

MIXING MOTOR: REMOVAL-REFITTING

Equipment required
Diagnostic tool


Locations and specifications (tightening torques, parts to always be replaced, etc.).[\(see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Remove the glovebox[Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

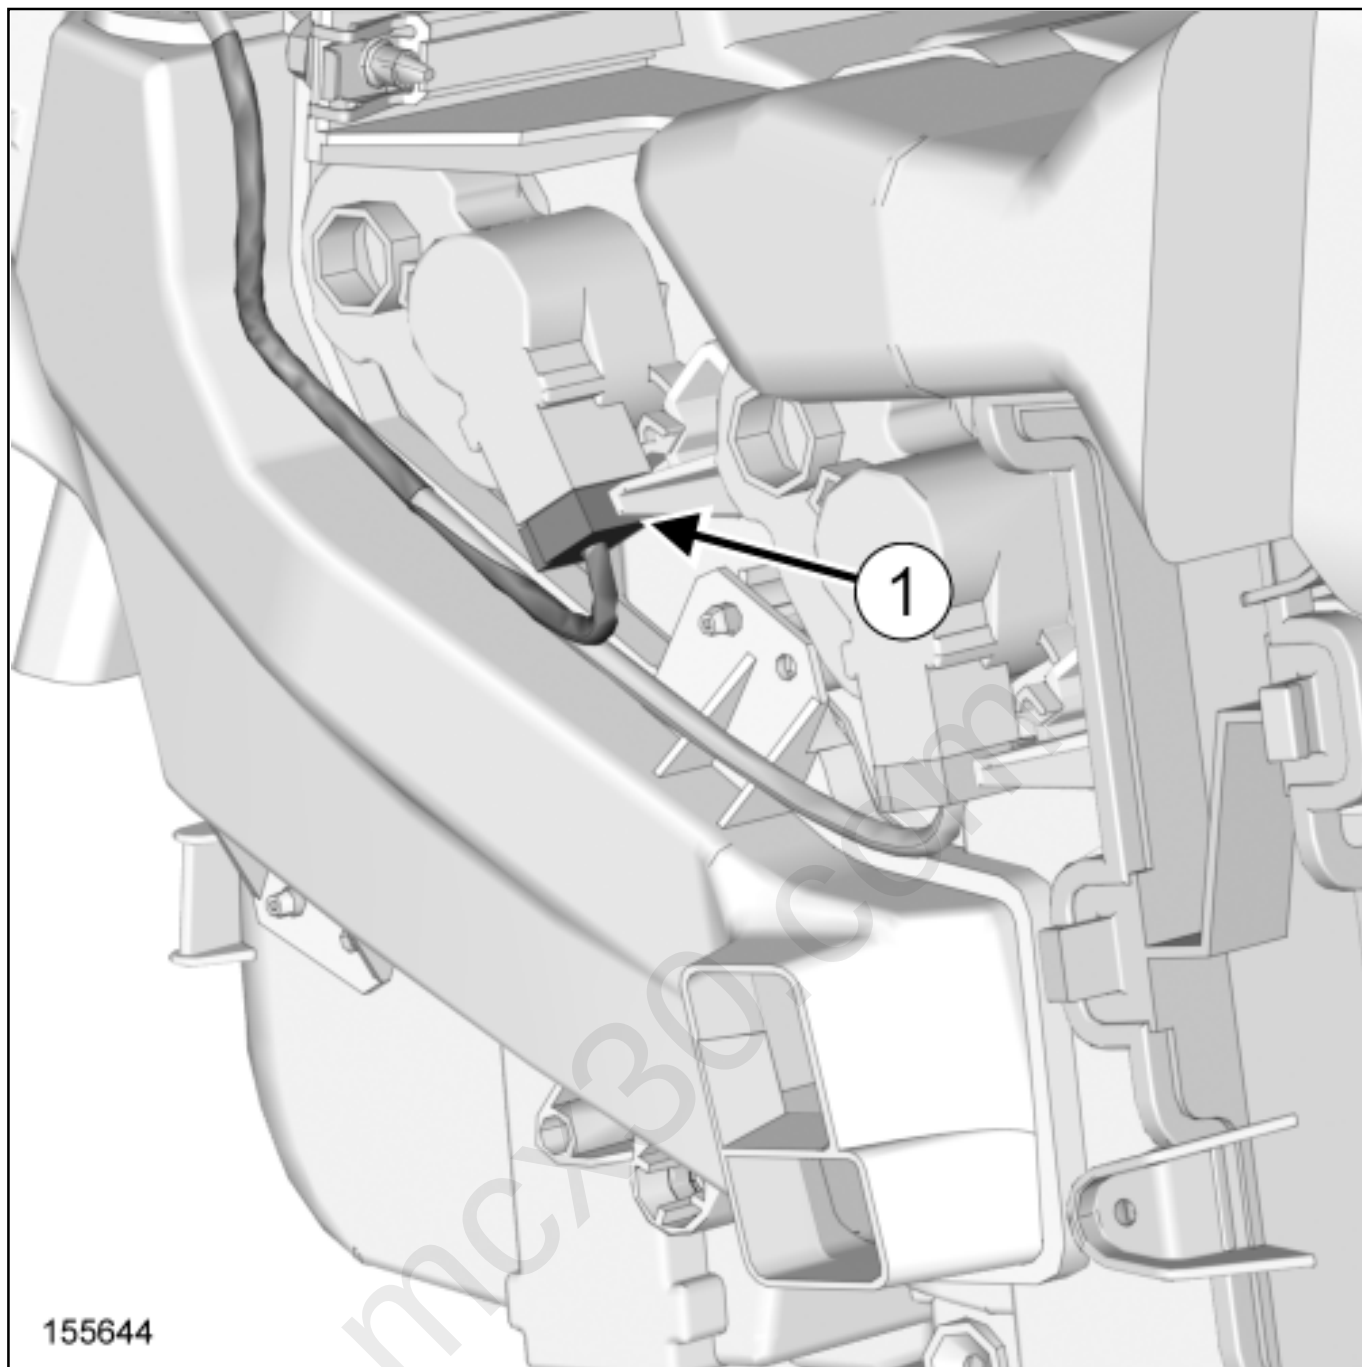

- Disconnect the mixing motor connector(1) .
- Unclip the mixing motor from the distribution unit([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .

REFITTING

1. REFITTING OPERATION

