

the air conditioning compressor nut.

Torque tighten [Engine accessories assembly: Exploded view](#) :



the air conditioning compressor bolts,



the air conditioning compressor nut.

Proceed in the reverse order to removal.



[Repair-10x04x02x01-01x37-1-134-1.xml](#)



XSL version : 3.02 du 22/07/11

NAVIGATION: LIST AND LOCATION OF COMPONENTS



Note, one or more warnings are present in this procedure



Equipment required

Diagnostic tool

1. LIST OF COMPONENTS

1- THE "NAVIGATION" EQUIPMENT CONSISTS OF:



navigation aerals



TCU VER 0 GEN 1(TCU0G1)

a telematics computer

2. LOCATION OF COMPONENTS



CAUTION

To prevent damaging the navigation system, wait 1 minute after switching off the + after ignition feed.


CAUTION




To ensure correct operation:



- do not pinch the aerial cable,
- do not bend the aerial cable,
- do not force the aerial cable when refitting.

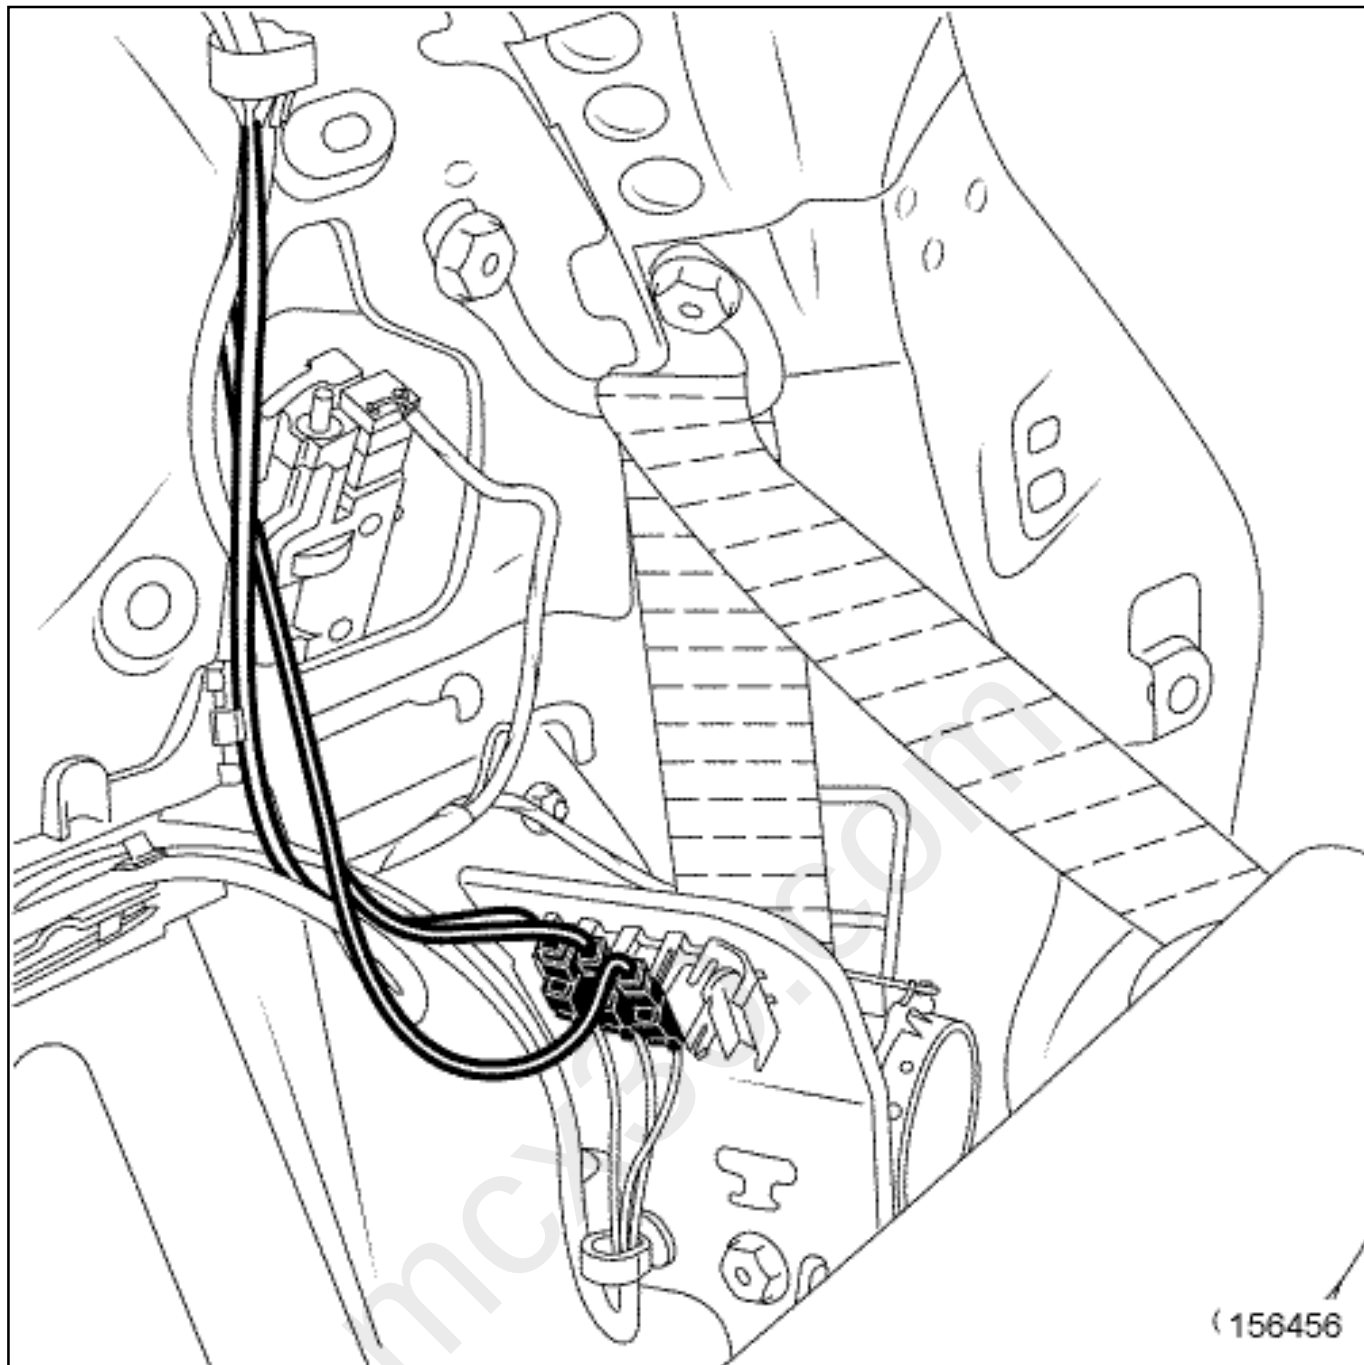

1- TELEMATICS COMPUTER

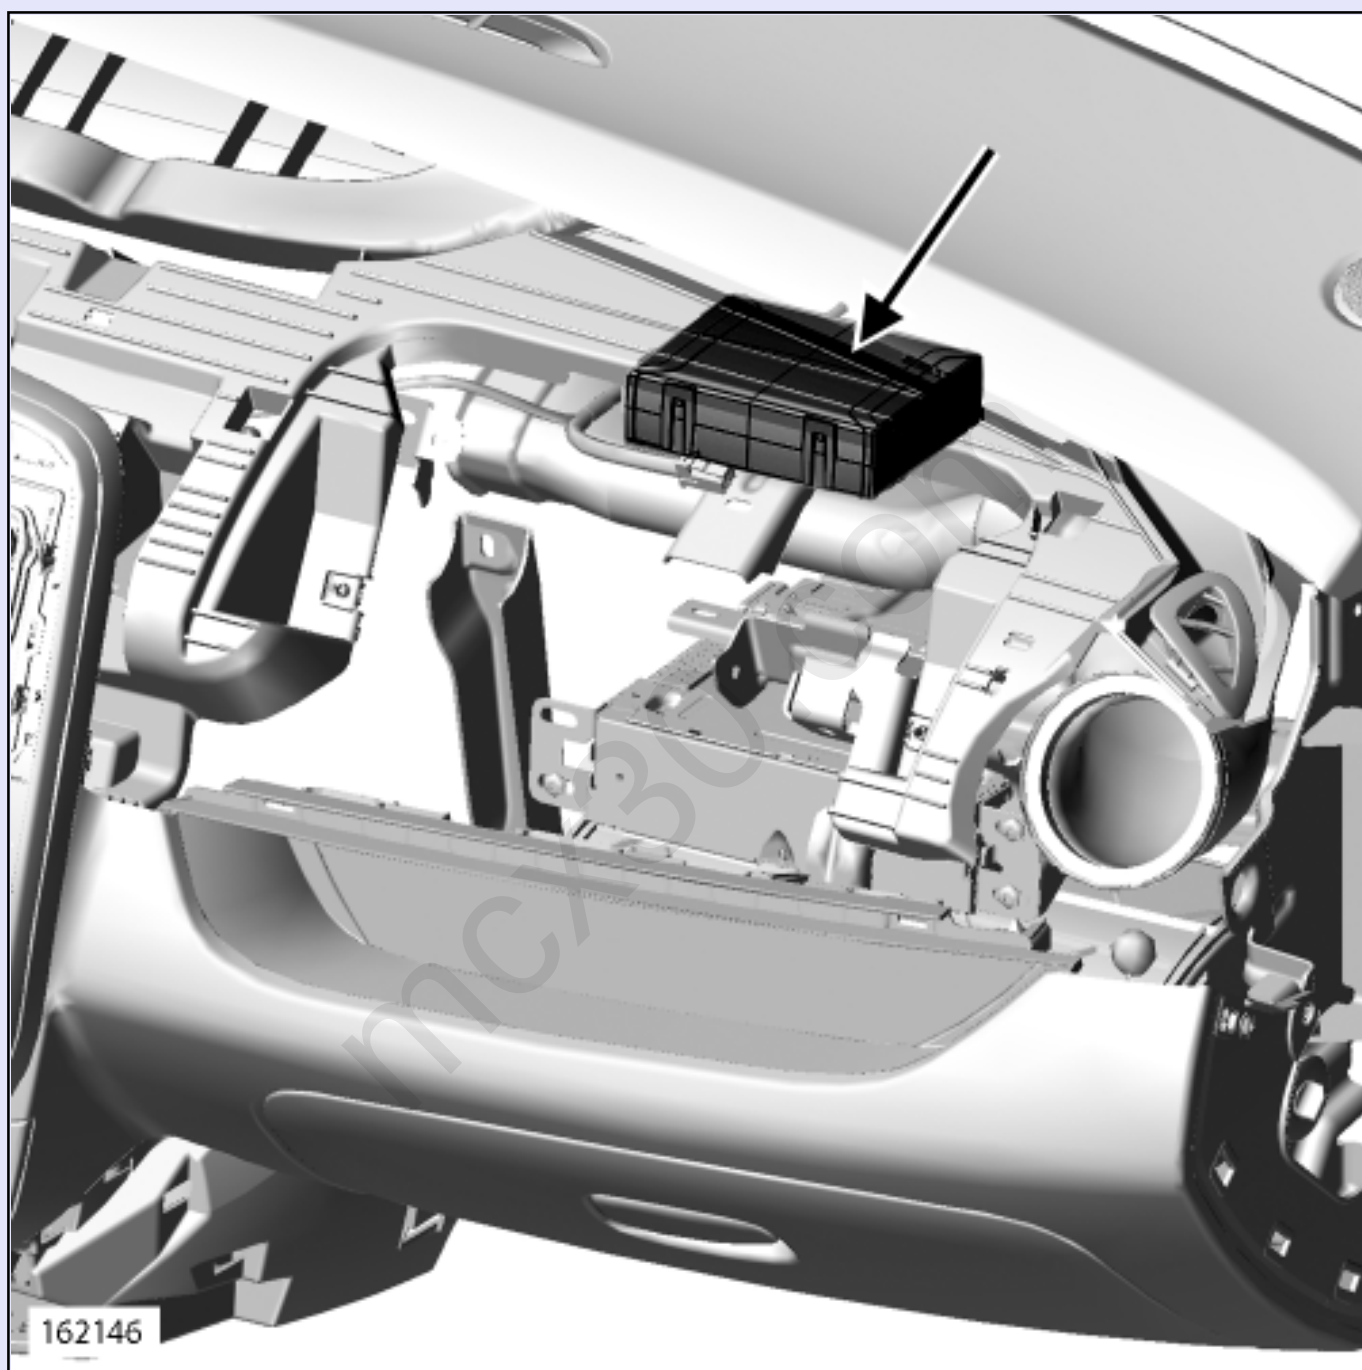

Remove the dashboard to access to the telematics computer [Dashboard assembly: Exploded view](#) .



Apply the before / after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerned by the Before / After repair procedure:

