

"Telematics computer" .



Repair-30x04x09x10-02x51-1-22-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

NAVIGATION: LIST AND LOCATION OF COMPONENTS



Note, one or more warnings are present in this procedure



Equipment required

Diagnostic tool

1. LIST OF COMPONENTS

1- THE "NAVIGATION" EQUIPMENT CONSISTS OF:

- navigation aerals

TCU VER 0 GEN 1(TCU0G1)

- a telematics computer

2. LOCATION OF COMPONENTS



CAUTION

To prevent damaging the navigation system, wait 1 minute after switching off the + after ignition feed.




CAUTION

To ensure correct operation:

- do not pinch the aerial cable,
- do not bend the aerial cable,
-


do not force the aerial cable when refitting.

1- AERIAL

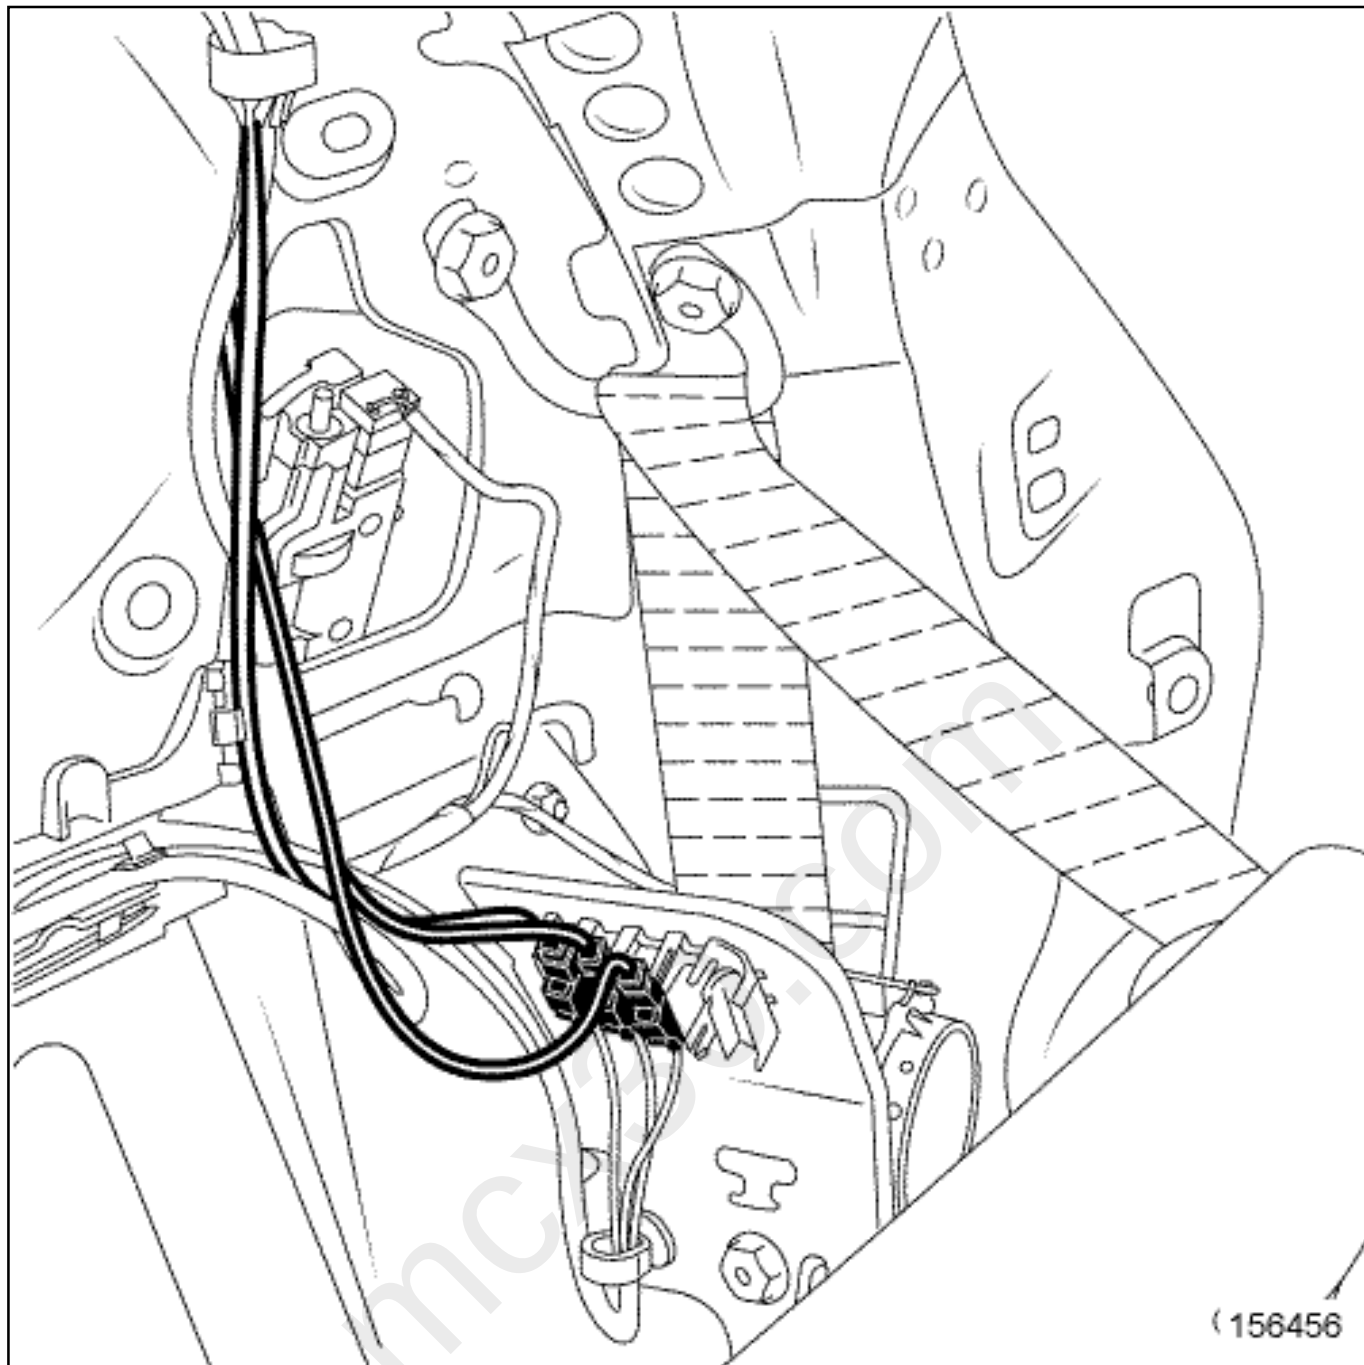

(156456

1- TELEMATICS COMPUTER

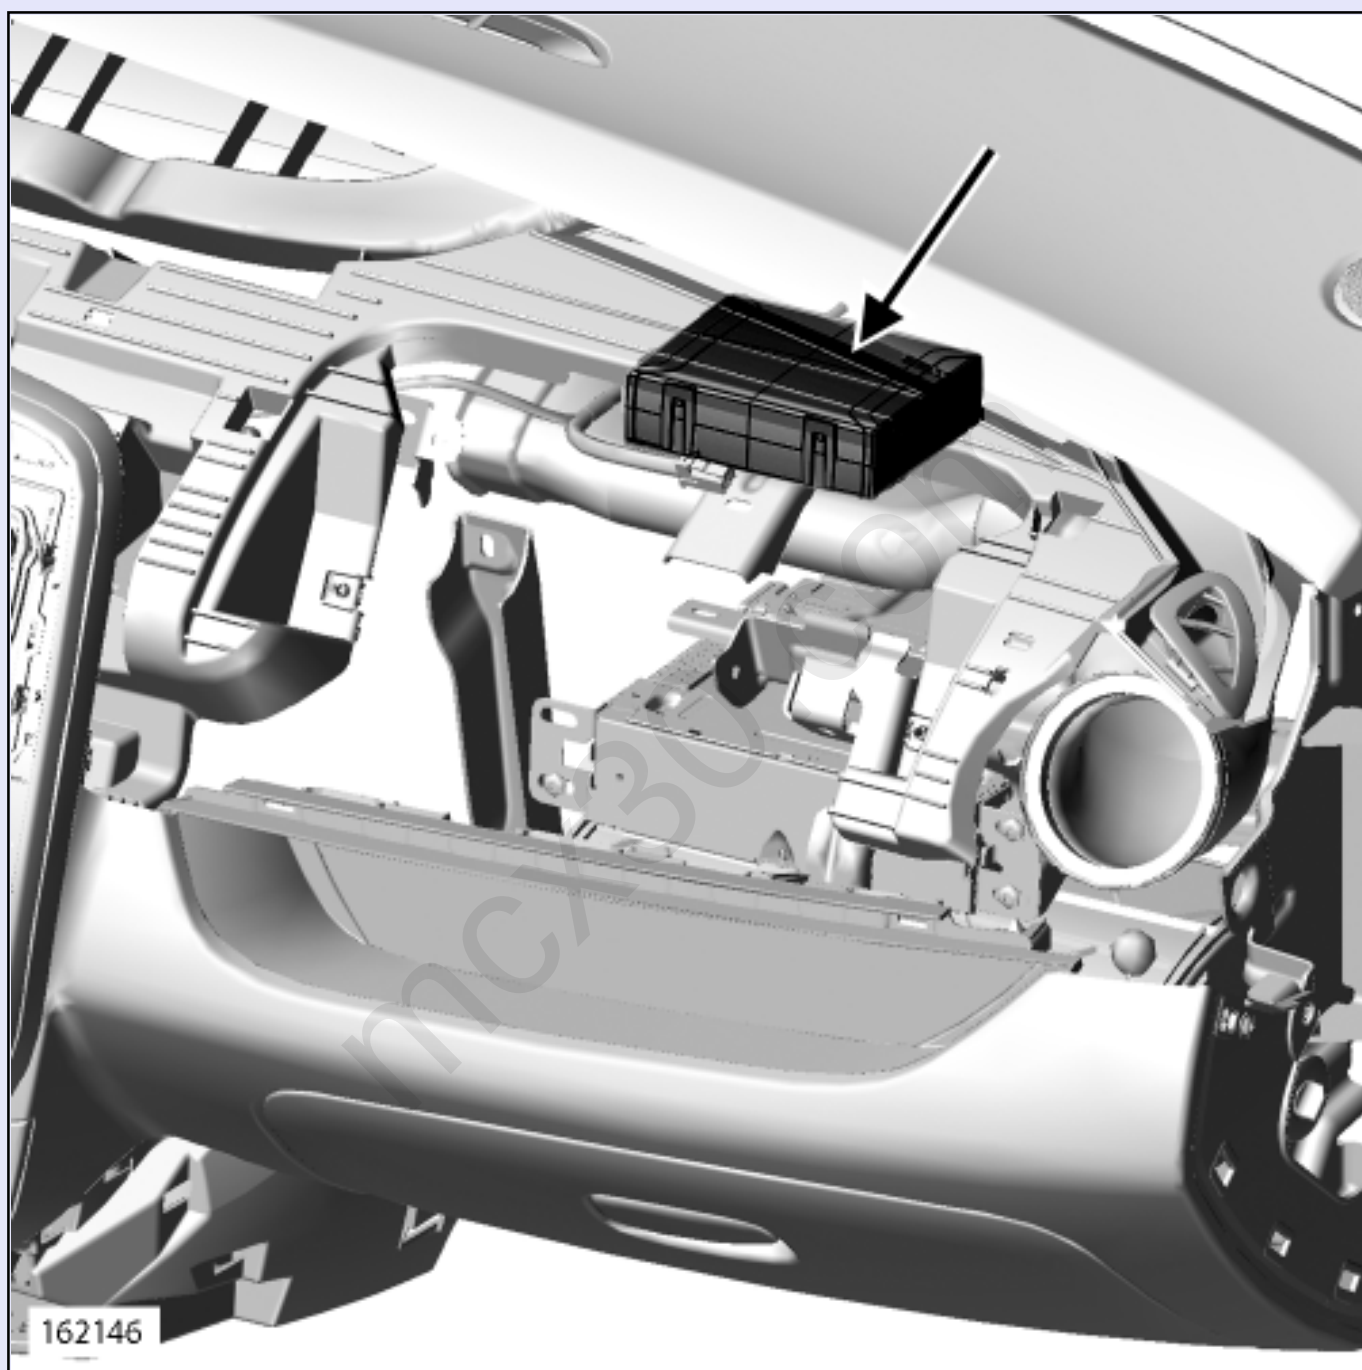

Remove the dashboard to access to the telematics computer [Dashboard assembly: Exploded view](#) .



Apply the before / after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerned by the Before / After repair procedure:

