

The oil service interval display on the trip computer (see Driver's Handbook, Trip computer).

3)CHECKER

If a warning light comes on or an error message is displayed on the instrument panel, the vehicle will need to be transferred to the workshop.



Repair-00x01x01x20-02x21-1-2-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

NON-SIDE OPENING ELEMENTS: ADJUSTMENT

1. BONNET

- Check that the peripheral components are adjusted correctly.

The lock and/or the retaining hook of the bonnet must be removed or loosened in order not to create any obstruction when in the closed position.


Fit the bonnet, pre-tightening in the middle of the adjustment.




Note:

For information about the adjustment zones, refer to the MR for the vehicle concerned.


1- ADJUSTMENT CHRONOLOGY

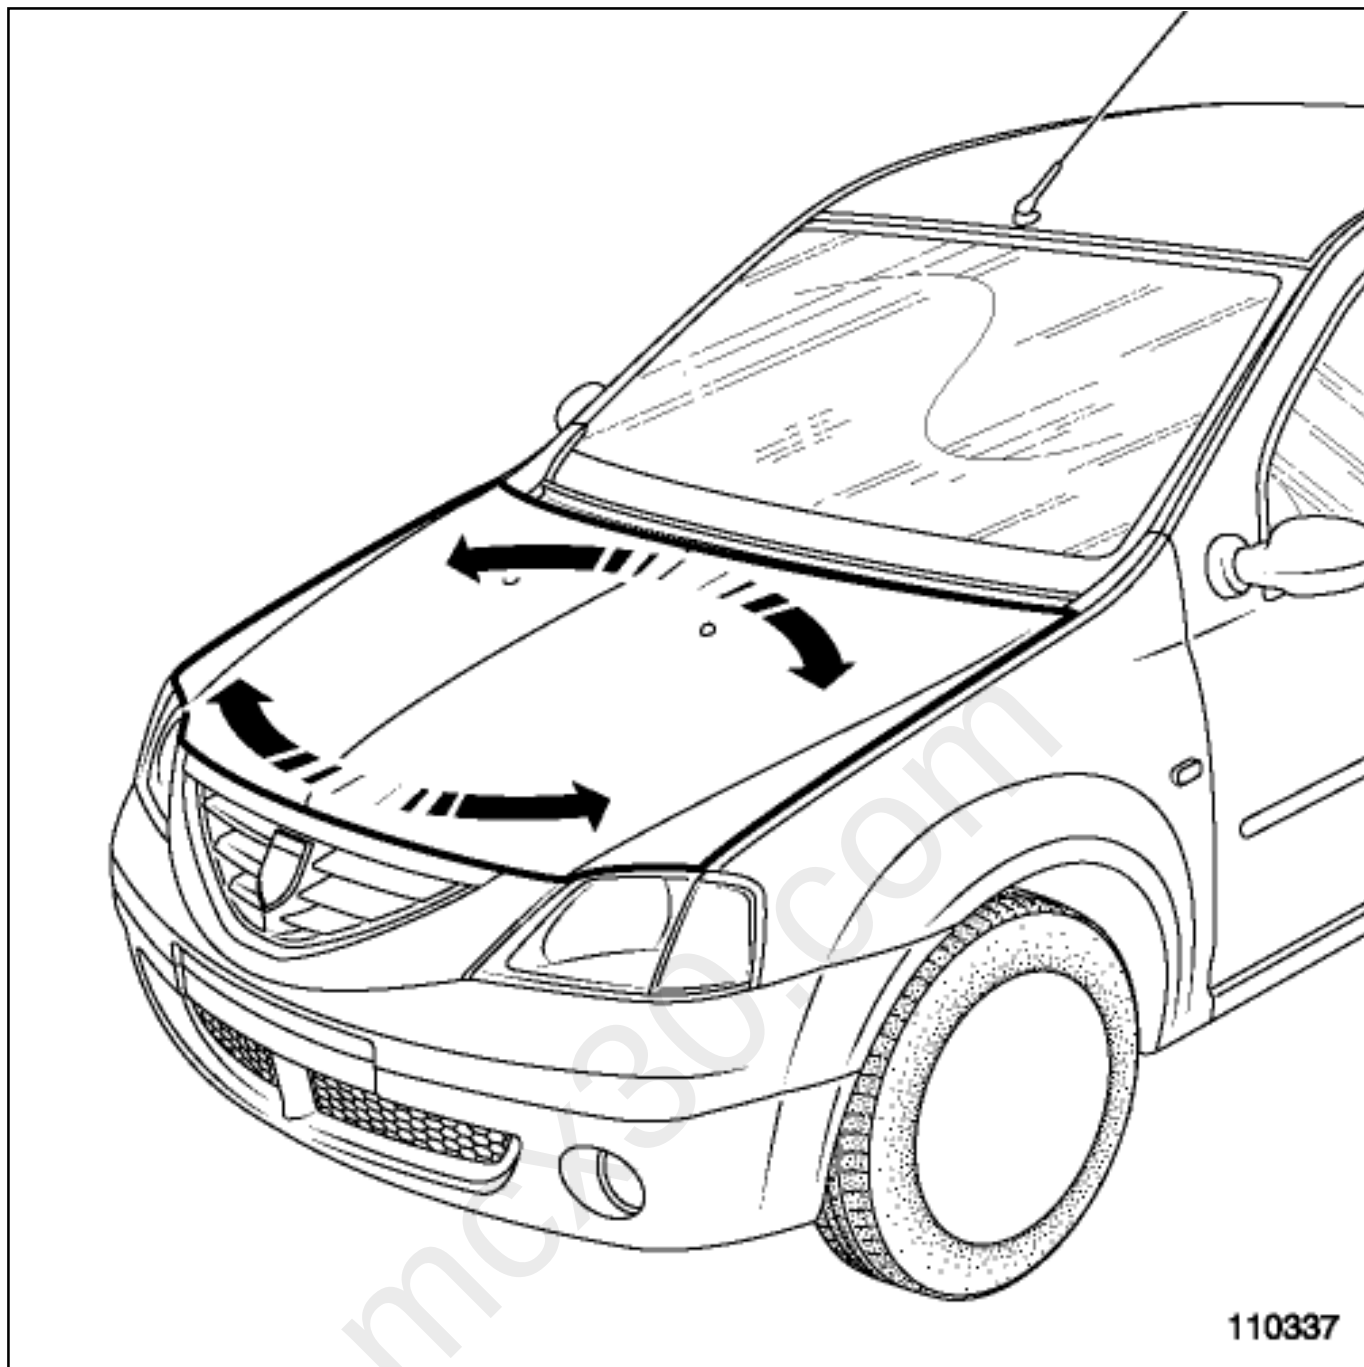

■ Adjust the centring of the bonnet (angle).

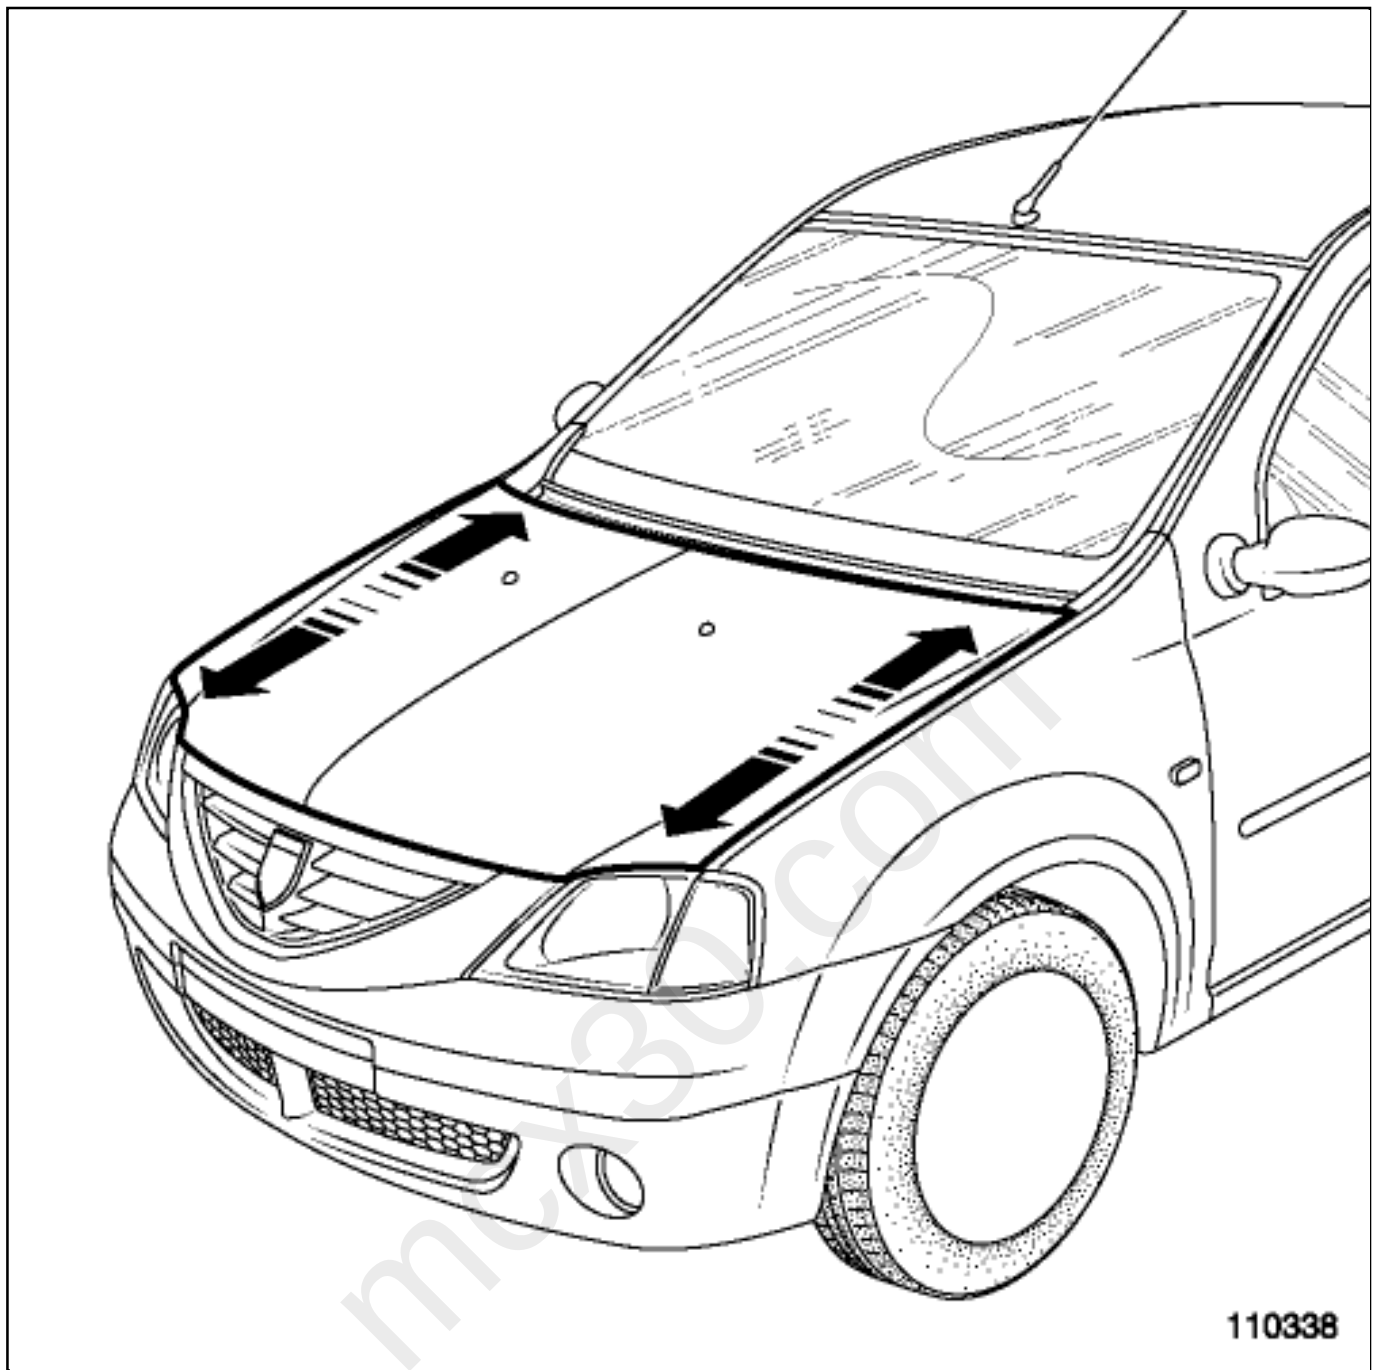


Adjust the longitudinal alignment; the bonnet/windscreen pillar and bonnet/headlight alignment.

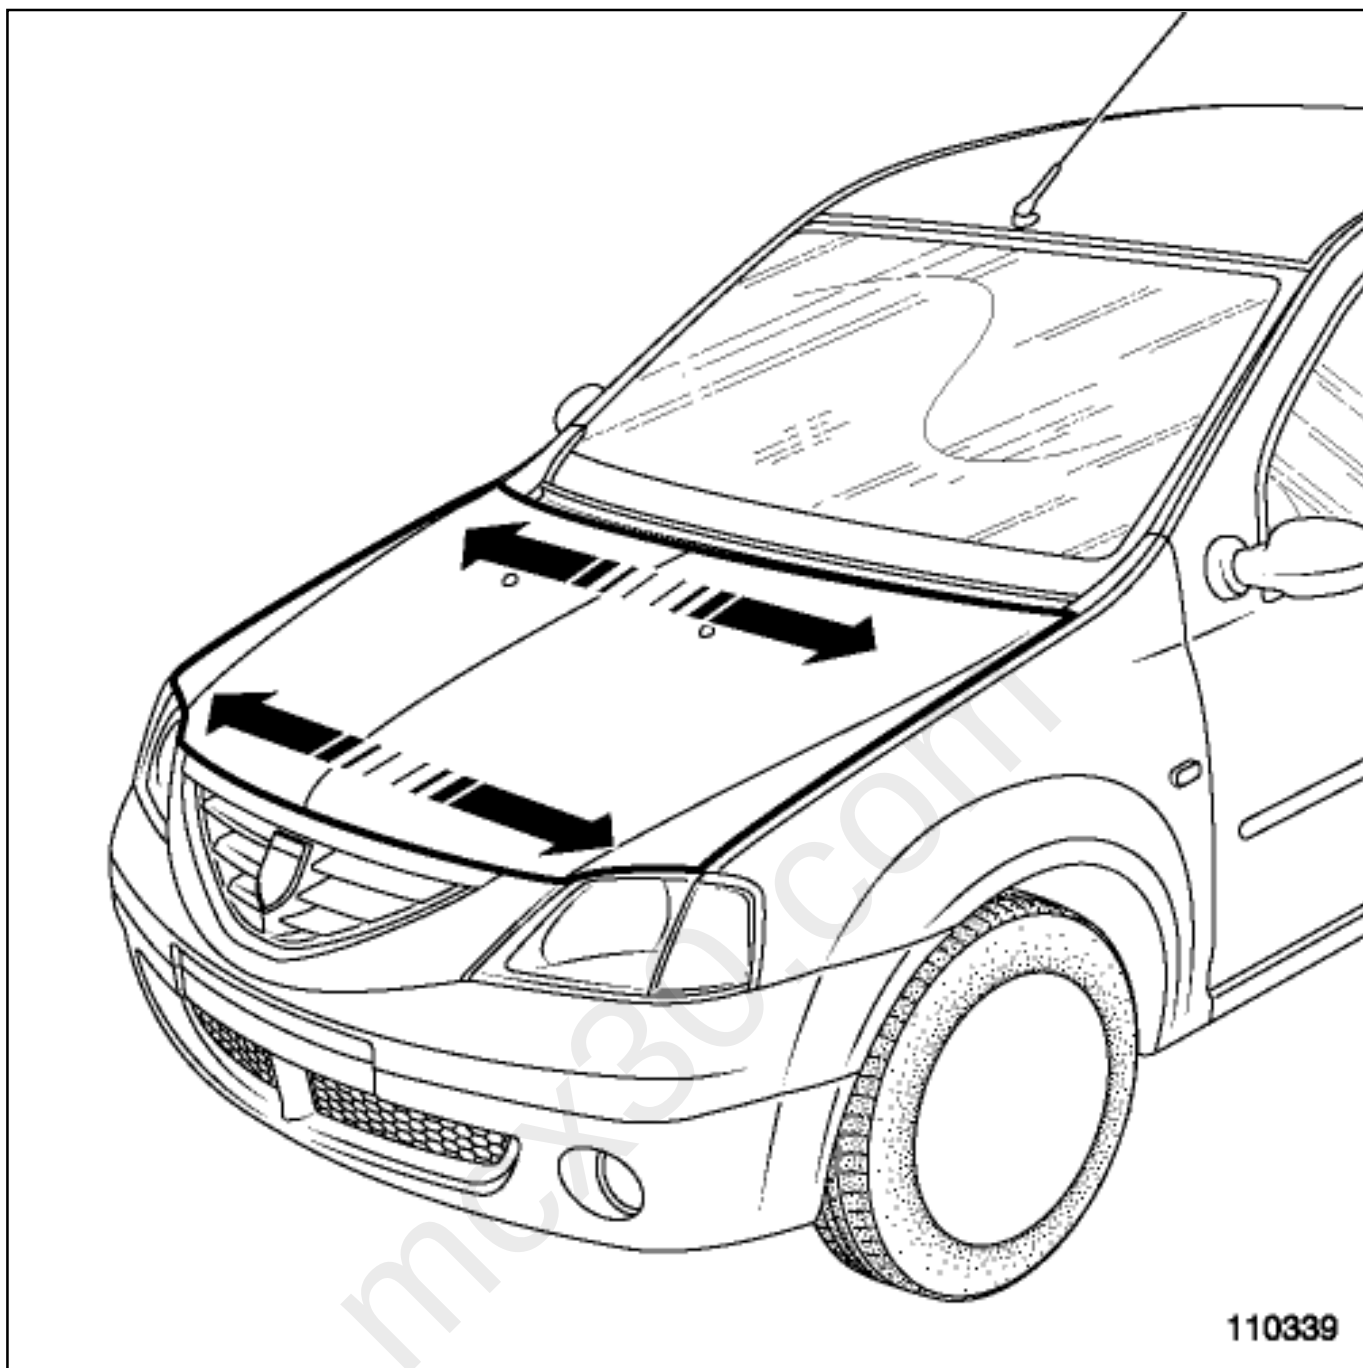


110339



Adjust the side alignment of the bonnet/wings; this must be identical on each side, and there must be the possibility of clearance on the wing adjustments.

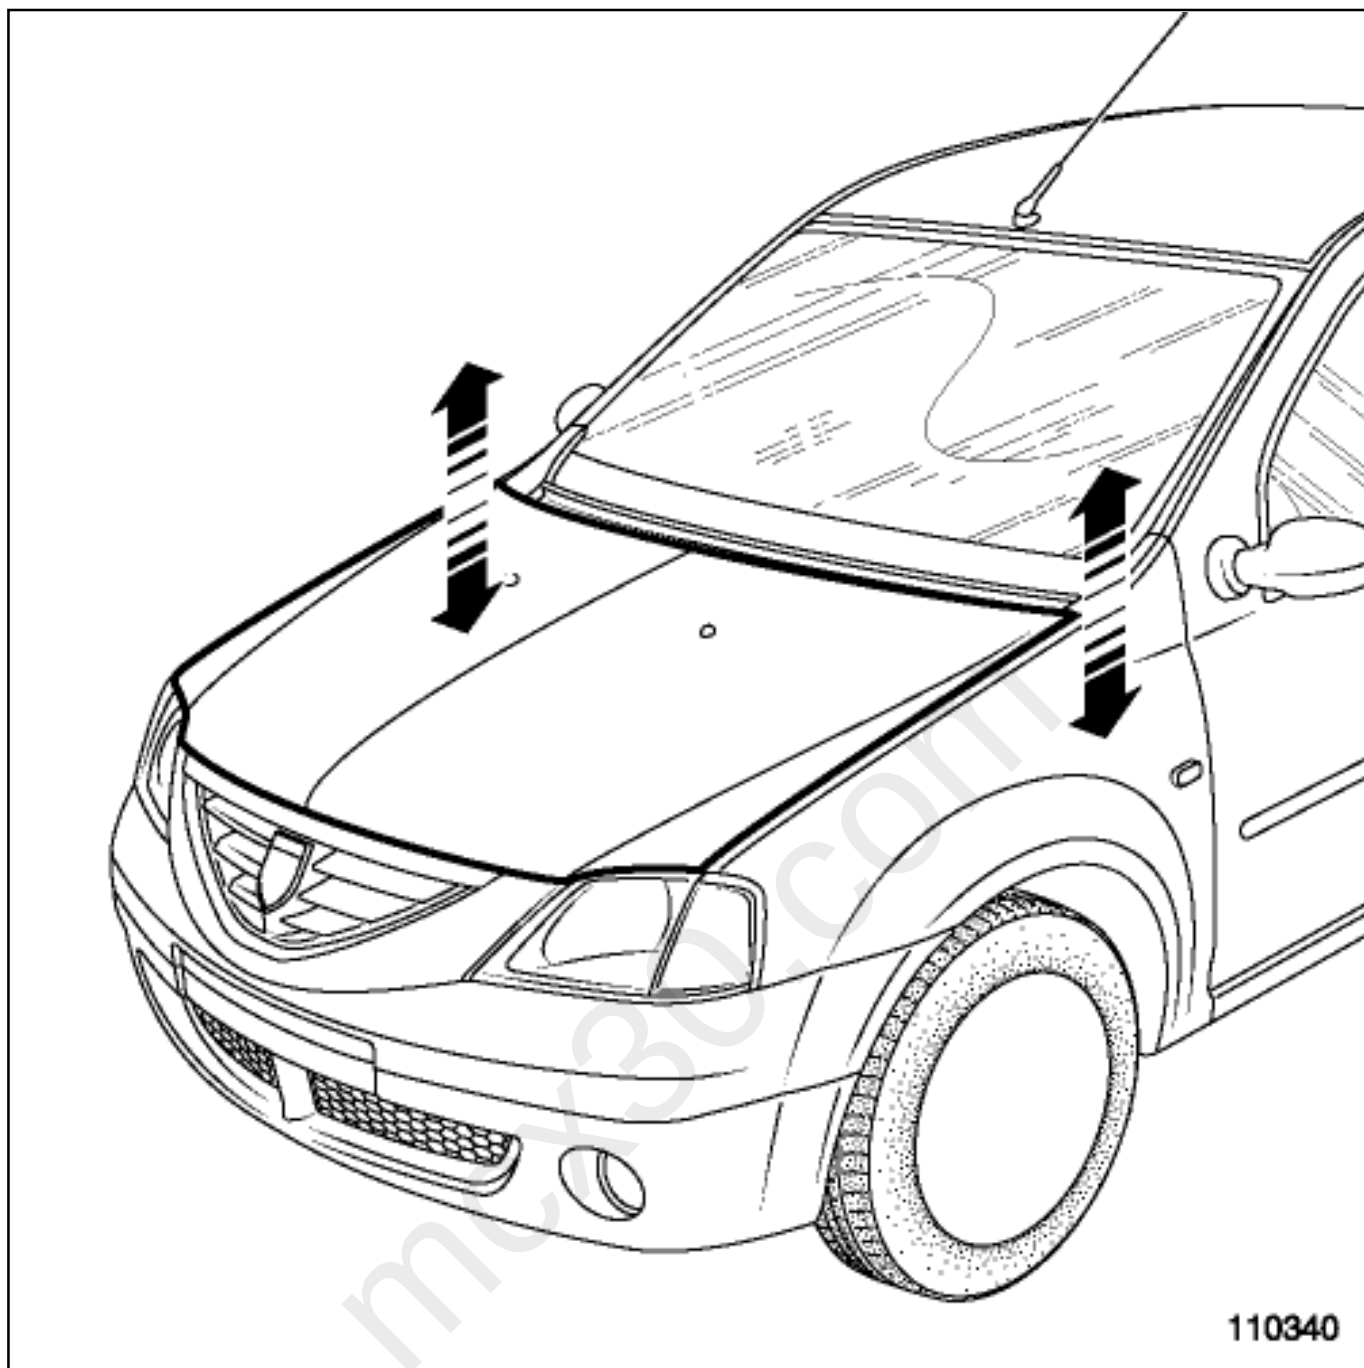

Adjust the bonnet rear flush fitting.

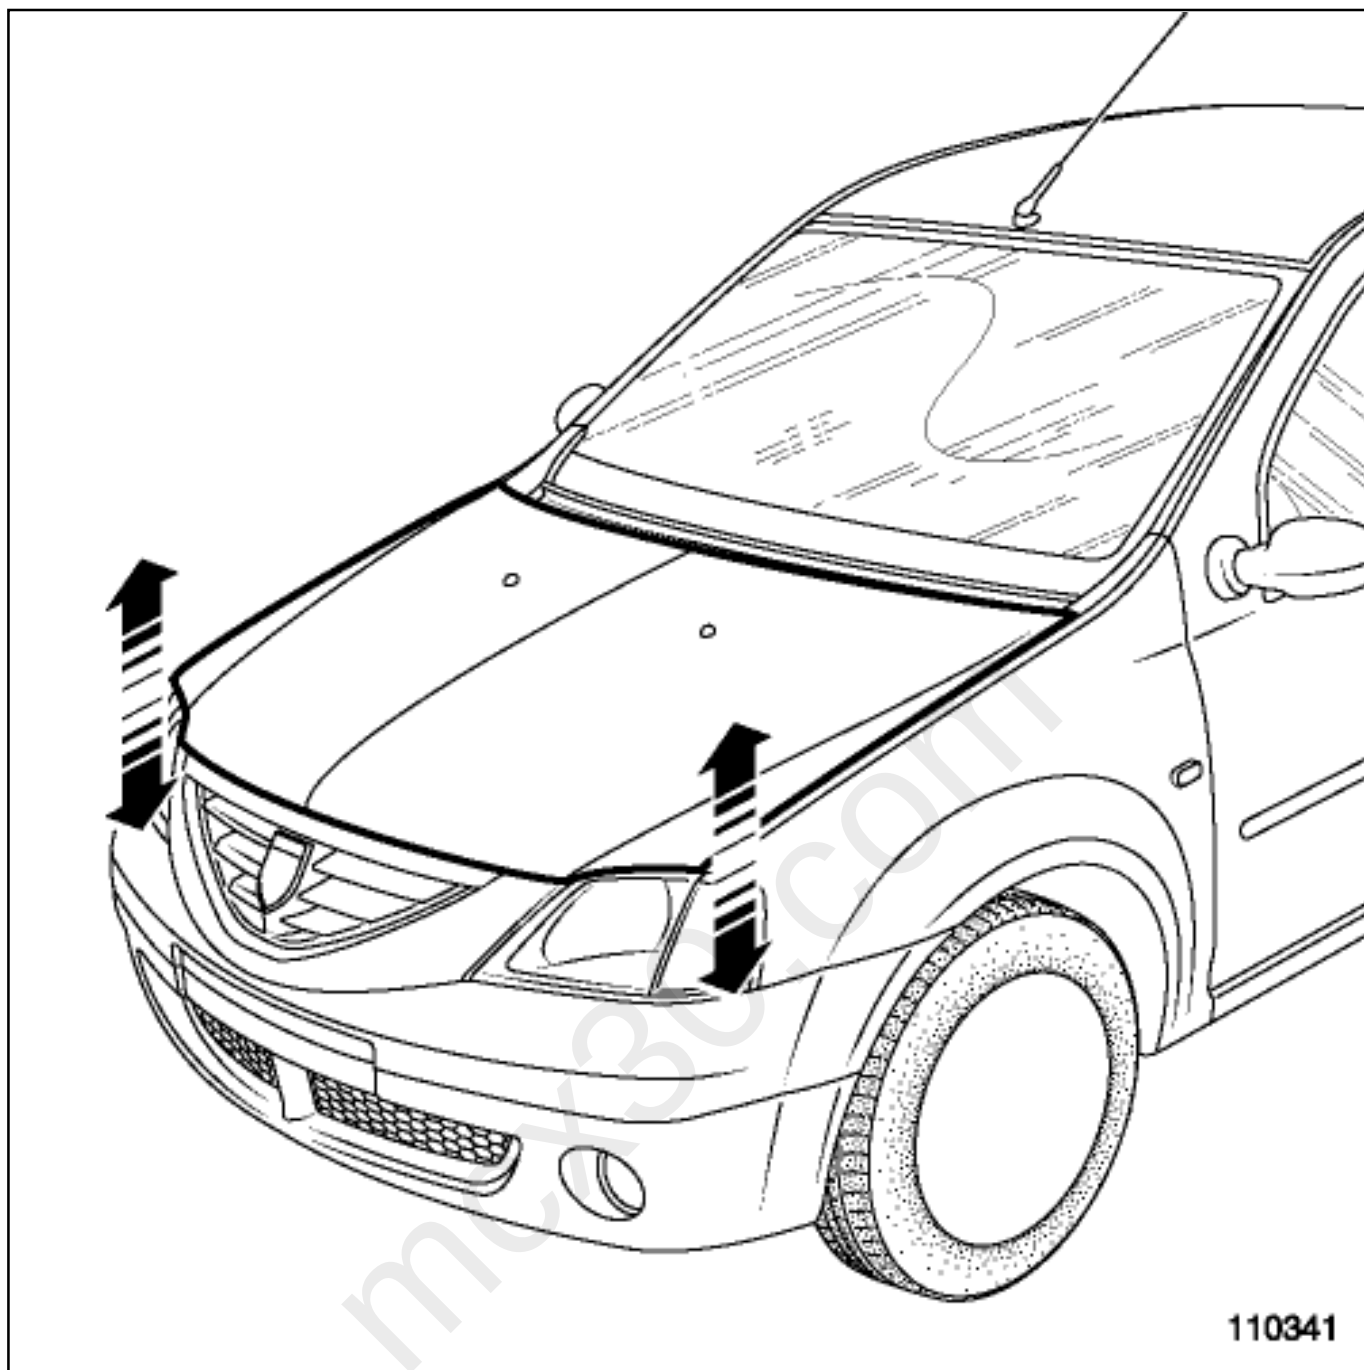

110341

Adjust the bonnet front flush fitting.

Check the adjustment and the correct operation then tighten into position.

2. TAILGATE

Check that the peripheral components are adjusted correctly.

Refit all of the heavy fittings of the tailgate.


Release the striker panel and fit the tailgate, pre-tightening in the middle of the adjustments.




Note:

For information about the adjustment zones, refer to the MR for the vehicle concerned.


1- ADJUSTMENT CHRONOLOGY

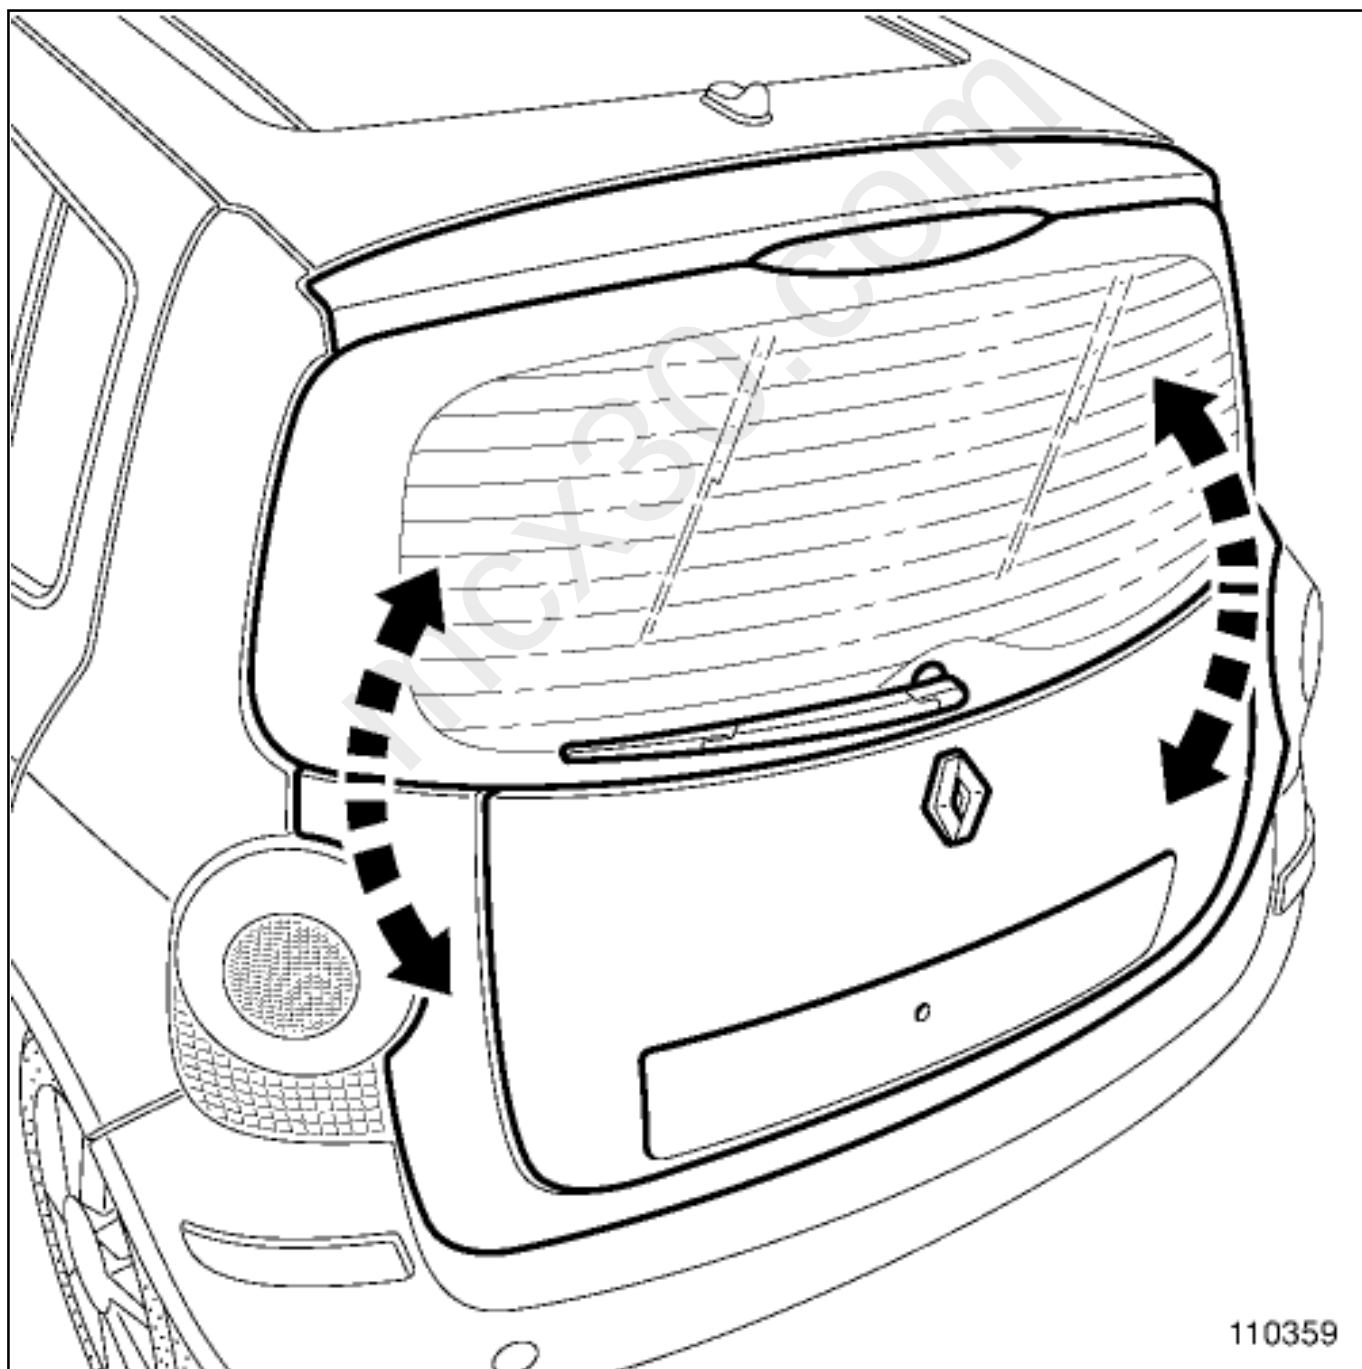


Centre the tailgate.

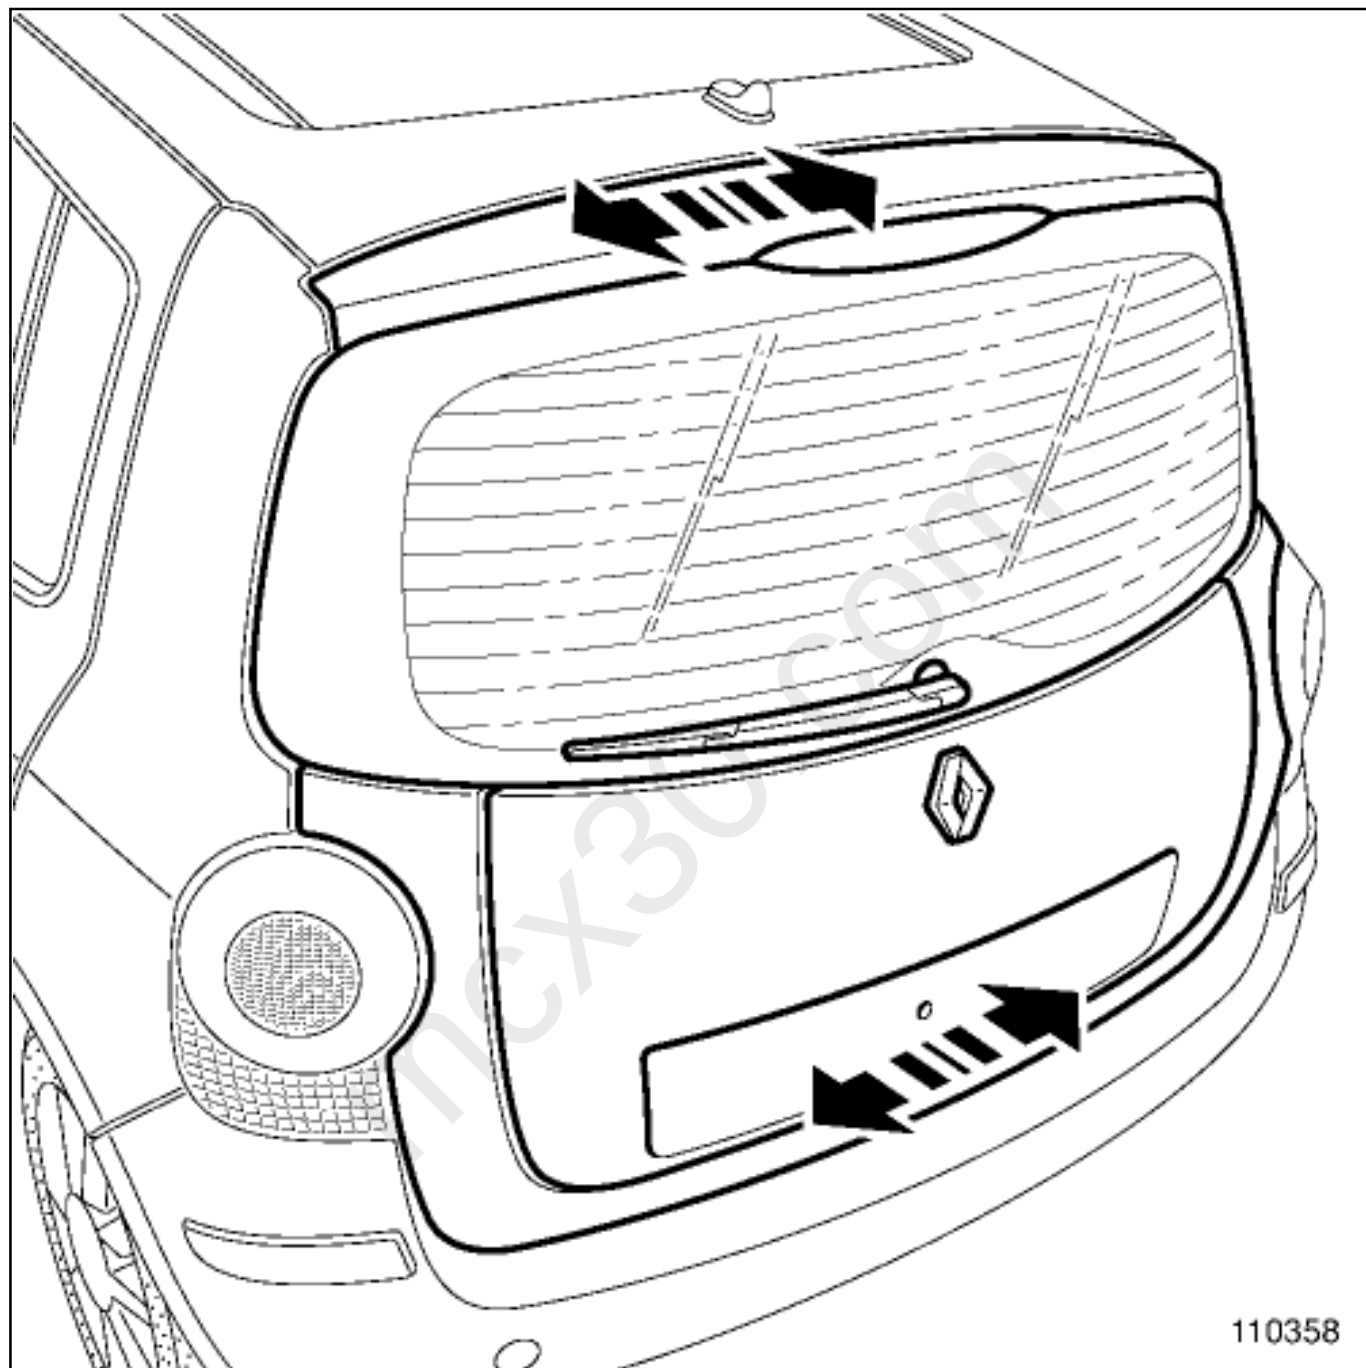


Adjust the side alignment of the tailgate.

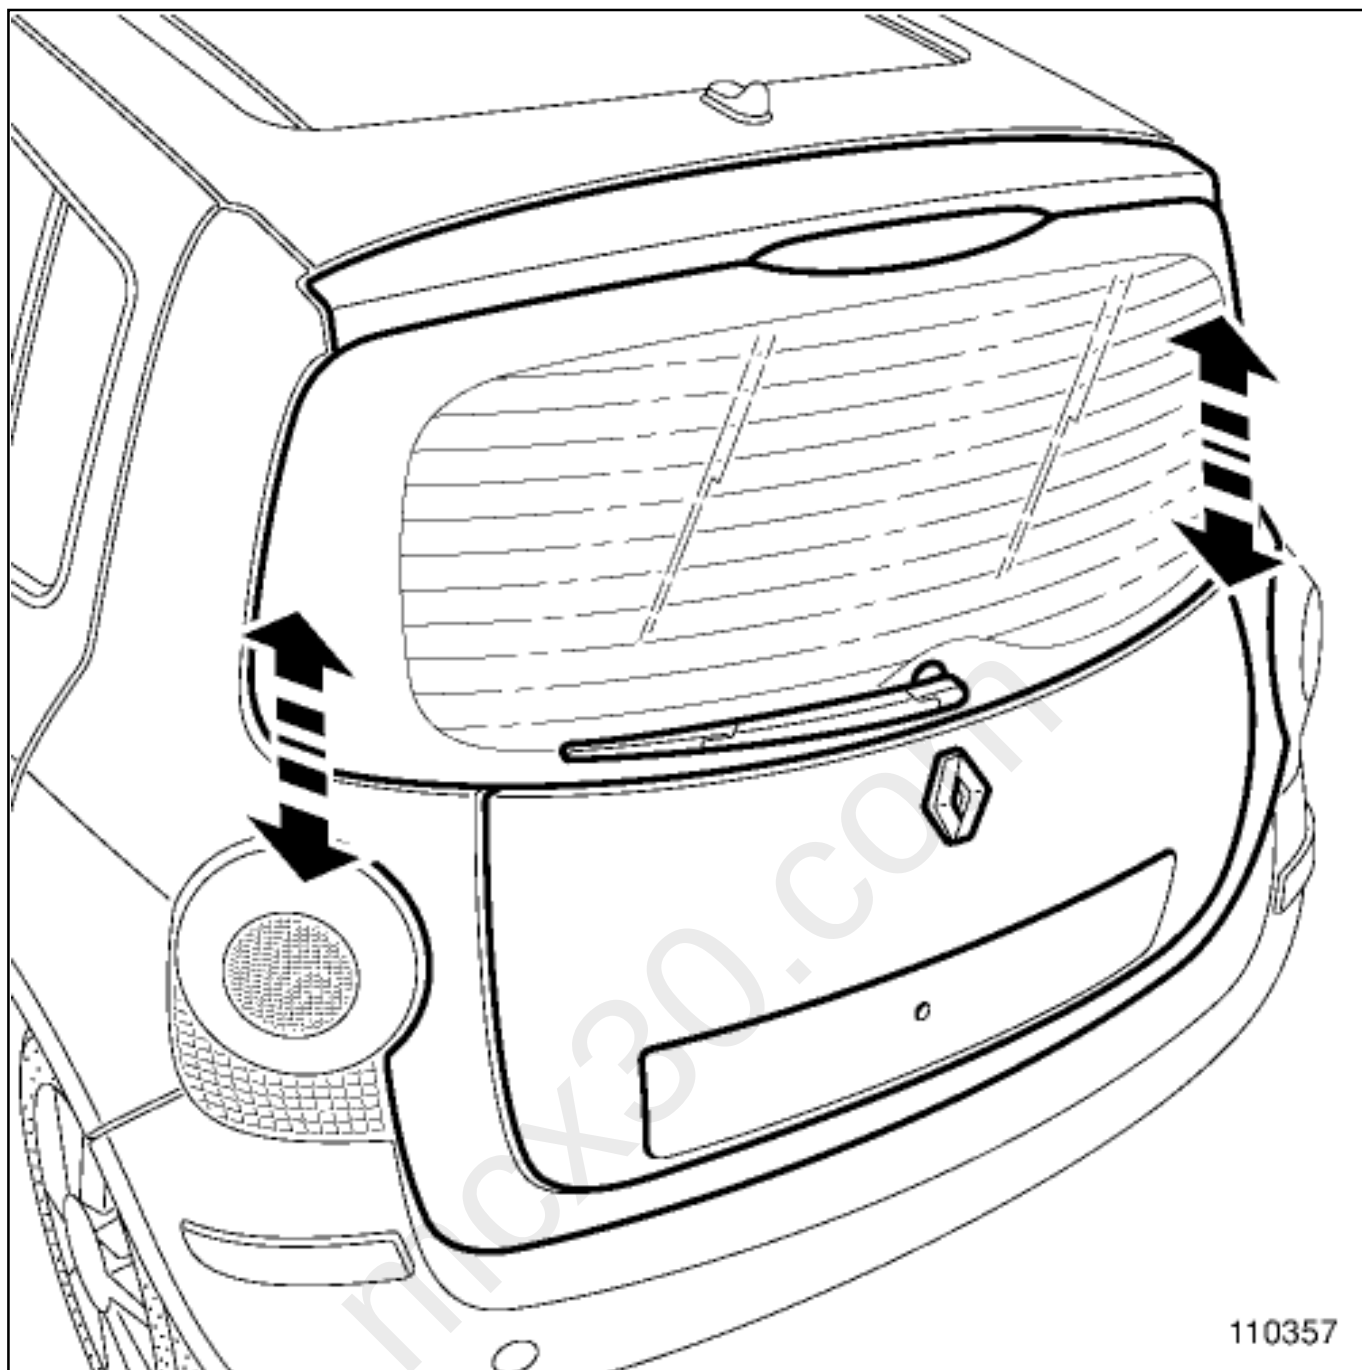

Adjust the height alignment of the tailgate.

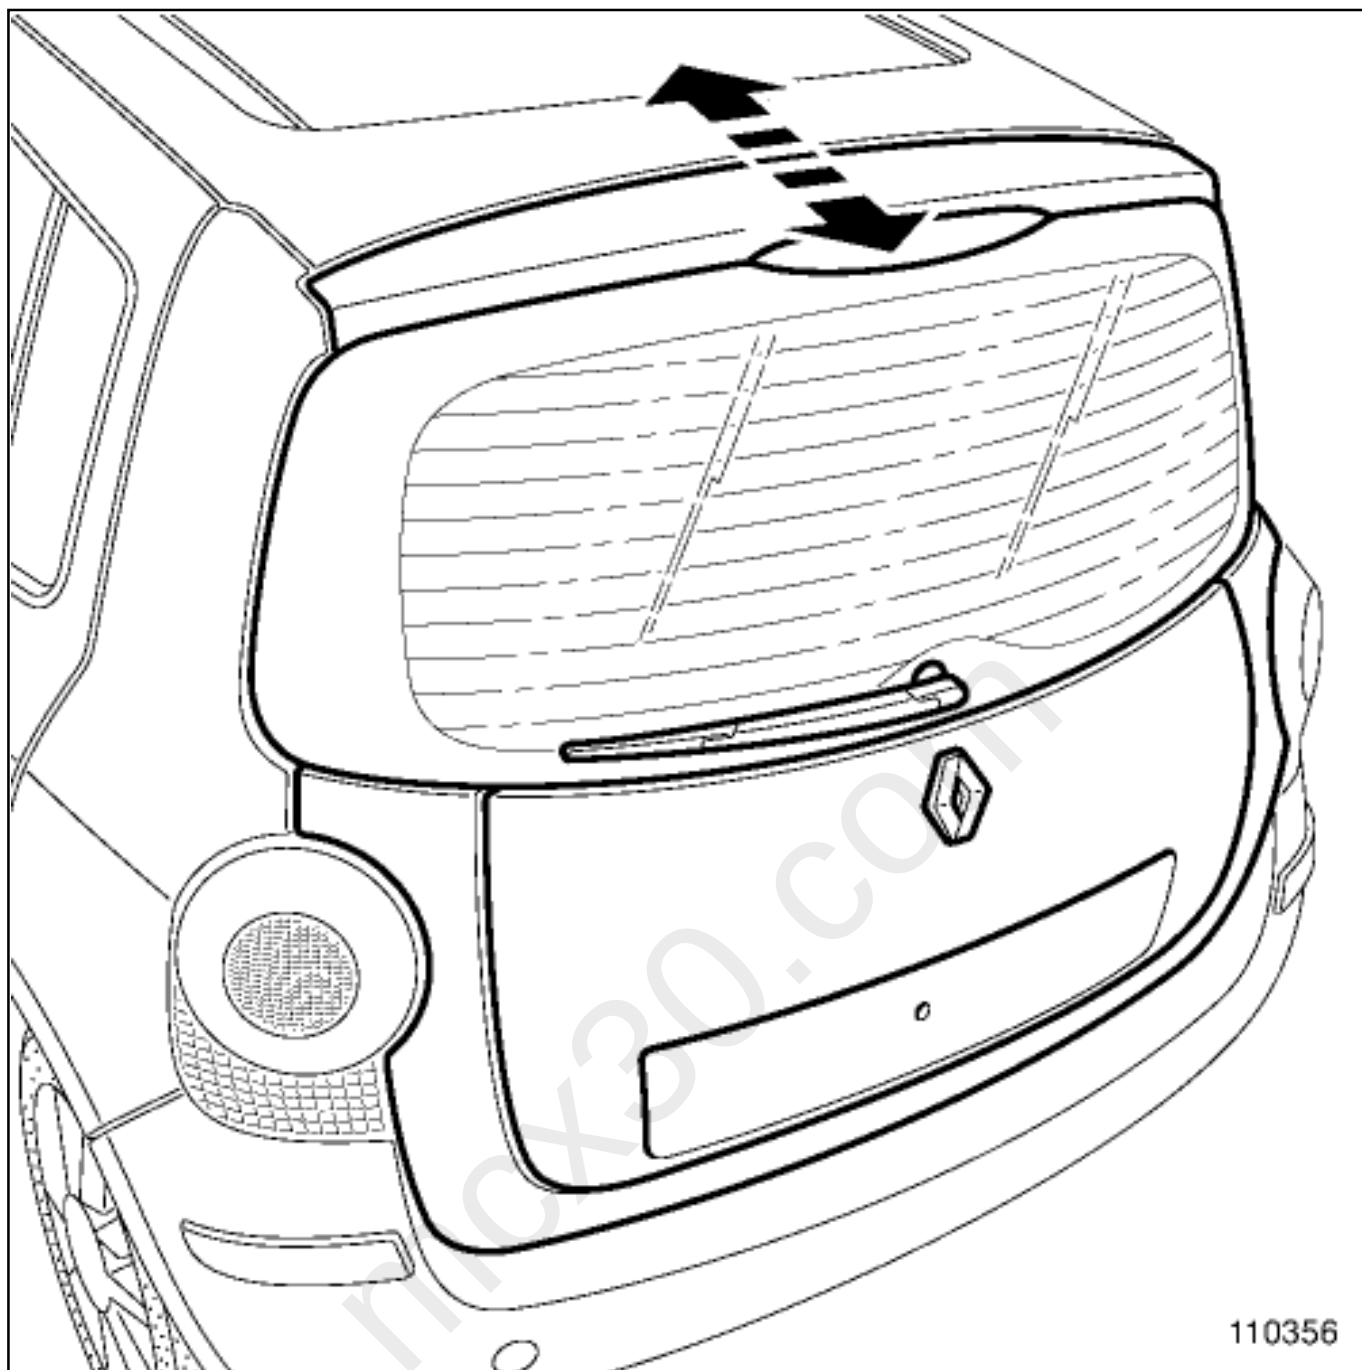

Adjust the top flush fitting between the tailgate and roof.

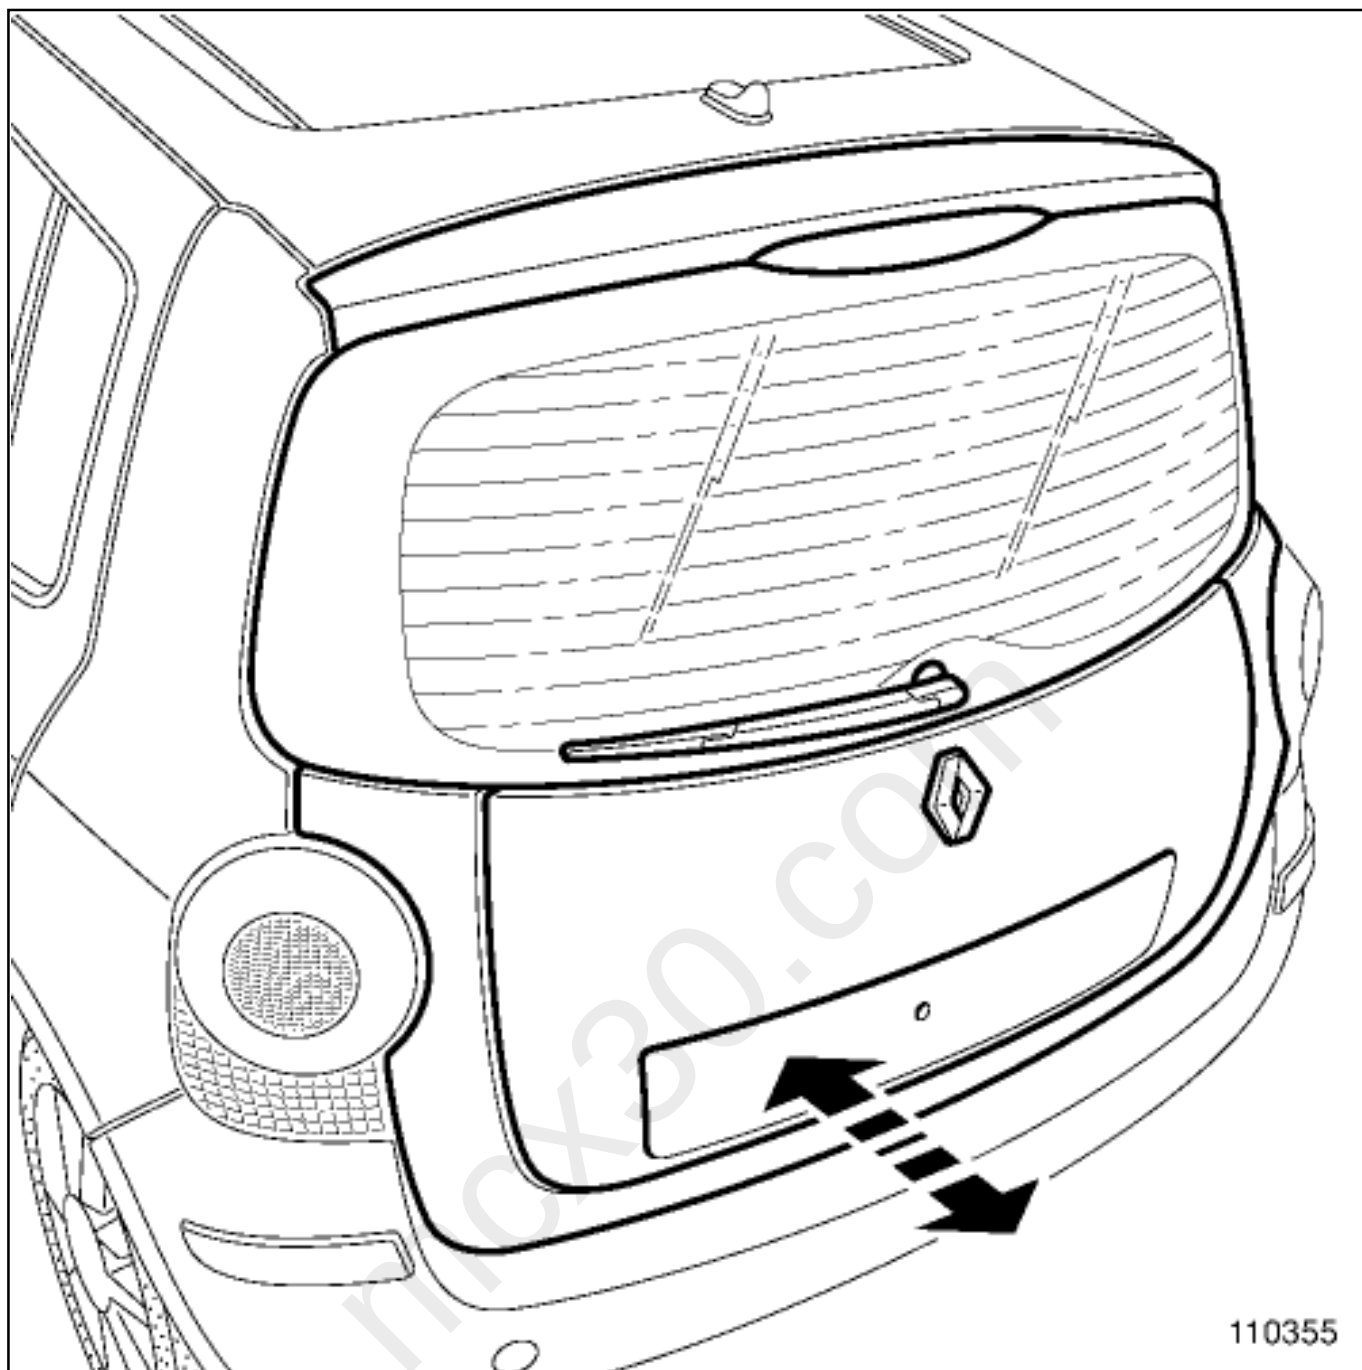

Adjust the flush fitting of the bottom of the tailgate, as well as the contact and the closure firmness.



Check the adjustment and the correct operation then tighten into position.

3. BOOT LID

Check that the peripheral components are adjusted correctly.

Refit all of the heavy fittings of the tailgate.

Release the striker panel and fit the tailgate, pre-tightening in the middle of the adjustments.




Note:


For information about the adjustment zones, refer to the MR for the vehicle concerned.

1- ADJUSTMENT CHRONOLOGY


mcx30.com

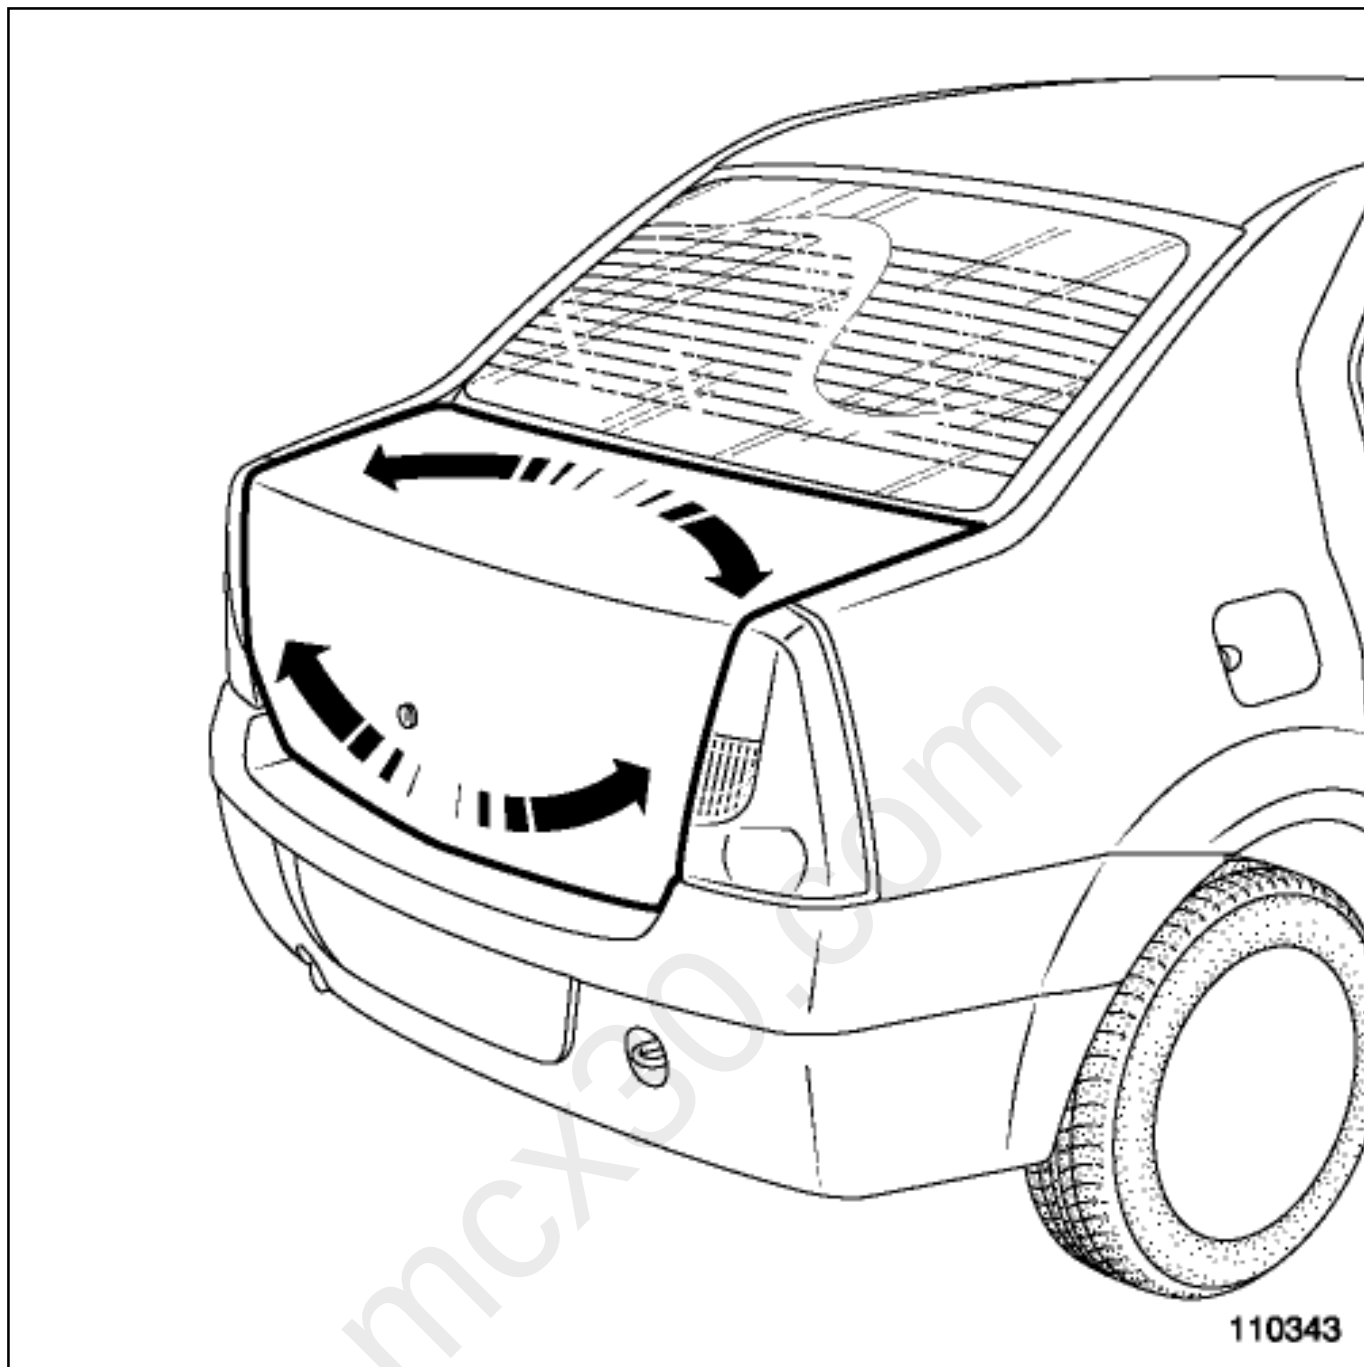


Centre the boot lid.

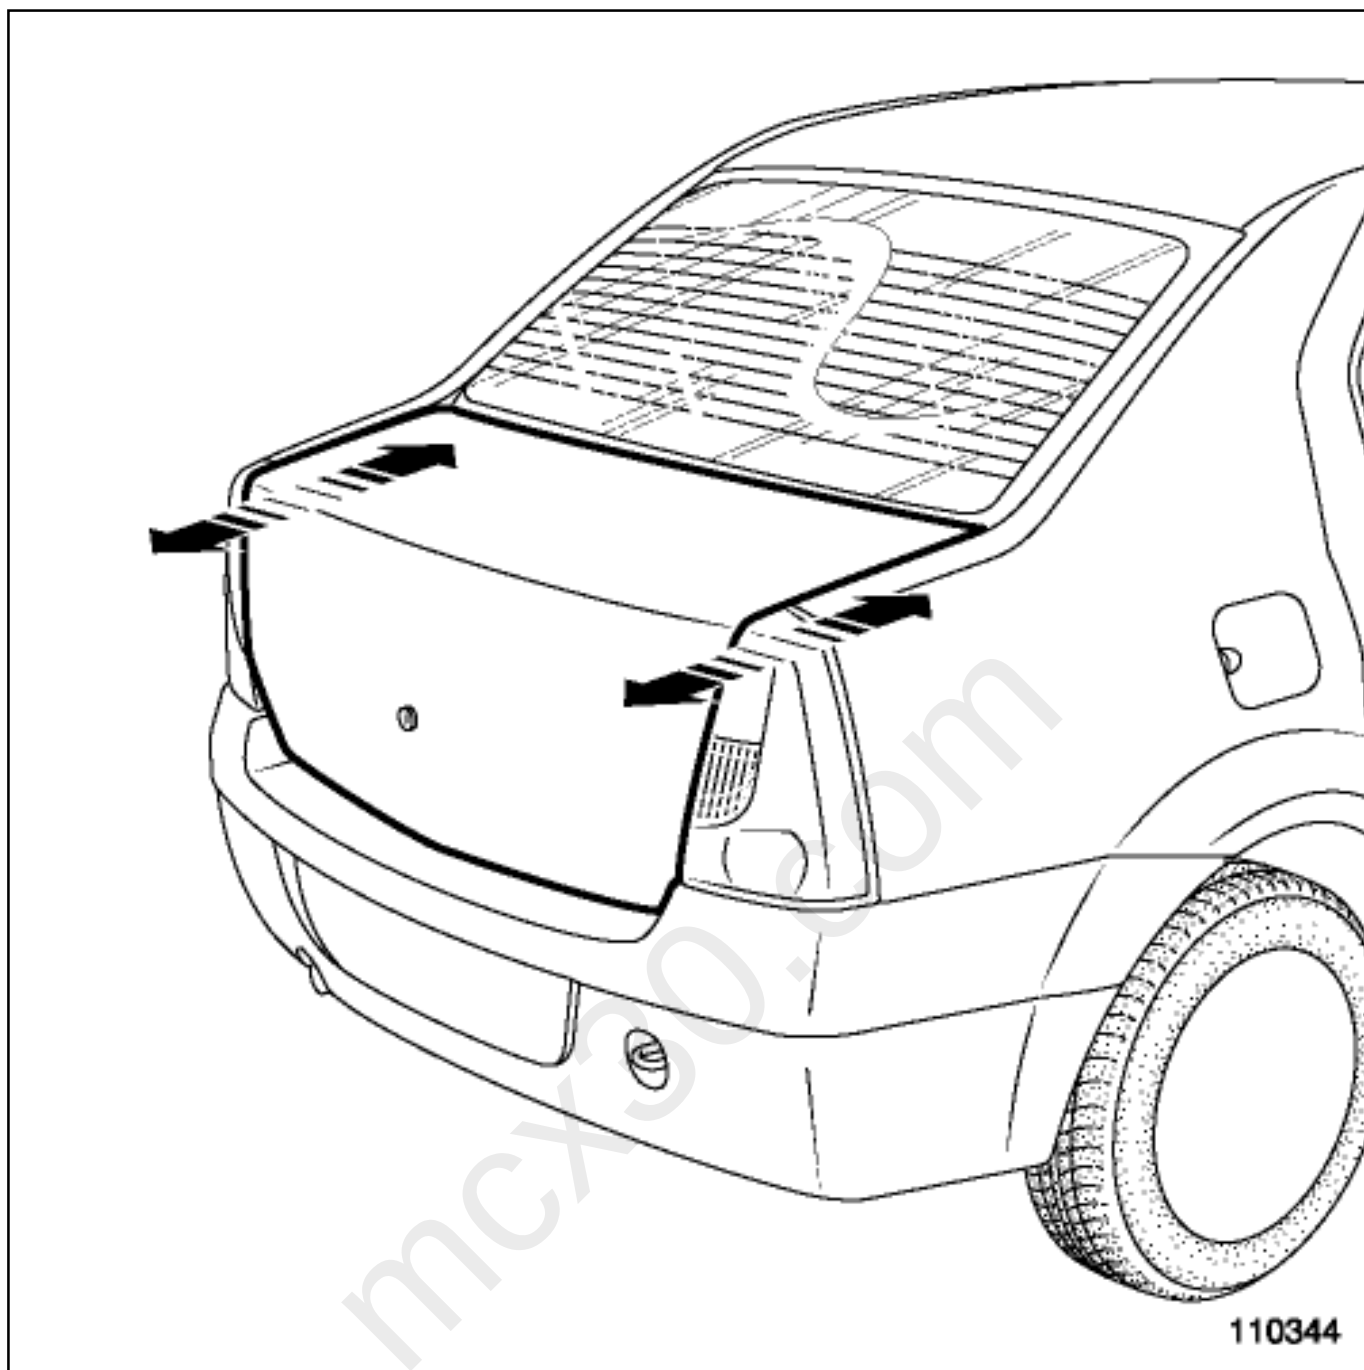


Adjust the longitudinal alignment of the boot lid.

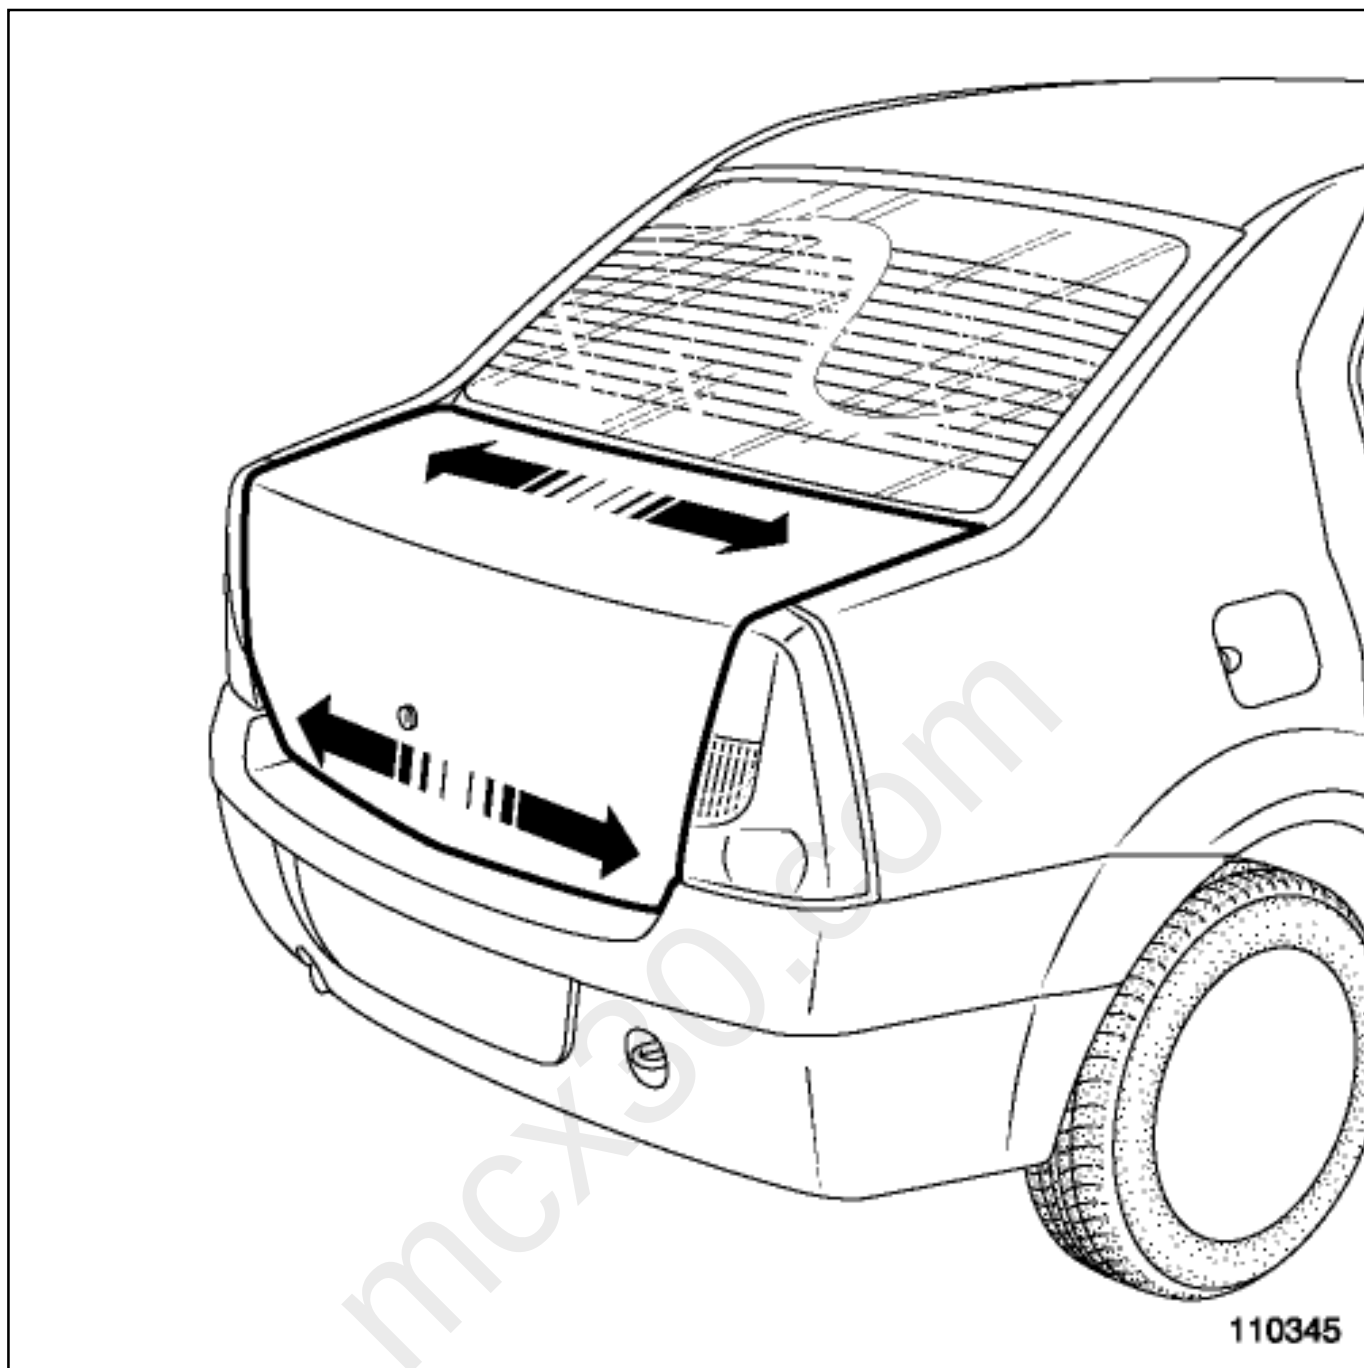

Adjust the side alignment of the boot lid.

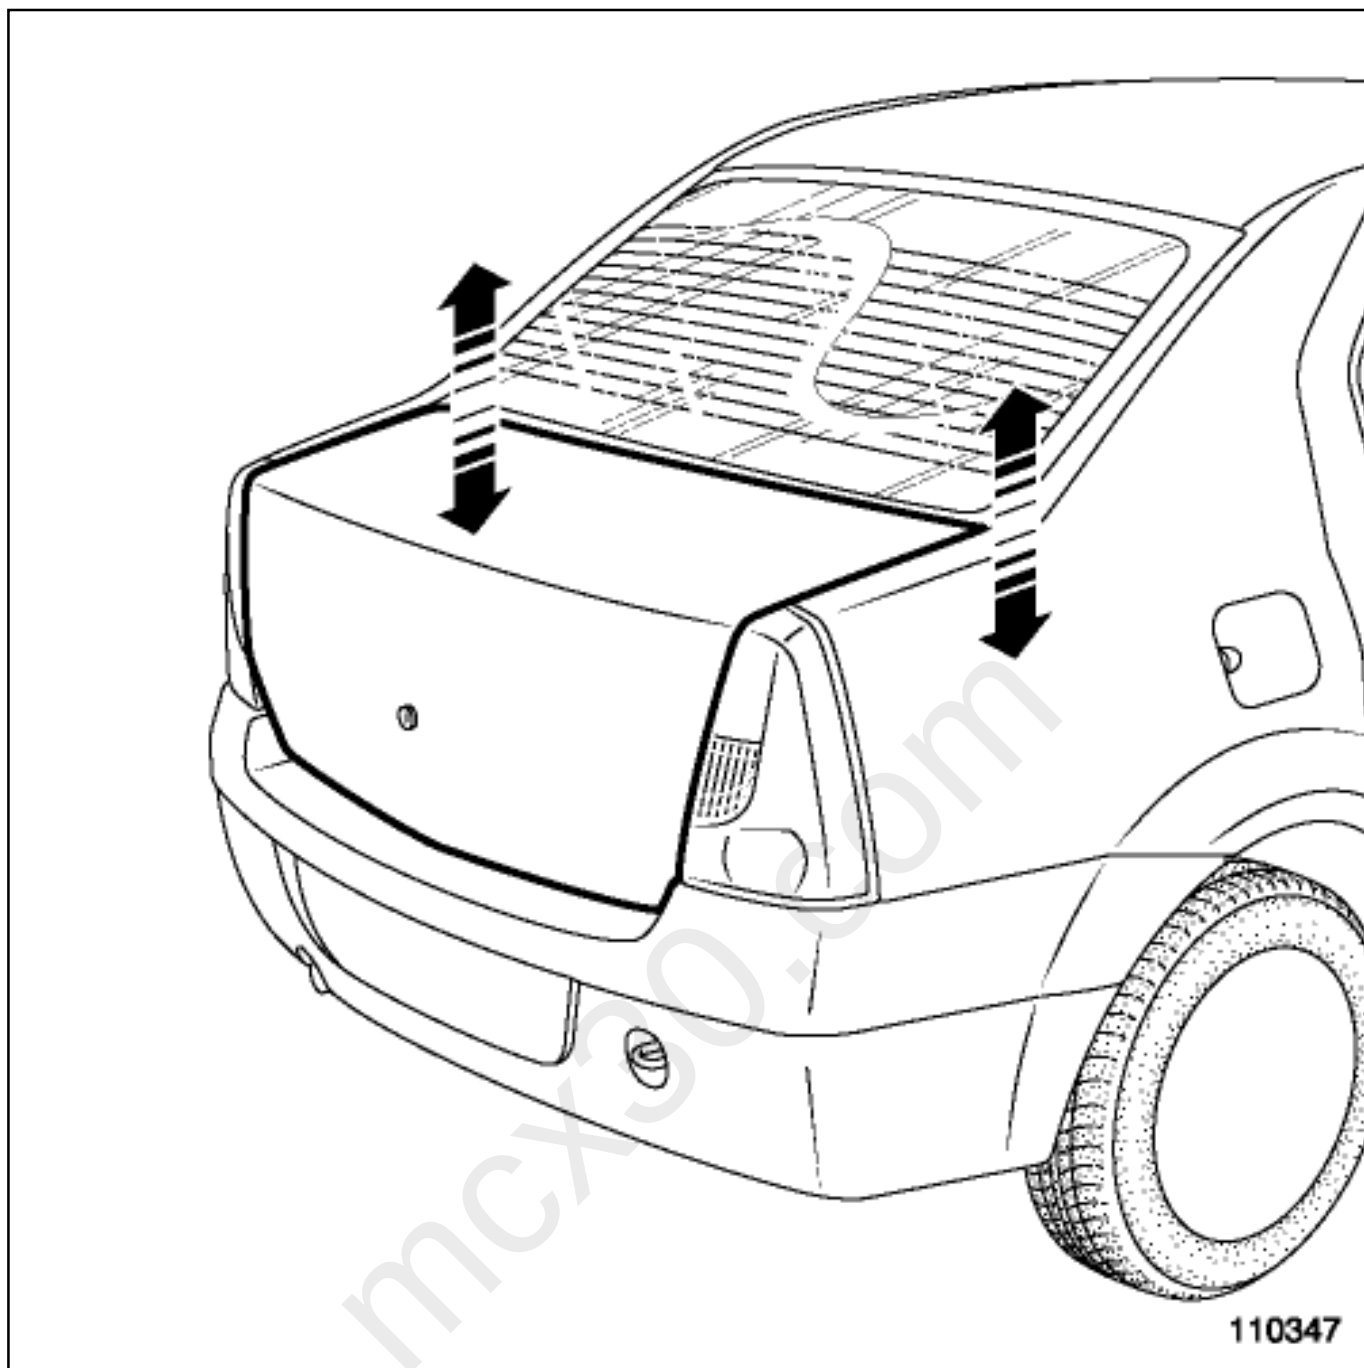

Adjust the rear flush fitting of the boot lid.

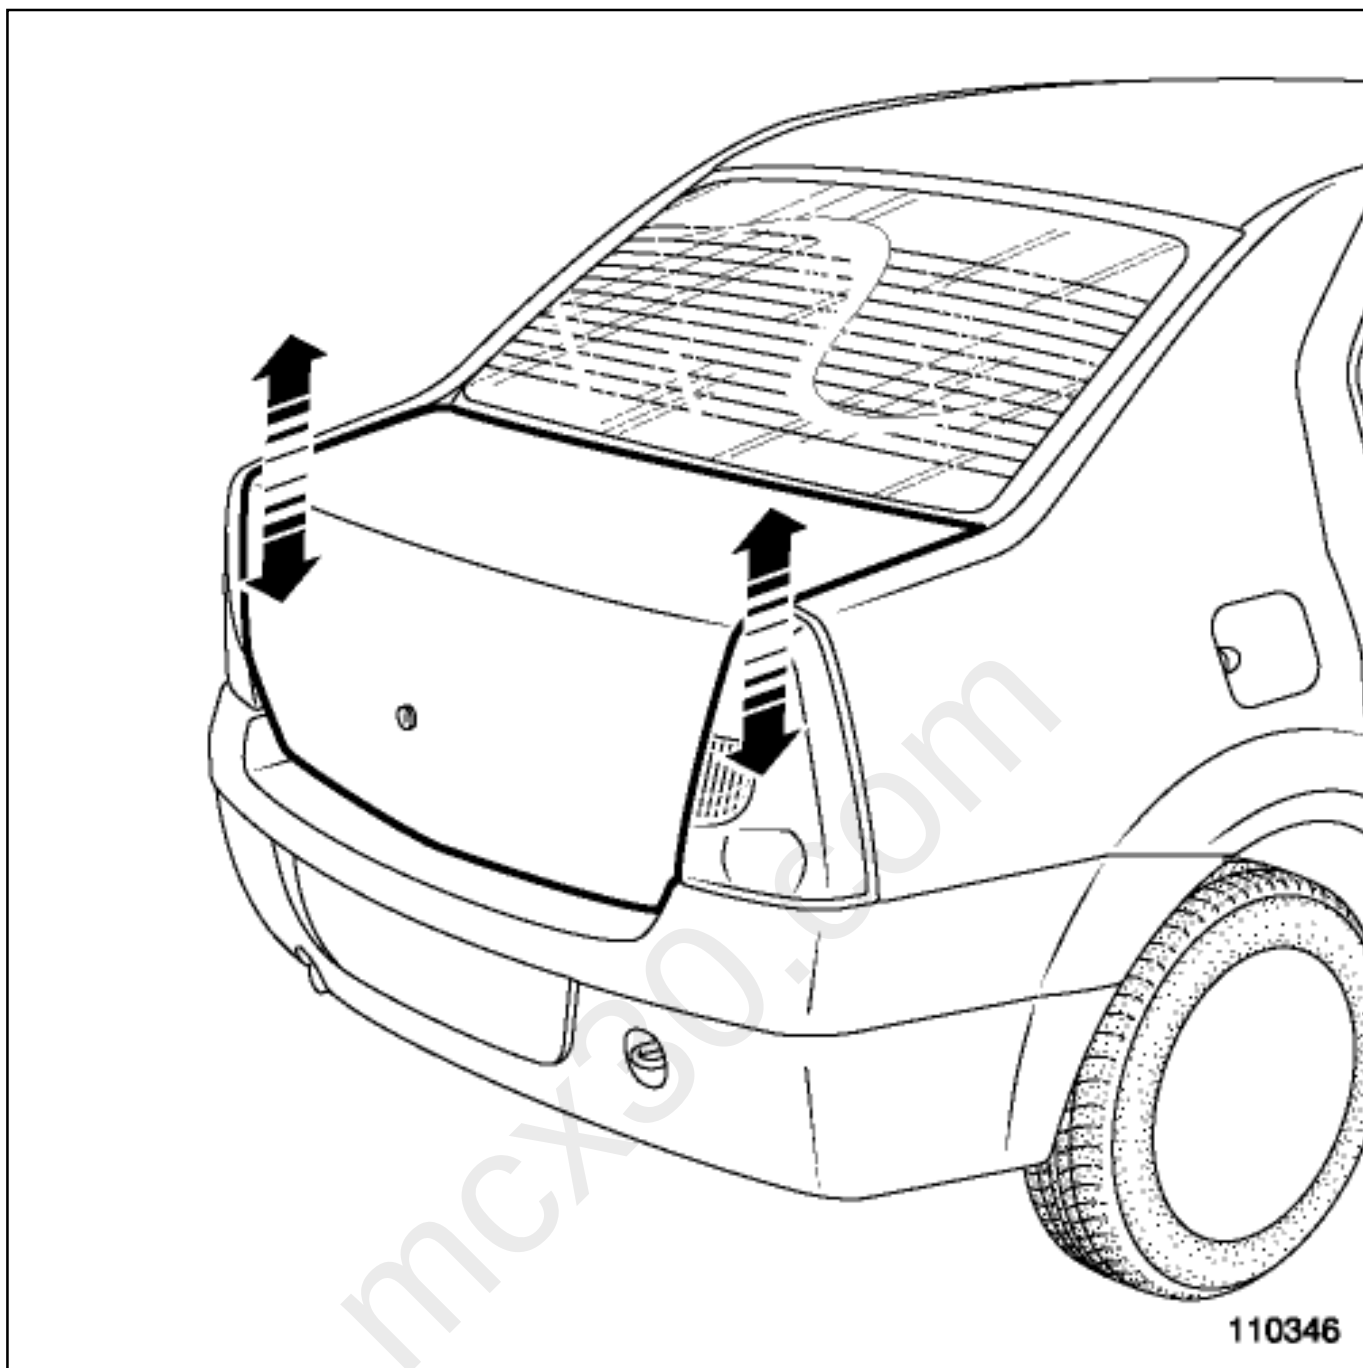

Adjust the rear flush fitting of the boot lid, as well as the contact and the closure firmness.

Check the adjustment and the correct operation then tighten into position.

4. REAR LOADING DOOR

Check that the peripheral components are adjusted correctly.

the adjustment can be carried out on both doors simultaneously, if the vehicle is equipped with two doors.

Refit all of the heavy door fittings.


Before carrying out the adjustments, release the striker panel and fit the door, pretightening in the middle of the adjustment.




Note:

For information about the adjustment zones, refer to the MR for the vehicle concerned.


1- ADJUSTMENT CHRONOLOGY

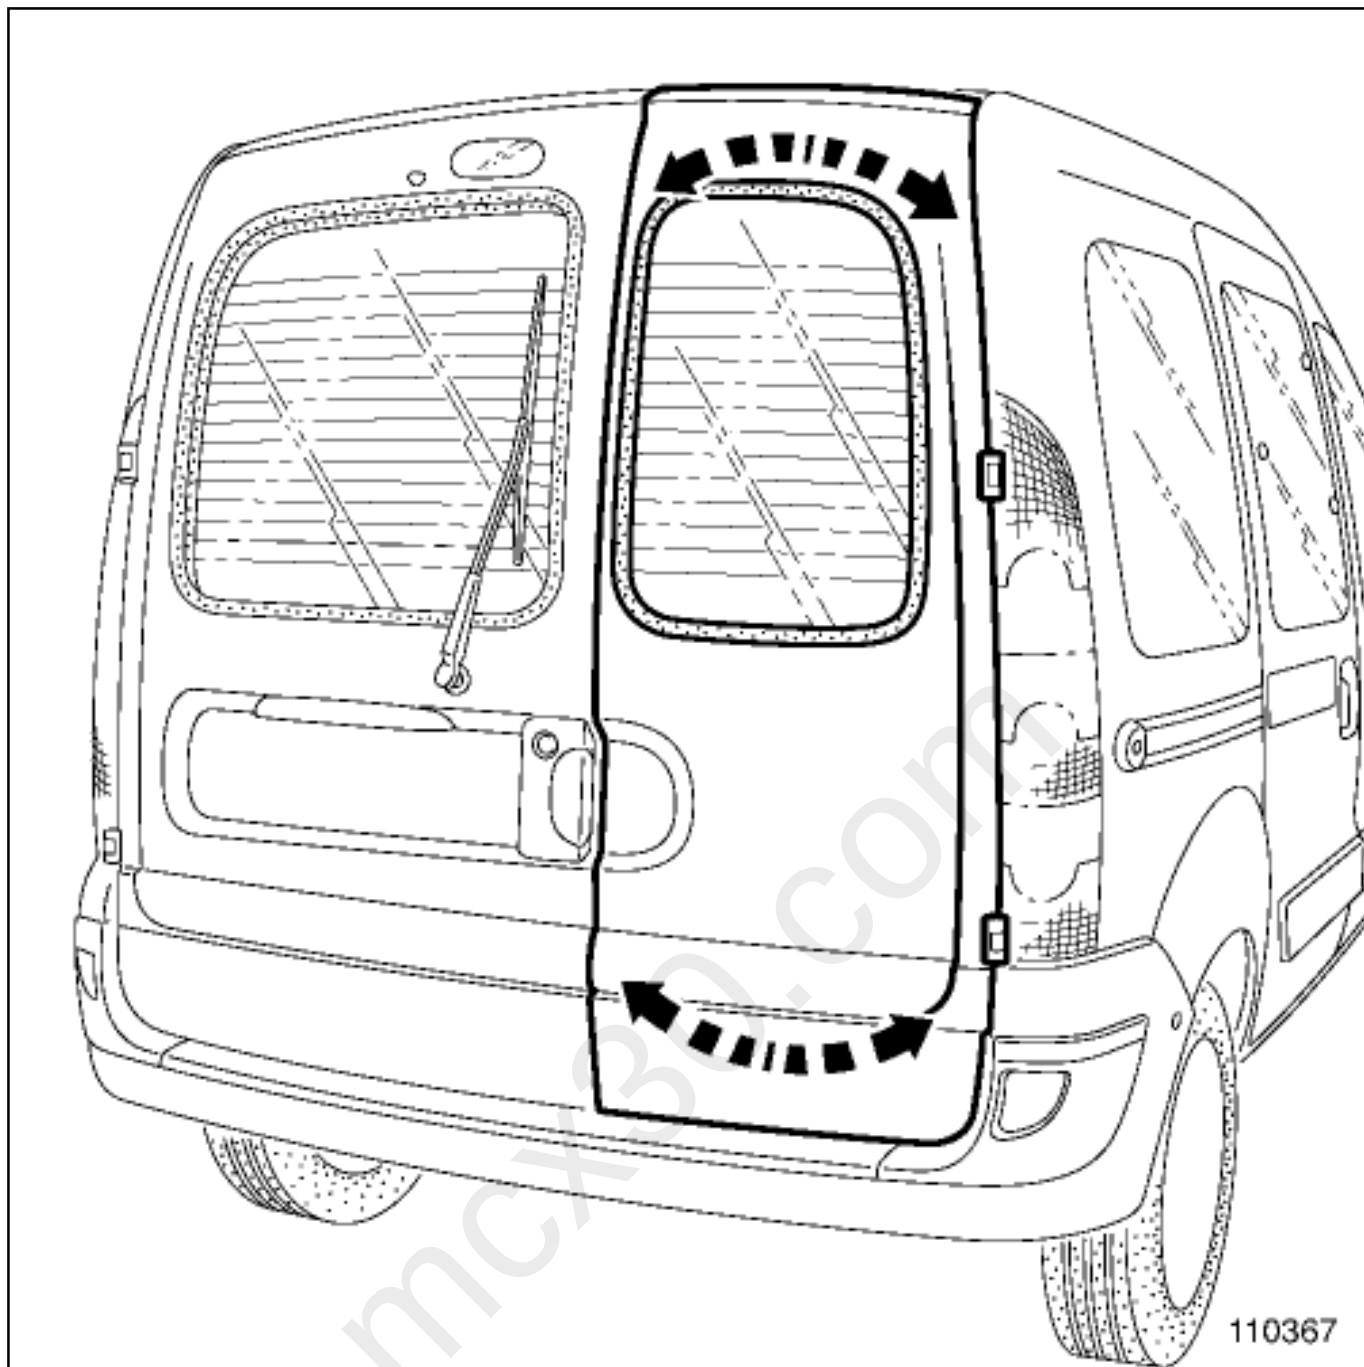

Adjust the centring of the door with the lock on the floor.

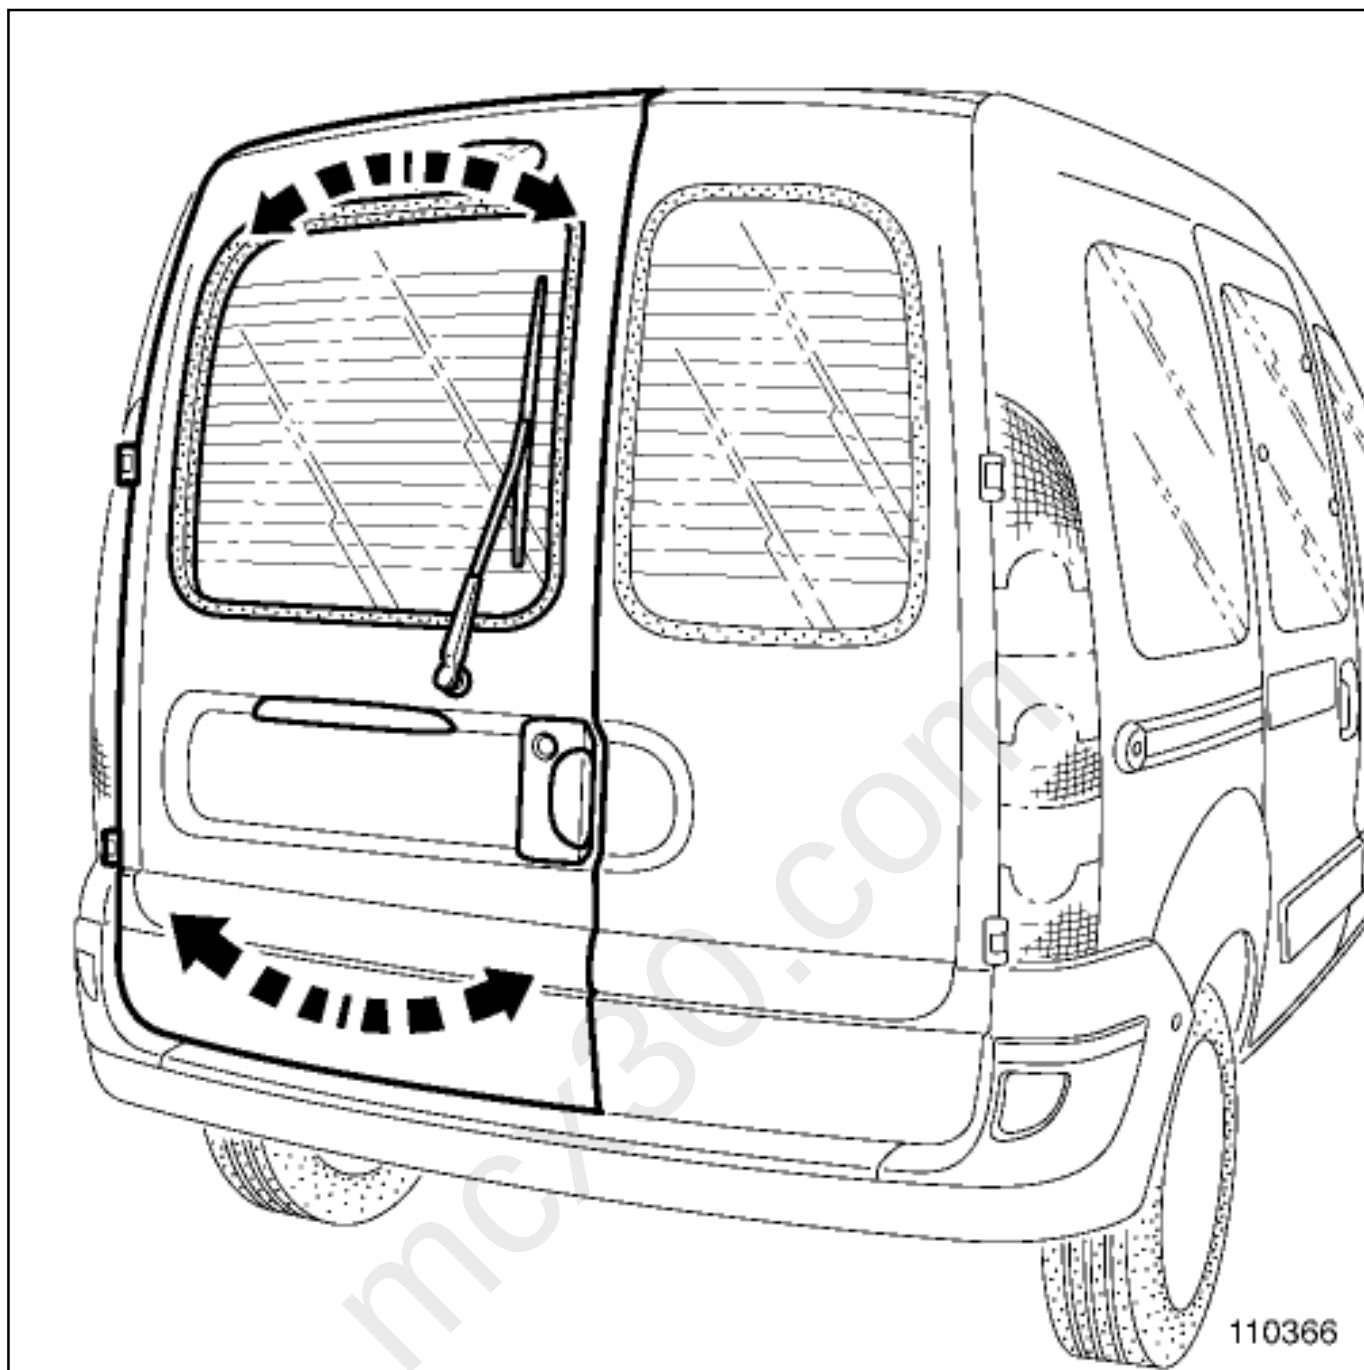


Adjust the centring of the door without the lock on the floor.

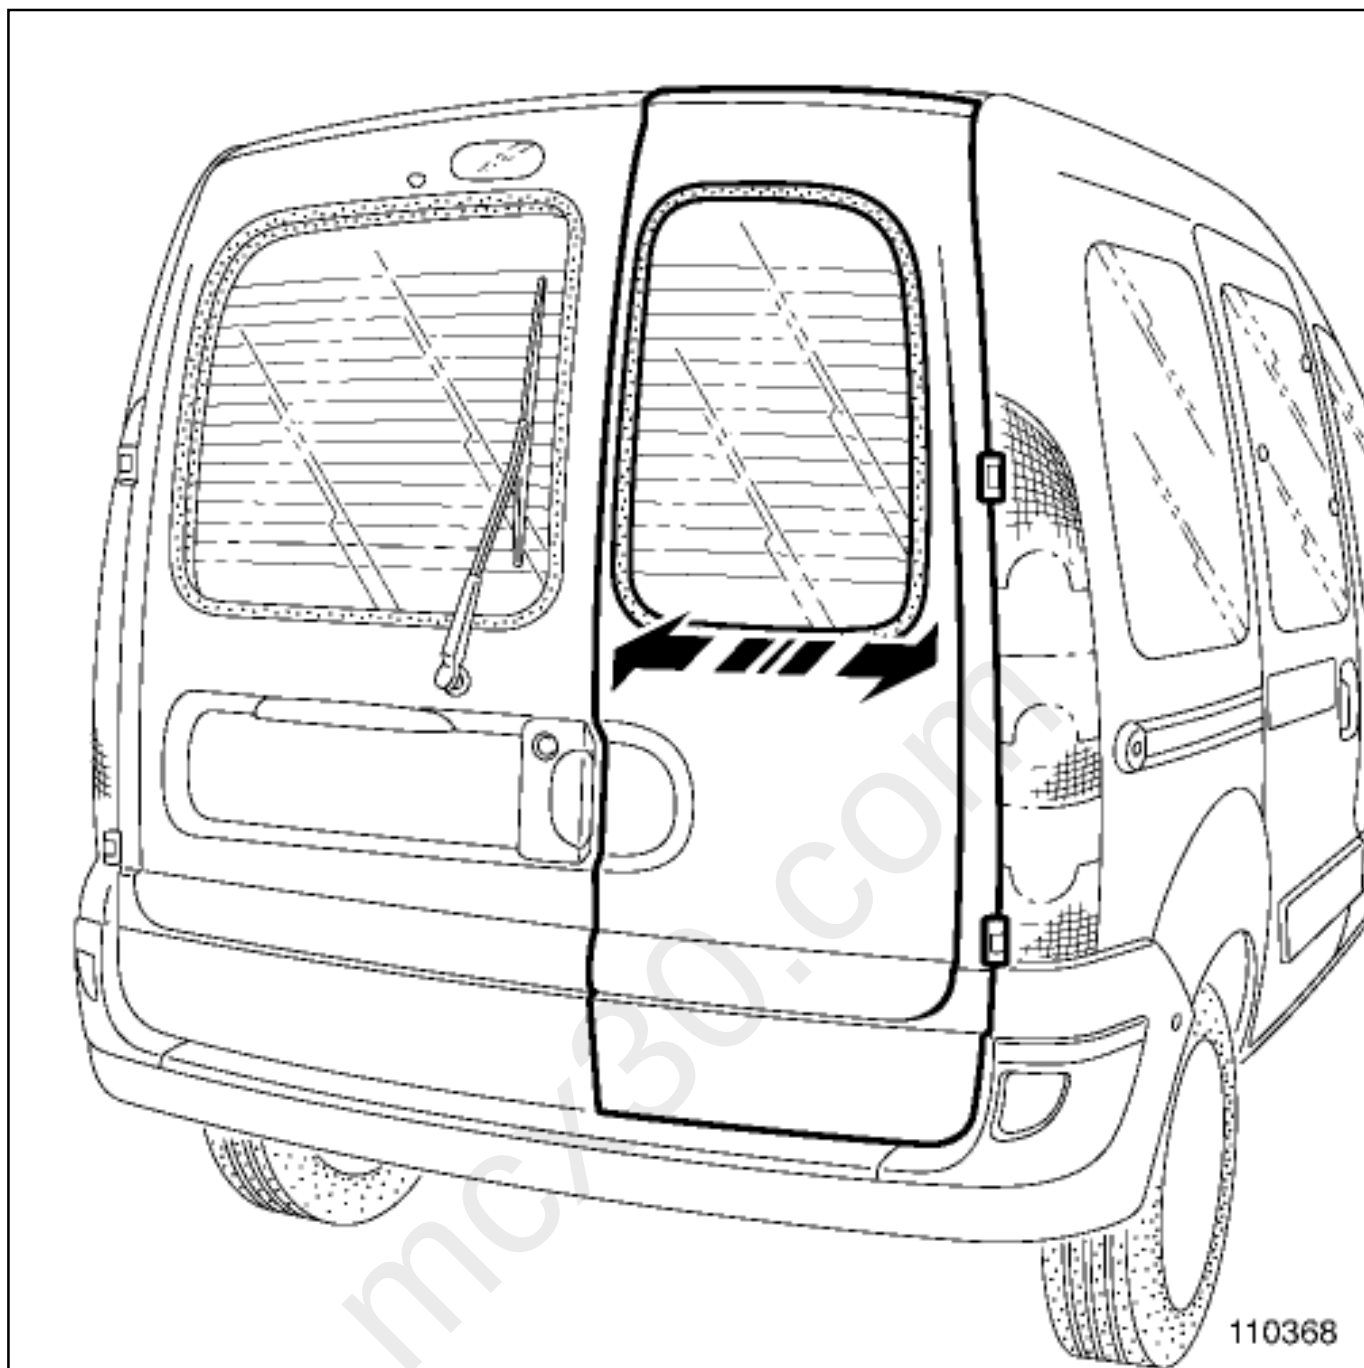


Adjust the side alignment of the door with the lock on the floor.




Adjust the side alignment of the door without the lock on the floor.

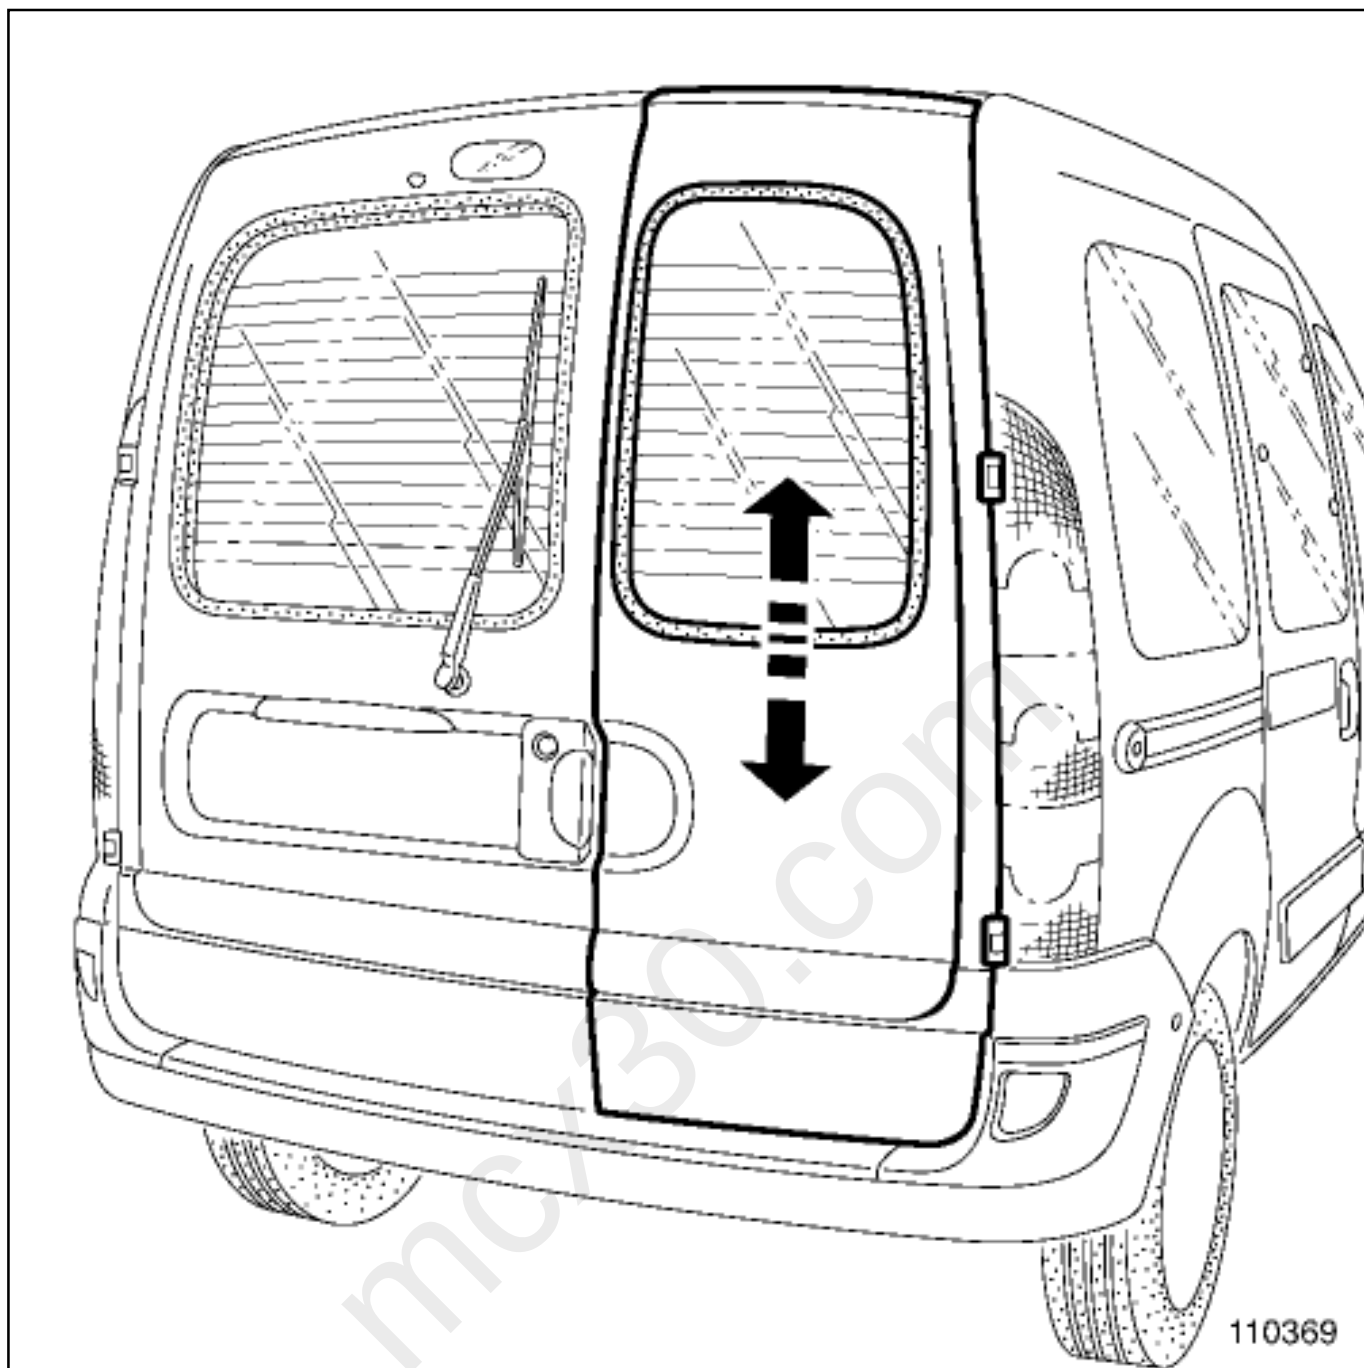


Adjust the vertical alignment of the door with the lock on the floor.

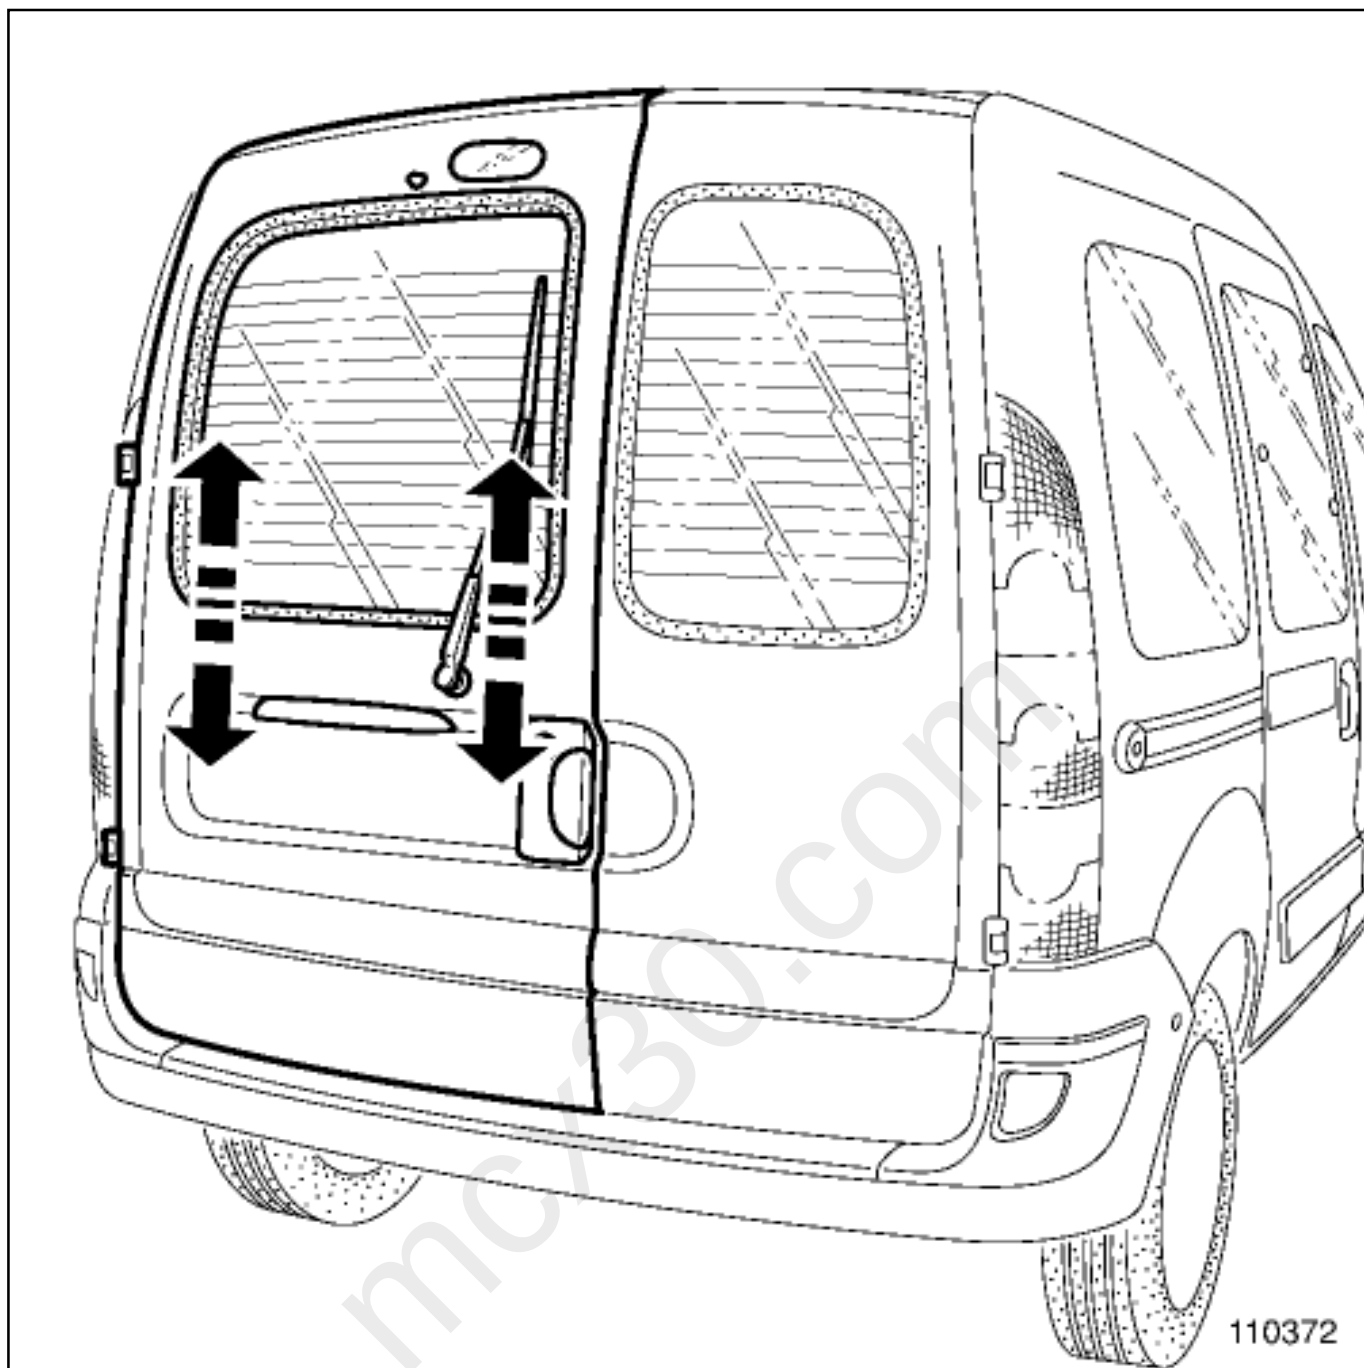


Adjust the vertical alignment of the door without the lock on the floor.

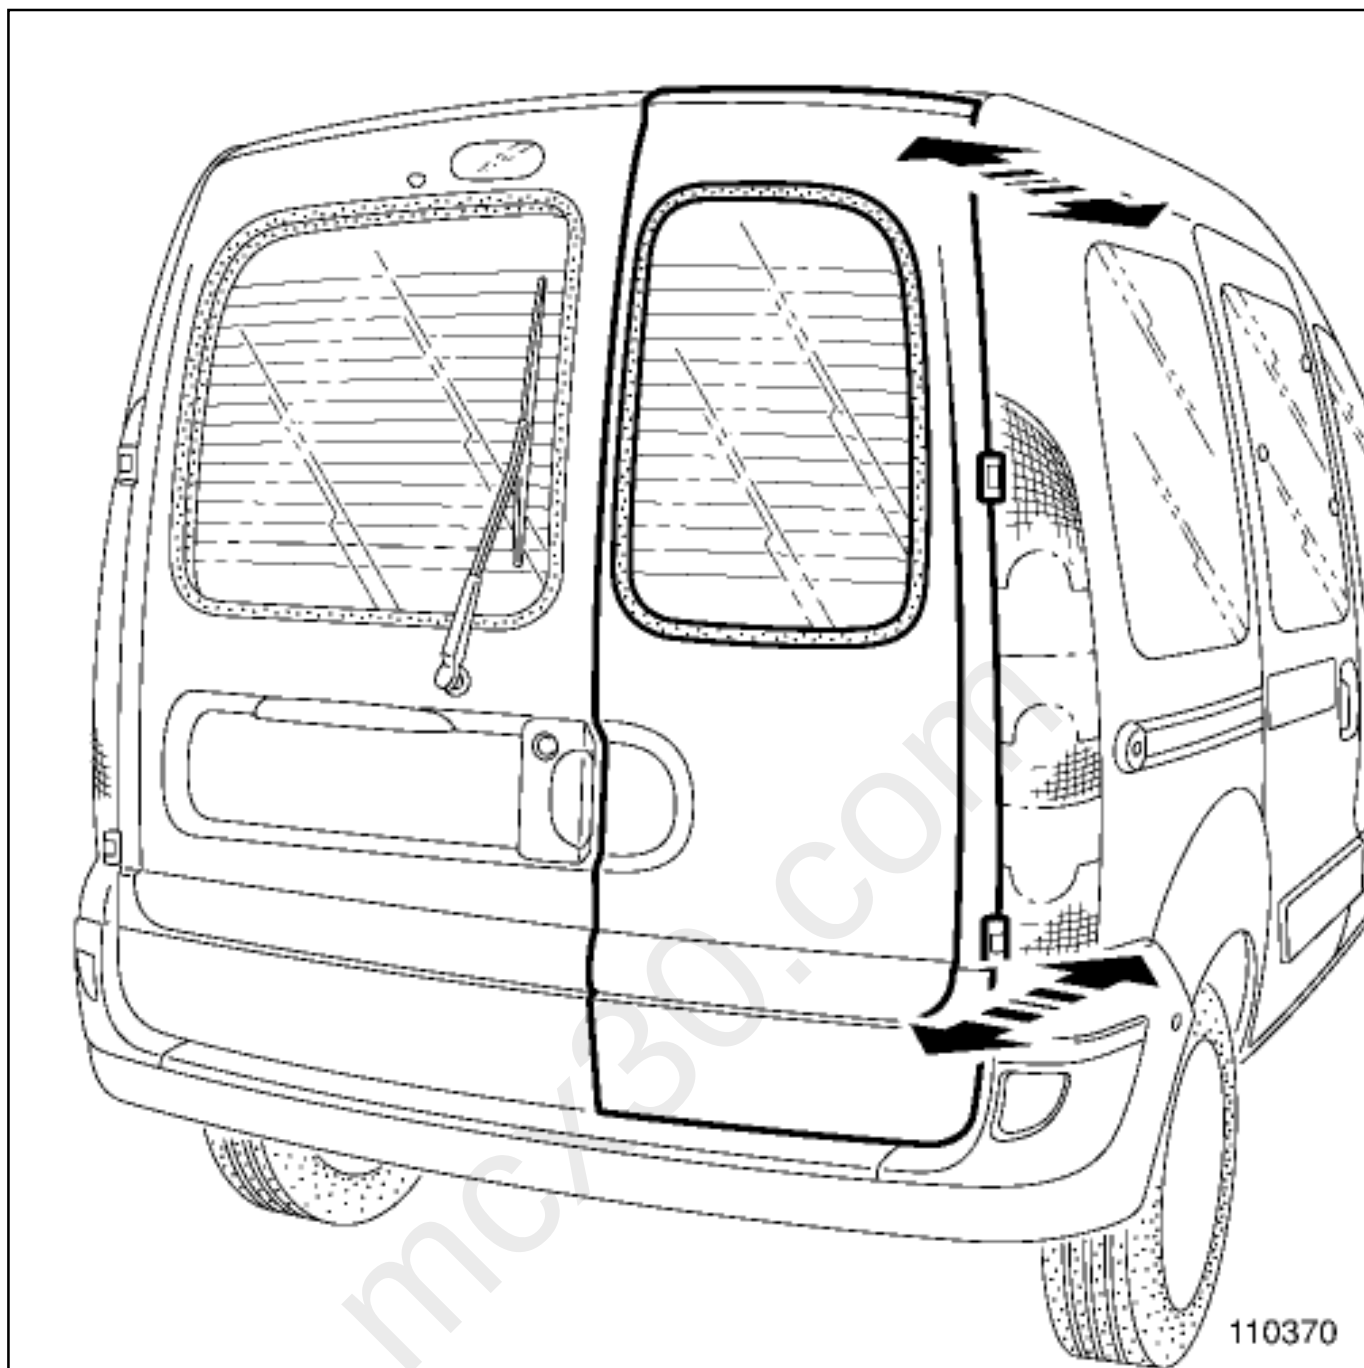


Adjust the flush fitting of the external section of the door with the lock on the floor.

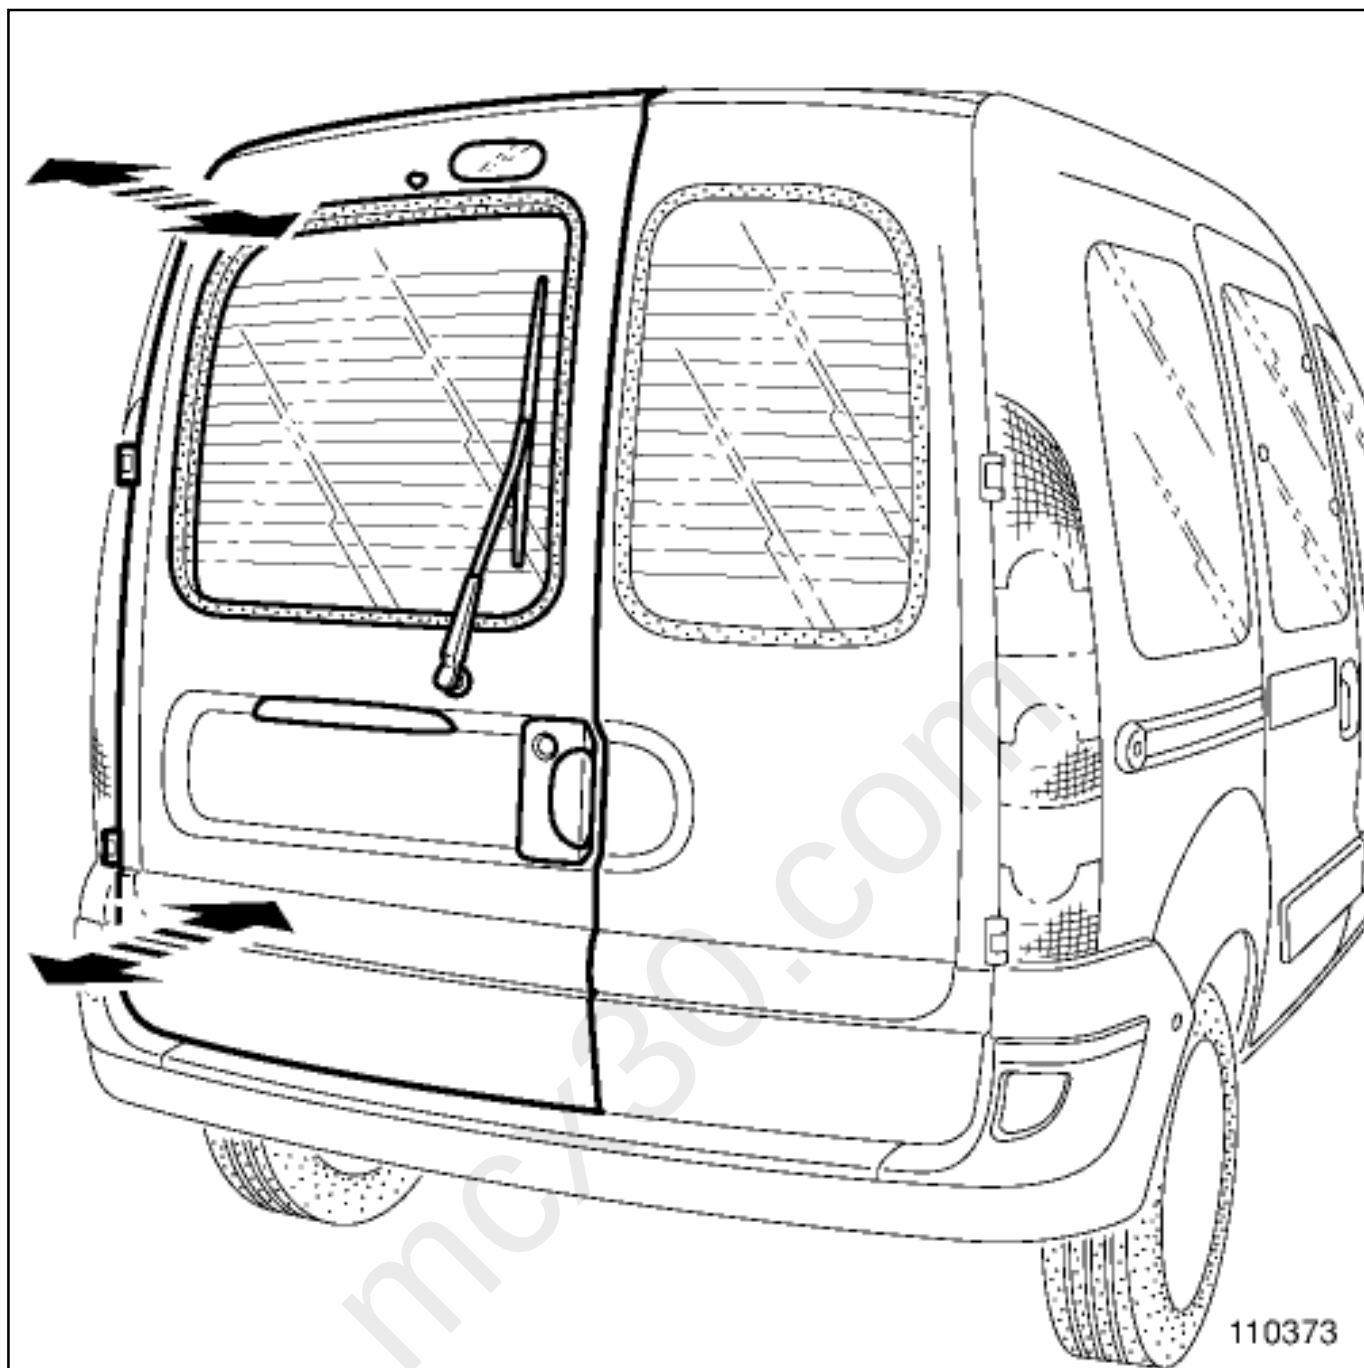

Adjust the flush fitting of the external section of the door without the lock on the floor.

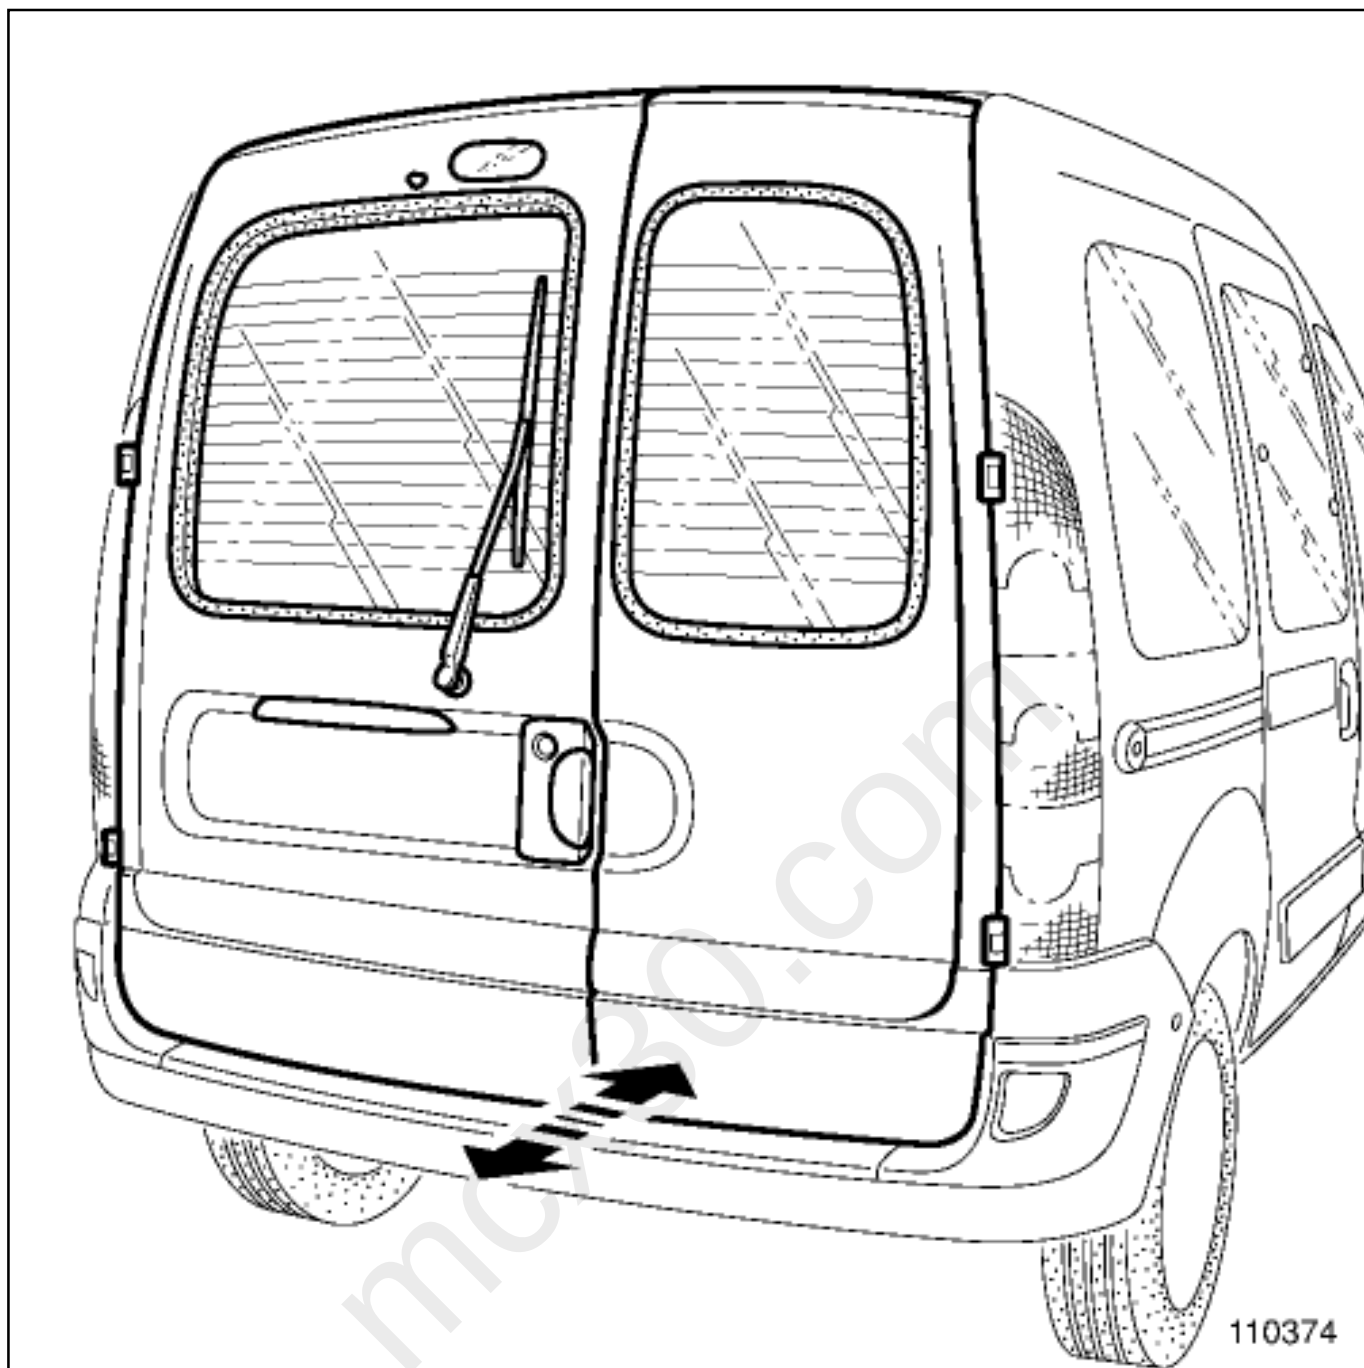

Adjust the flush fitting of the bottom central section of both doors.

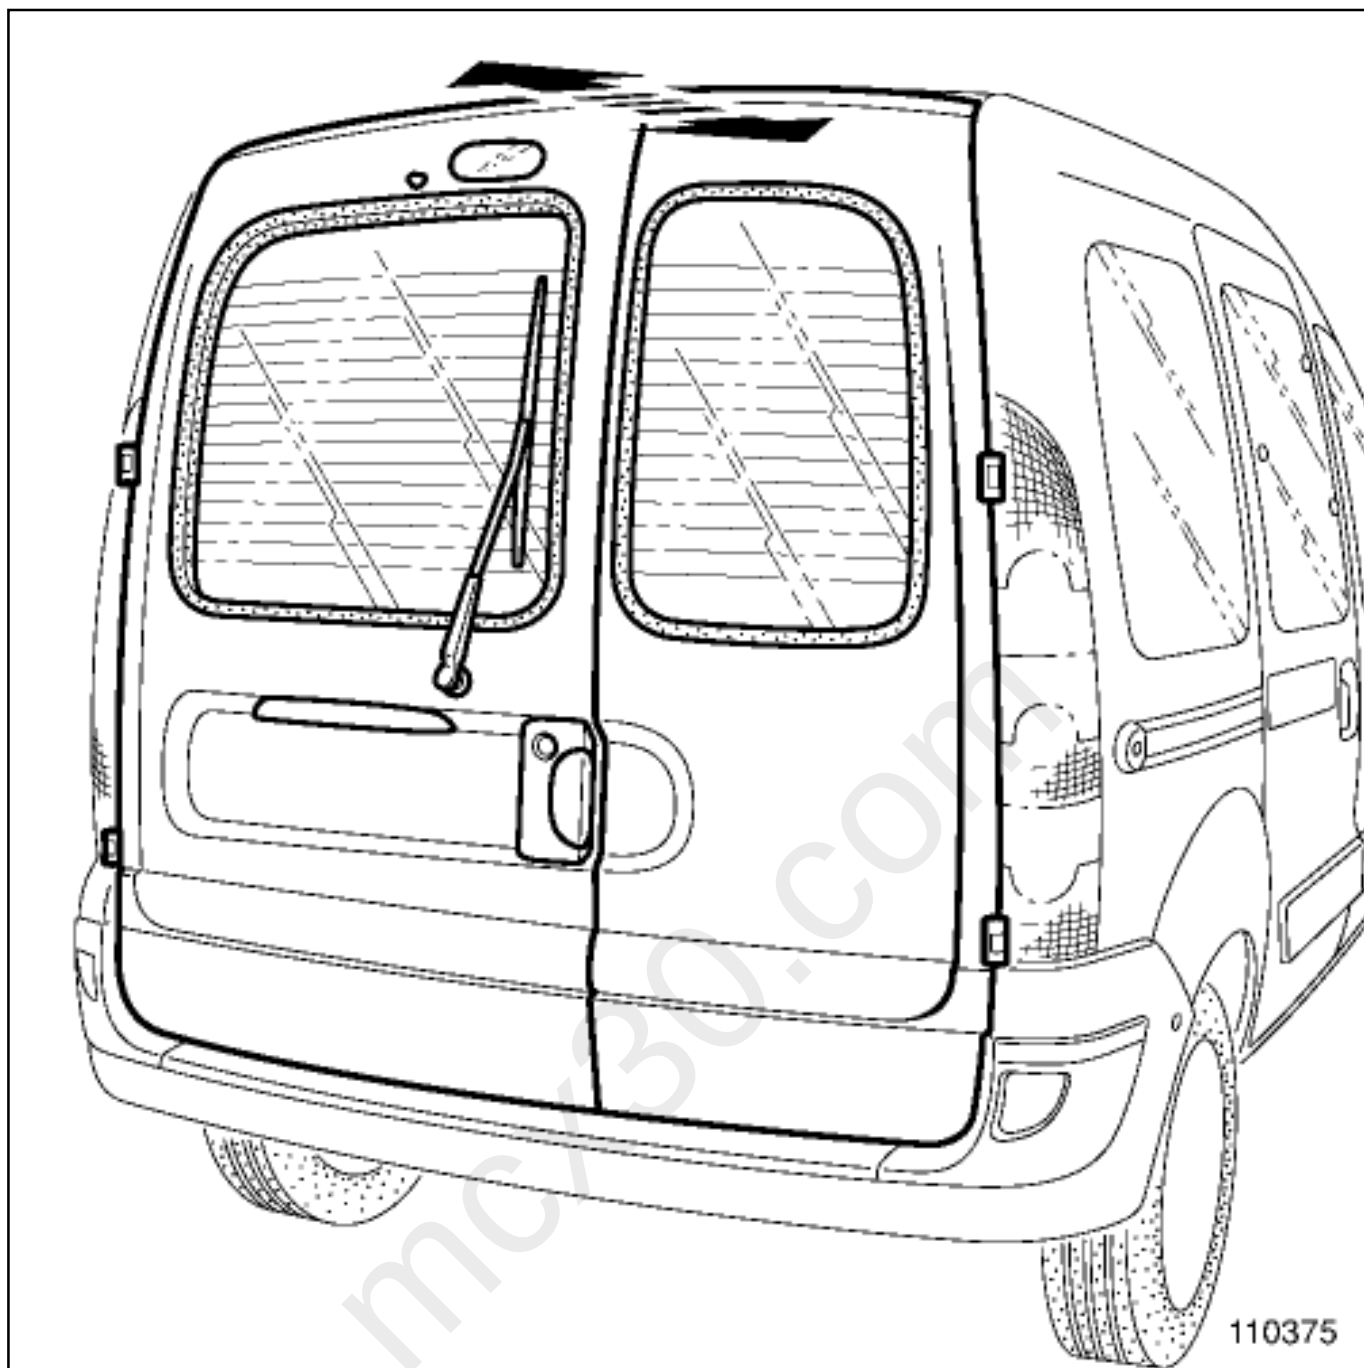

Adjust the flush fitting of the top central section of both doors.

Check the adjustment and the correct operation then tighten into position.

