

mcx30.com

OIL LEVEL SENSOR: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts to always be replaced etc.)[\(see 10A, Engine and cylinder block assembly, Engine oil circuit assembly: Exploded view\)](#) .

REMOVAL


1. REMOVAL PREPARATION OPERATION

■ Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .

■ Remove:

- the engine undertray bolts,
- the engine undertray.

2. REMOVAL OPERATION

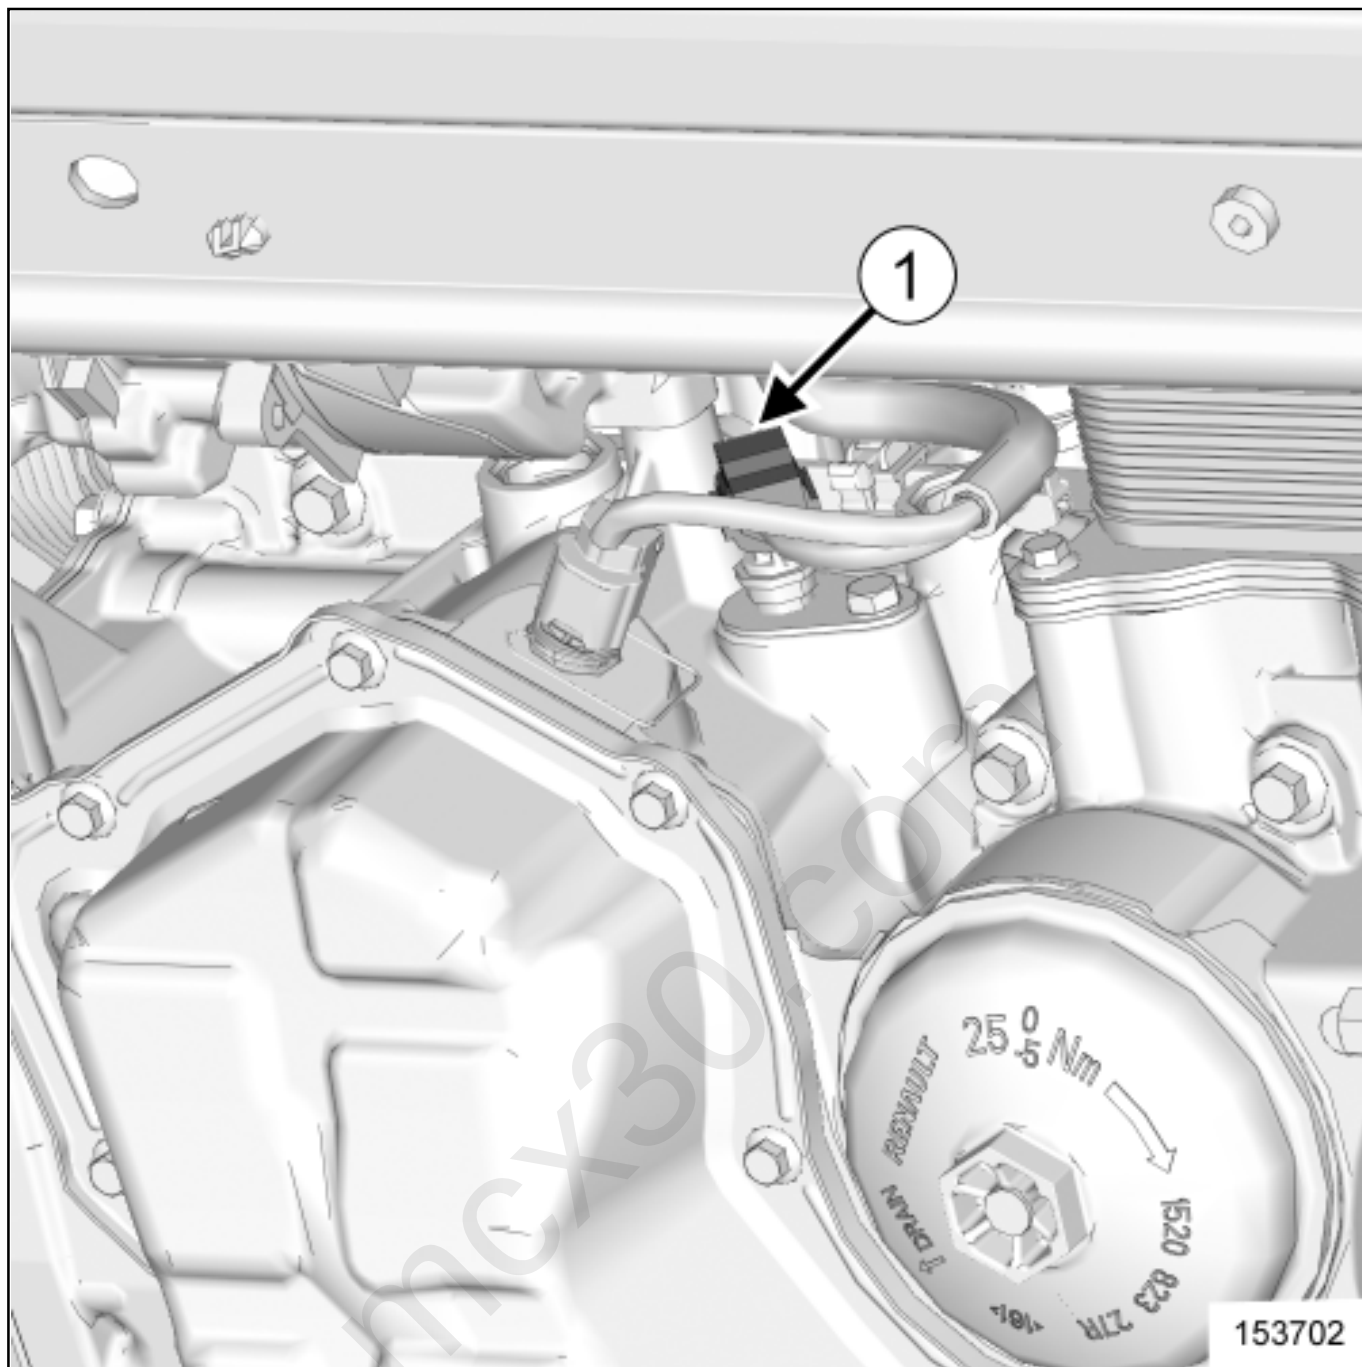

Disconnect the oil level sensor connector(1) .

Remove [\(see 10A, Engine and cylinder block assembly, Engine oil circuit assembly: Exploded view\)](#) :

- the oil level sensor bolt,

- the oil level sensor.