

Start the vehicle and check that there are no oil leaks from the oil pressure sensor.



Repair-10x05x05x07-01x58-1-53-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

OIL PRESSURE SENSOR: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts always to be replaced, etc.)(see **Engine and transmission assembly sensors: List and location of components**) .

REMOVAL

1. REMOVAL PREPARATION OPERATION



Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .



Disconnect the battery(see **Battery: Removal - Refitting**) .



Remove:




the engine undertray bolts

the engine undertray,

the intercooler air outlet pipe([see 12A, Fuel mixture, Air inlet assembly: Exploded view](#)) ,

2. REMOVAL OPERATION

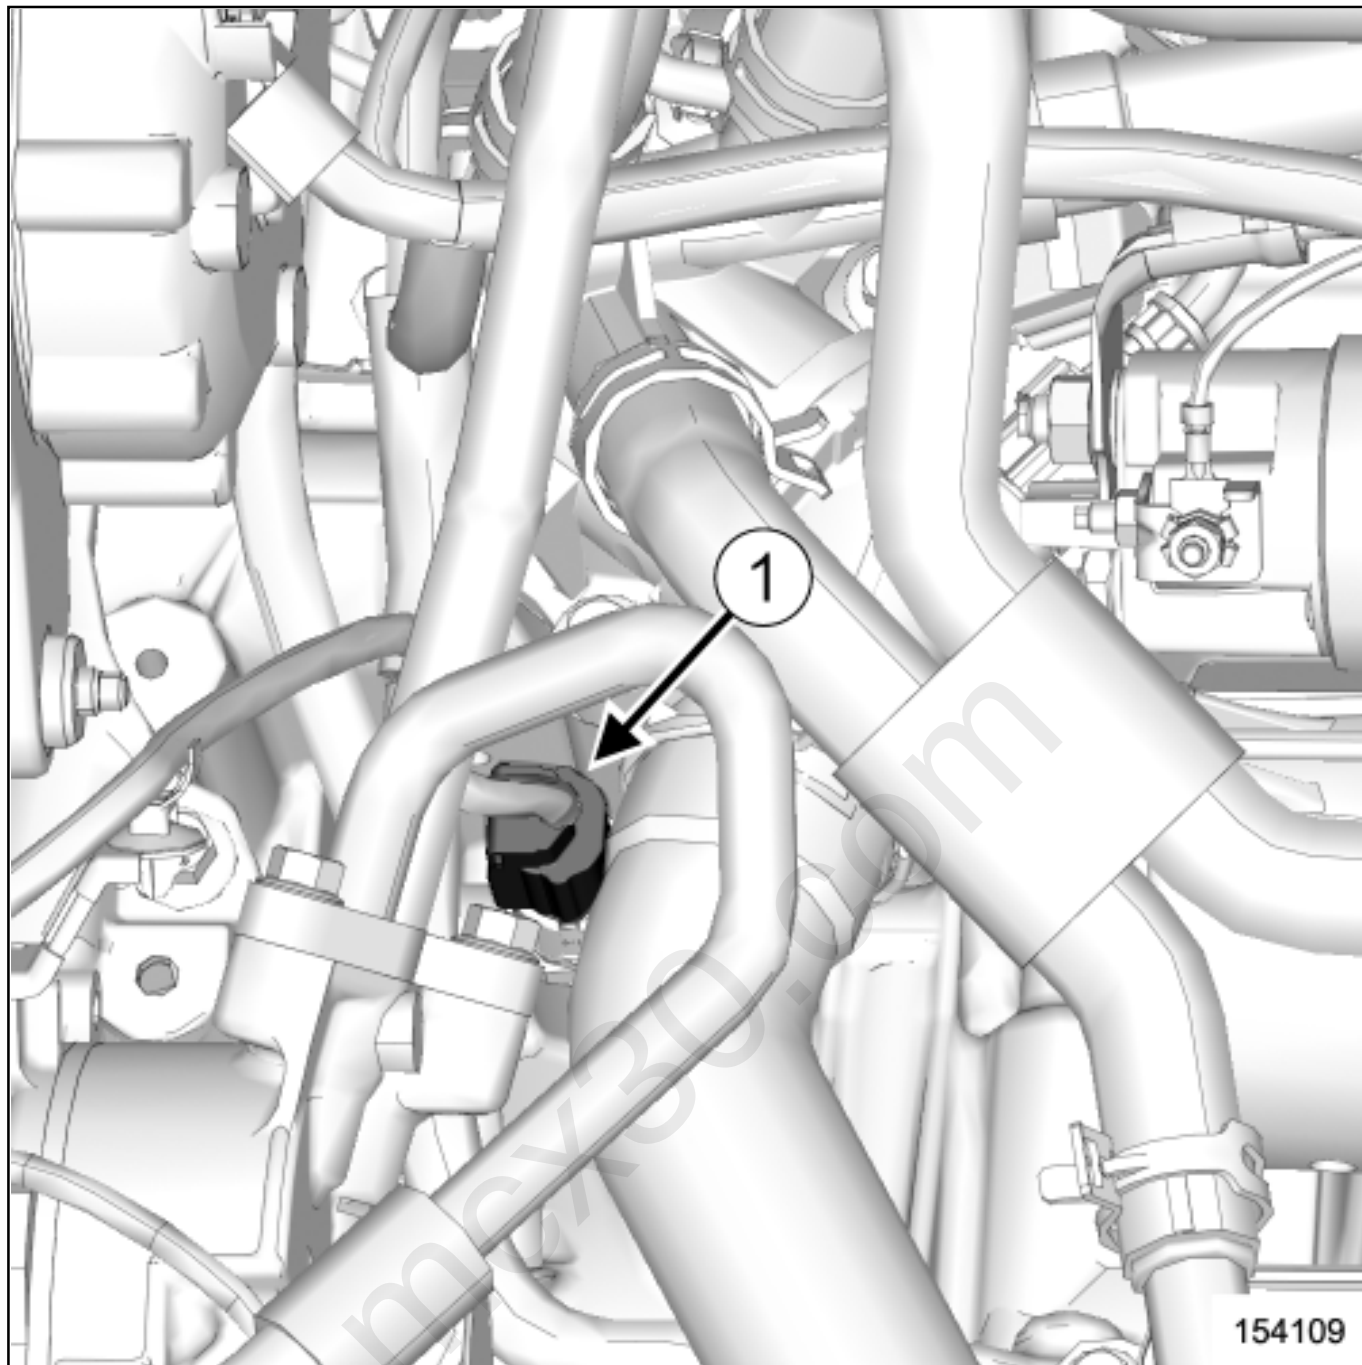

Disconnect the connector(1) from the oil pressure sensor.

Remove the oil pressure sensor using a 22 mm long socket.

REFITTING

1. REFITTING PREPARATION OPERATION