

Proceed in the reverse order to removal.

Perform the following operations:


-
- top up the engine oil with oil recommended by the manufacturer(see **Petrol engine oils: Specifications**) ,
- top up the cooling system,
- bleed the cooling system [Cooling system: Draining - Refilling](#) .



Repair-10x05x05x02-01x37-1-79-1.xml



XSL version : 3.02 du 22/07/11

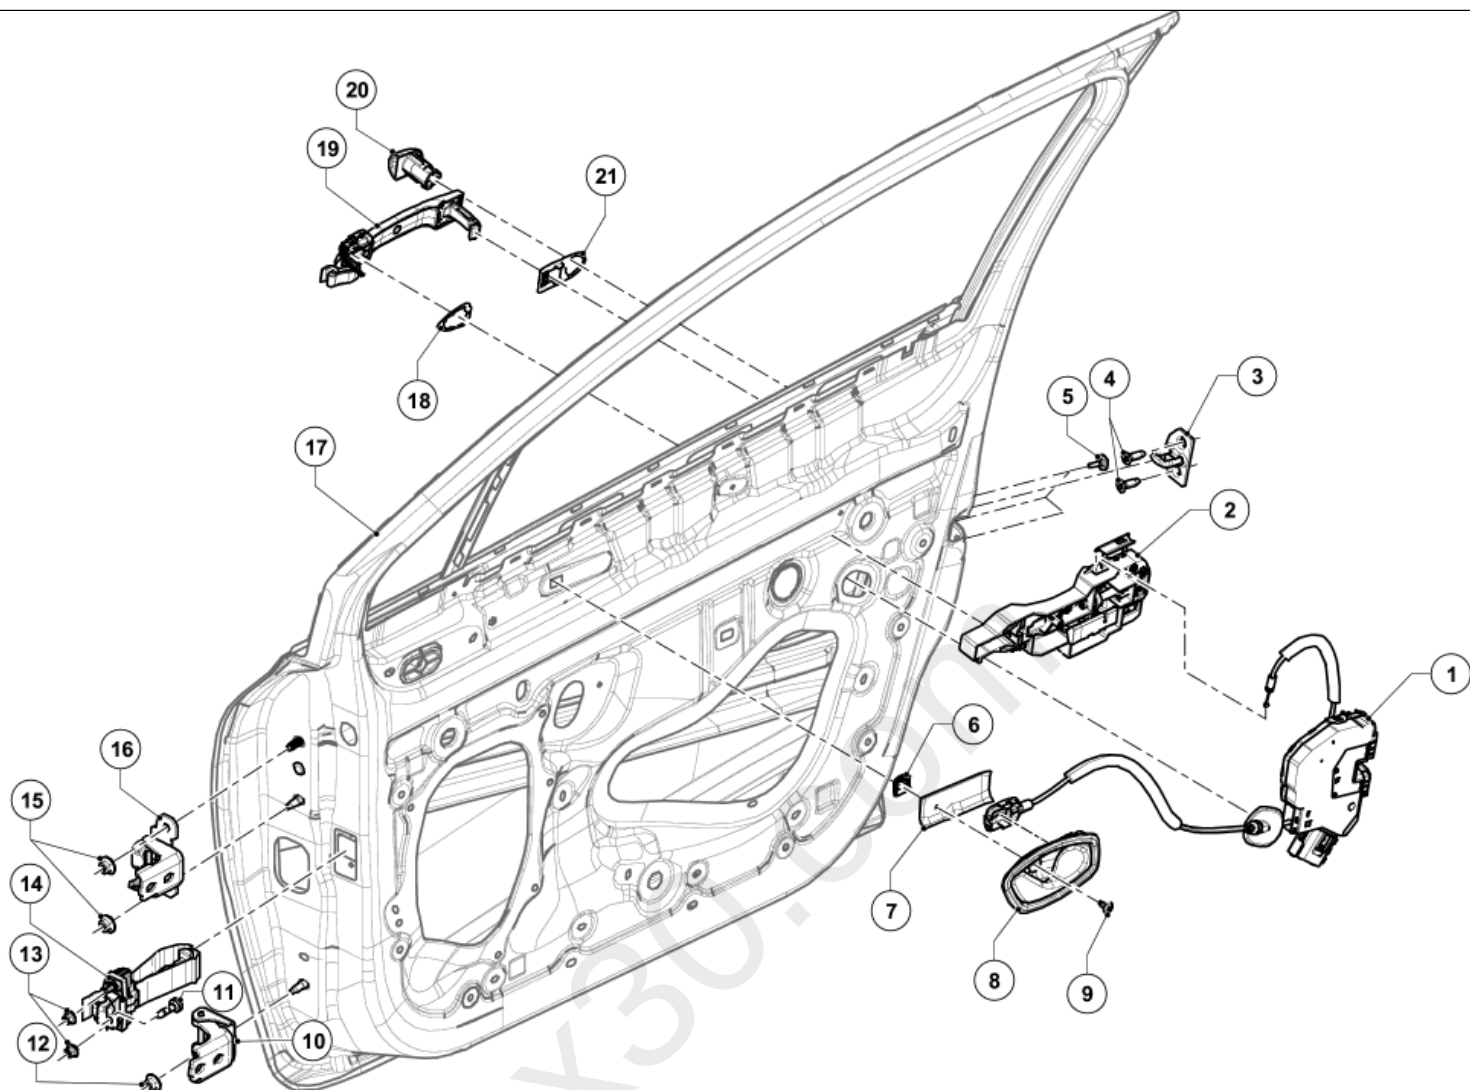

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .