

Marks	Designations	Informations
2	Front air inlet duct	(see 61A, Heating, Front air inlet duct: Removal - Refitting)
4	Recirculation motor	(see 61A, Heating, Recirculation motor: Removal - Refitting)
5	Modulate variation of speed of fan assembly for passenger compartment	(see 61A, Heating, Modulate variation of speed of fan assembly for passenger compartment : Removal - Refitting)
6	Heater matrix trim	
7	Heater matrix pipe	
8	Heater matrix pipe	
9	Clip	
10	Clip	
11	Heater matrix	(see 61A, Heating, Heater matrix: Removal - Refitting)
13	Heating resistors	(see 61A, Heating, Heating resistors: Removal - Refitting)
15	Dashboard cross member	
19	Distribution unit	(see 61A, Heating, Distribution unit: Removal - Refitting)

Marks	Designations	Informations
1	Toxicity sensor	(see 61A, Heating, Toxicity sensor: Removal - Refitting)
16	Air conditioning computer	Air conditioning computer: Removal - Refitting

Marks	Designations	Informations
3	Cabin filter access flap	
12	Cabin filter	(see 61A, Heating, Cabin filter: Removal - Refitting)

Marks	Designations	Informations
14	Evaporator sensor	Evaporator sensor: Removal - Refitting



Repair-30x02x07-02x50-1-4-1.xml



XSL Version : 3.02 du 22/07/11

PASSENGER COMPARTMENT SWITCHES : LIST AND LOCATION OF COMPONENTS

1. LIST OF COMPONENTS

1- THE PASSENGER COMPARTMENT SWITCHES CONSIST OF:

- an hazard warning lights switch ([see 84A, Control - Signals, Hazard warning lights and central door control: Removal - Refitting](#))
- a central door locking switch ([see 84A, Control - Signals, Hazard warning lights and central door control: Removal - Refitting](#))
- a remote headlight beam adjustment control
-
- a lighting dimmer
-
- front electric window switches on driver's door
-
- a front electric window switch on passenger door

ELECTRIC WINDOW(Electrical)



rear electric window switches

WITHSTOPANDSTART(STOSTA)



a "Stop and start" system activation control([see 84A, Control - Signals, Control - Signals: List and location of components](#))

CRUISE CONTROL/SPEED LIMITER(RéCruise control/Speed limiter)



a cruise control-speed limiter switch[Cruise control - speed limiter: List and location of components](#)


DCOSPO(DCOSPO) - ECOMOD(ECOMOD)



a "Driving mode" switch


2. LOCATION OF COMPONENTS

REMOTE HEADLIGHT BEAM ADJUSTMENT CONTROL AND LIGHTING DIMMER

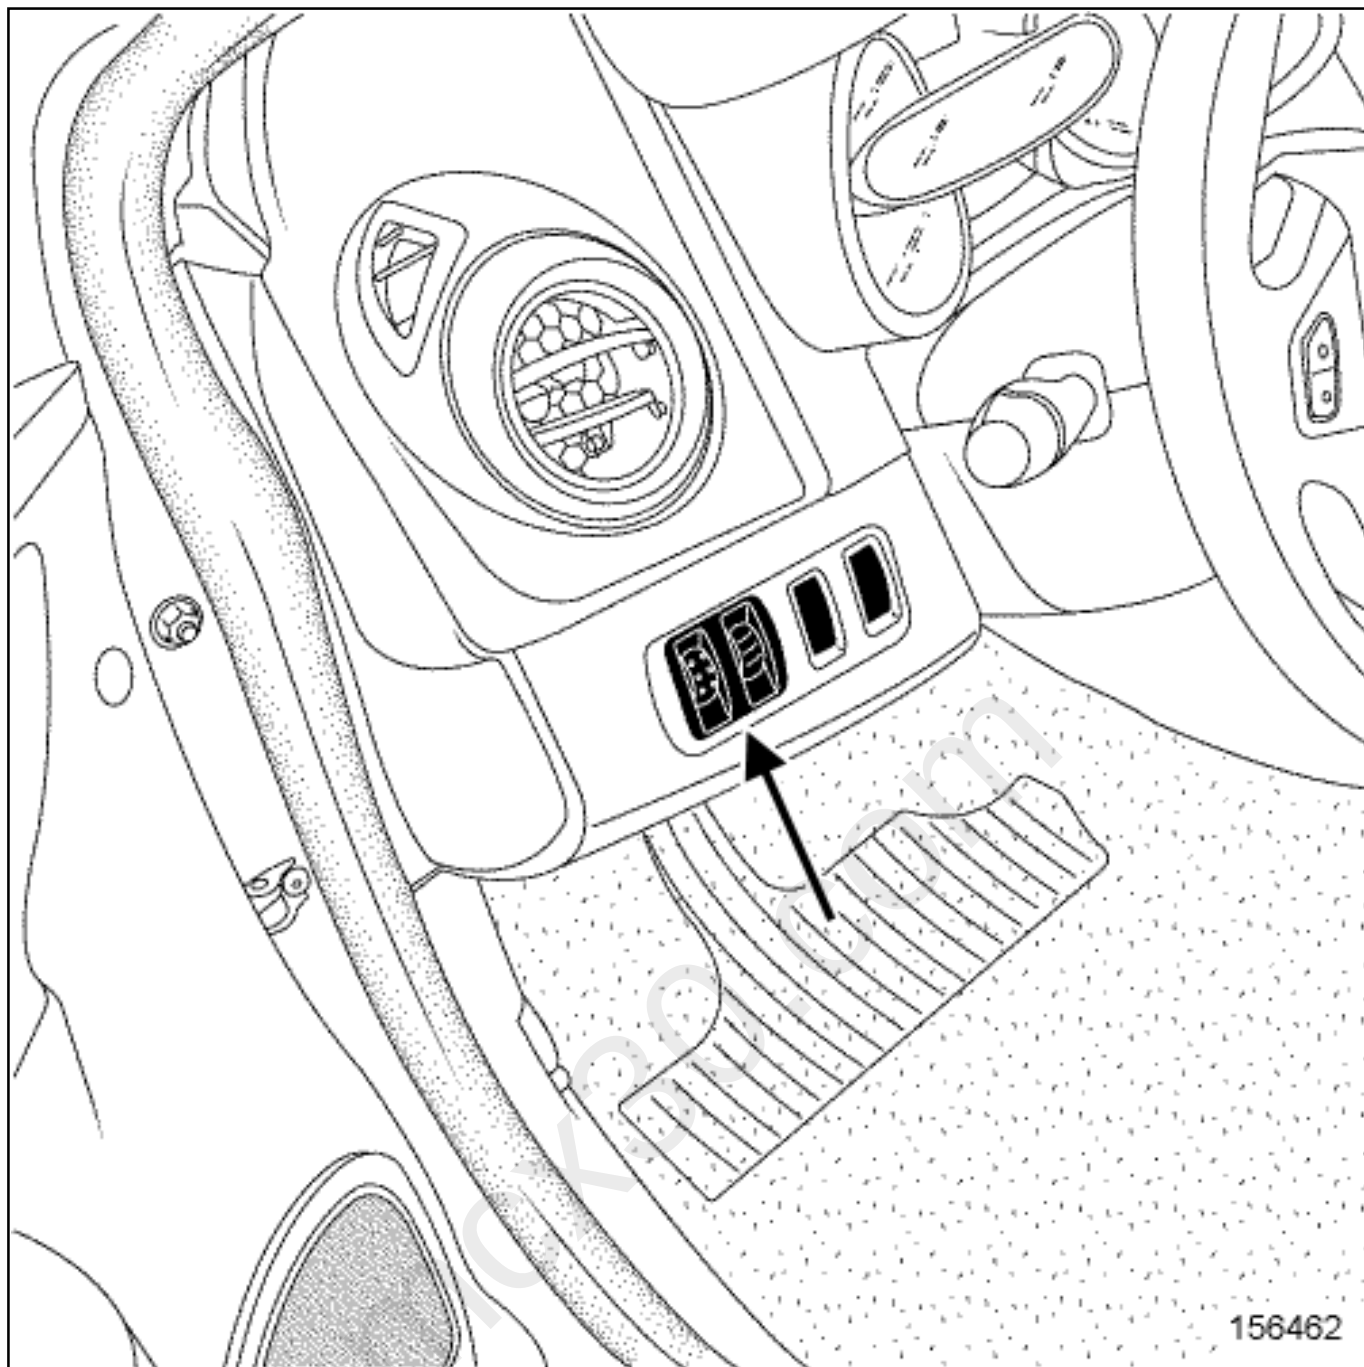

156462

FRONT ELECTRIC WINDOW SWITCHES ON DRIVER'S DOOR

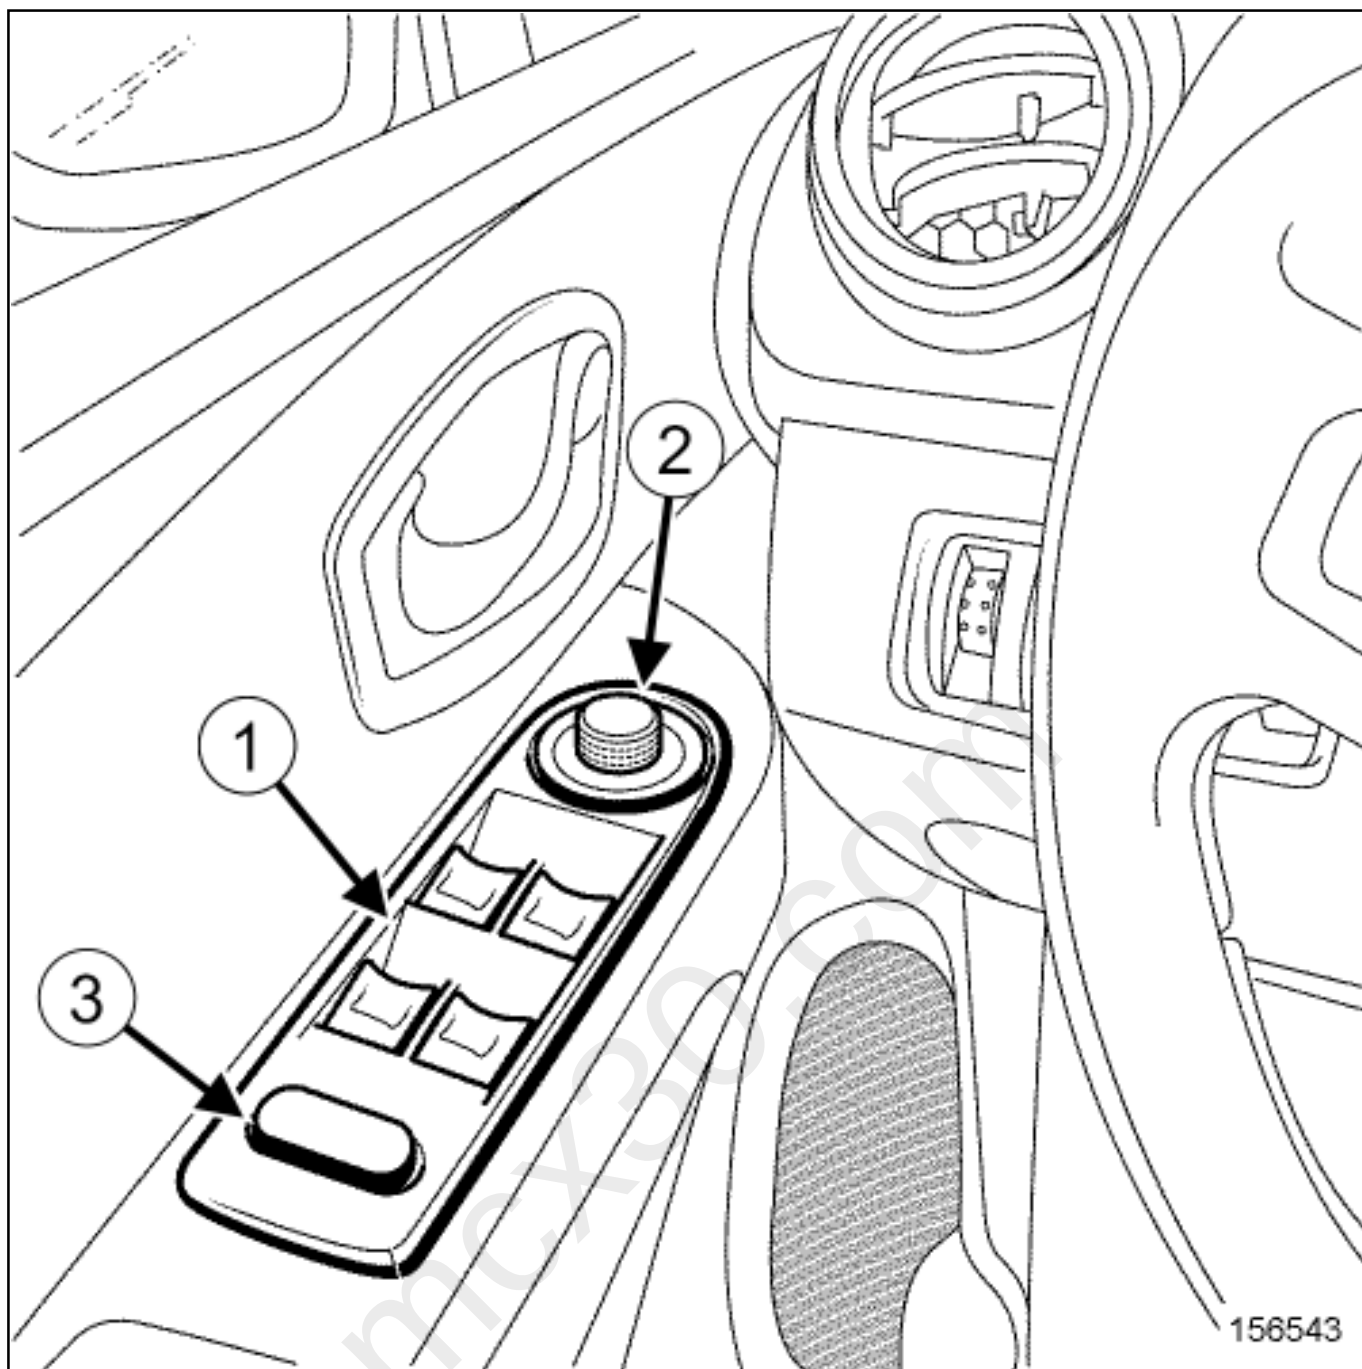

(1) electric window switches

(2) exterior rear view mirror control switch

(3) child safety switch

FRONT ELECTRIC WINDOW SWITCH ON PASSENGER DOOR

