




Repair-30x04x03-02x51-1-1-1.xml

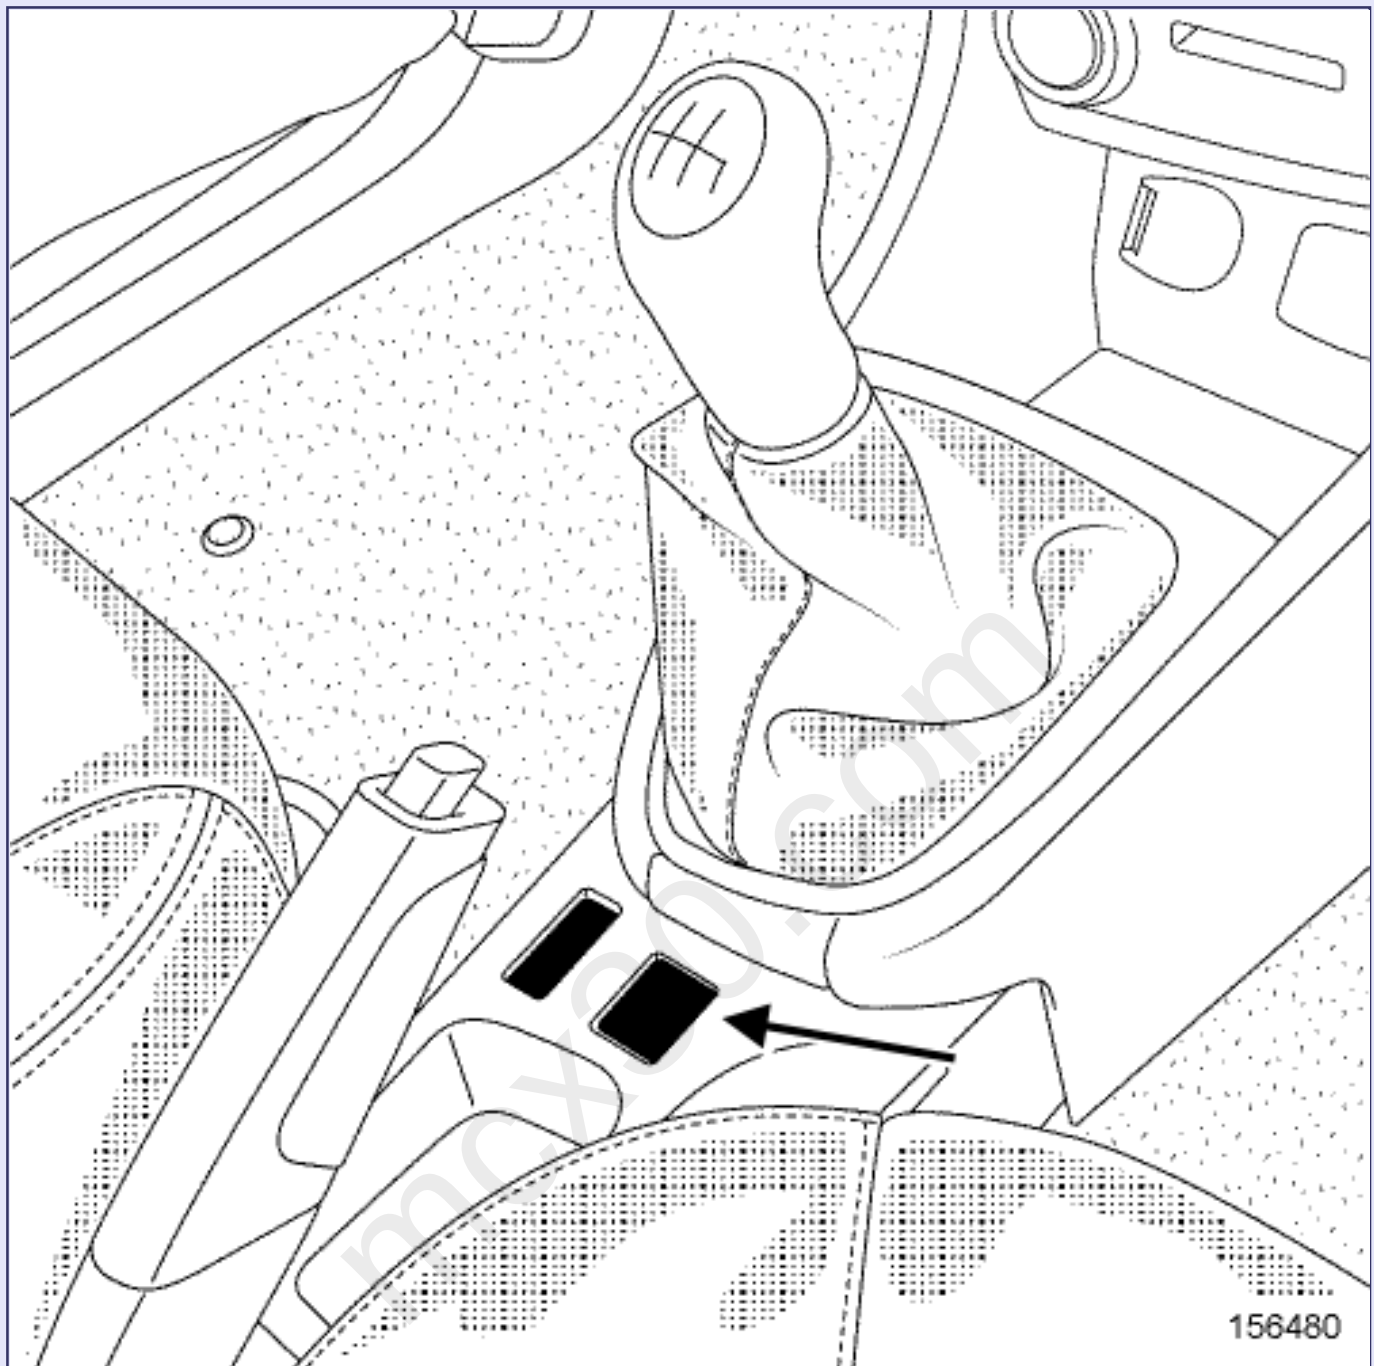

PASSENGER COMPARTMENT SWITCHES : LIST AND LOCATION OF COMPONENTS

1. LIST OF COMPONENTS

1- THE PASSENGER COMPARTMENT SWITCHES CONSIST OF:

- an hazard warning lights switch([see 84A, Control - Signals, Hazard warning lights and central door control: Removal - Refitting](#))
- a central door locking switch([see 84A, Control - Signals, Hazard warning lights and central door control: Removal - Refitting](#))
- a remote headlight beam adjustment control
- a lighting dimmer
-

front electric window switches on driver's door

■

a front electric window switch on passenger door

ELECTRIC WINDOW(Electrical)

■

rear electric window switches

■

a parking distance control switch([Parking distance control: List and location of components](#))

WITH STOP AND START (STOSTA)



a "Stop and start" system activation control ([see 84A, Control - Signals, Control - Signals: List and location of components](#))

CRUISE CONTROL/SPEED LIMITER (RéCruise control/Speed limiter)



a cruise control-speed limiter switch ([Cruise control - speed limiter: List and location of components](#))


DCOSPO (DCOSPO) - ECOMOD (ECOMOD)



a "Driving mode" switch


2. LOCATION OF COMPONENTS

REMOTE HEADLIGHT BEAM ADJUSTMENT CONTROL AND LIGHTING DIMMER

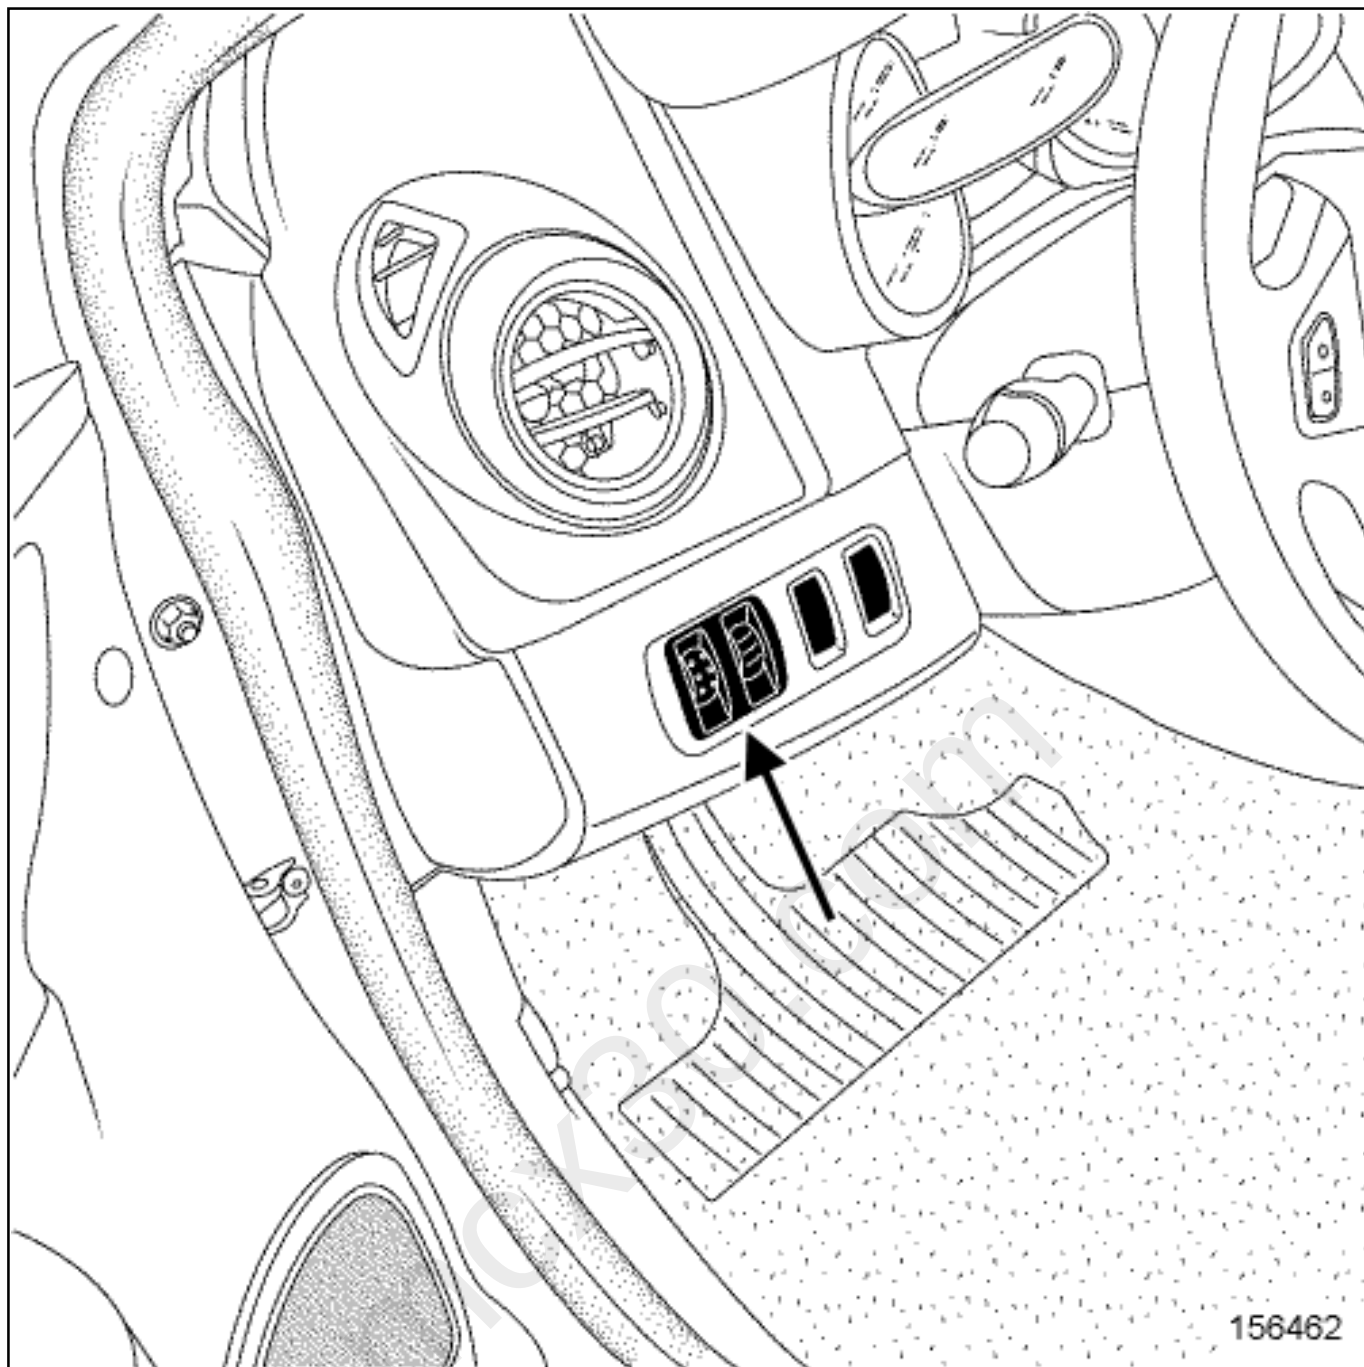

156462

FRONT ELECTRIC WINDOW SWITCHES ON DRIVER'S DOOR

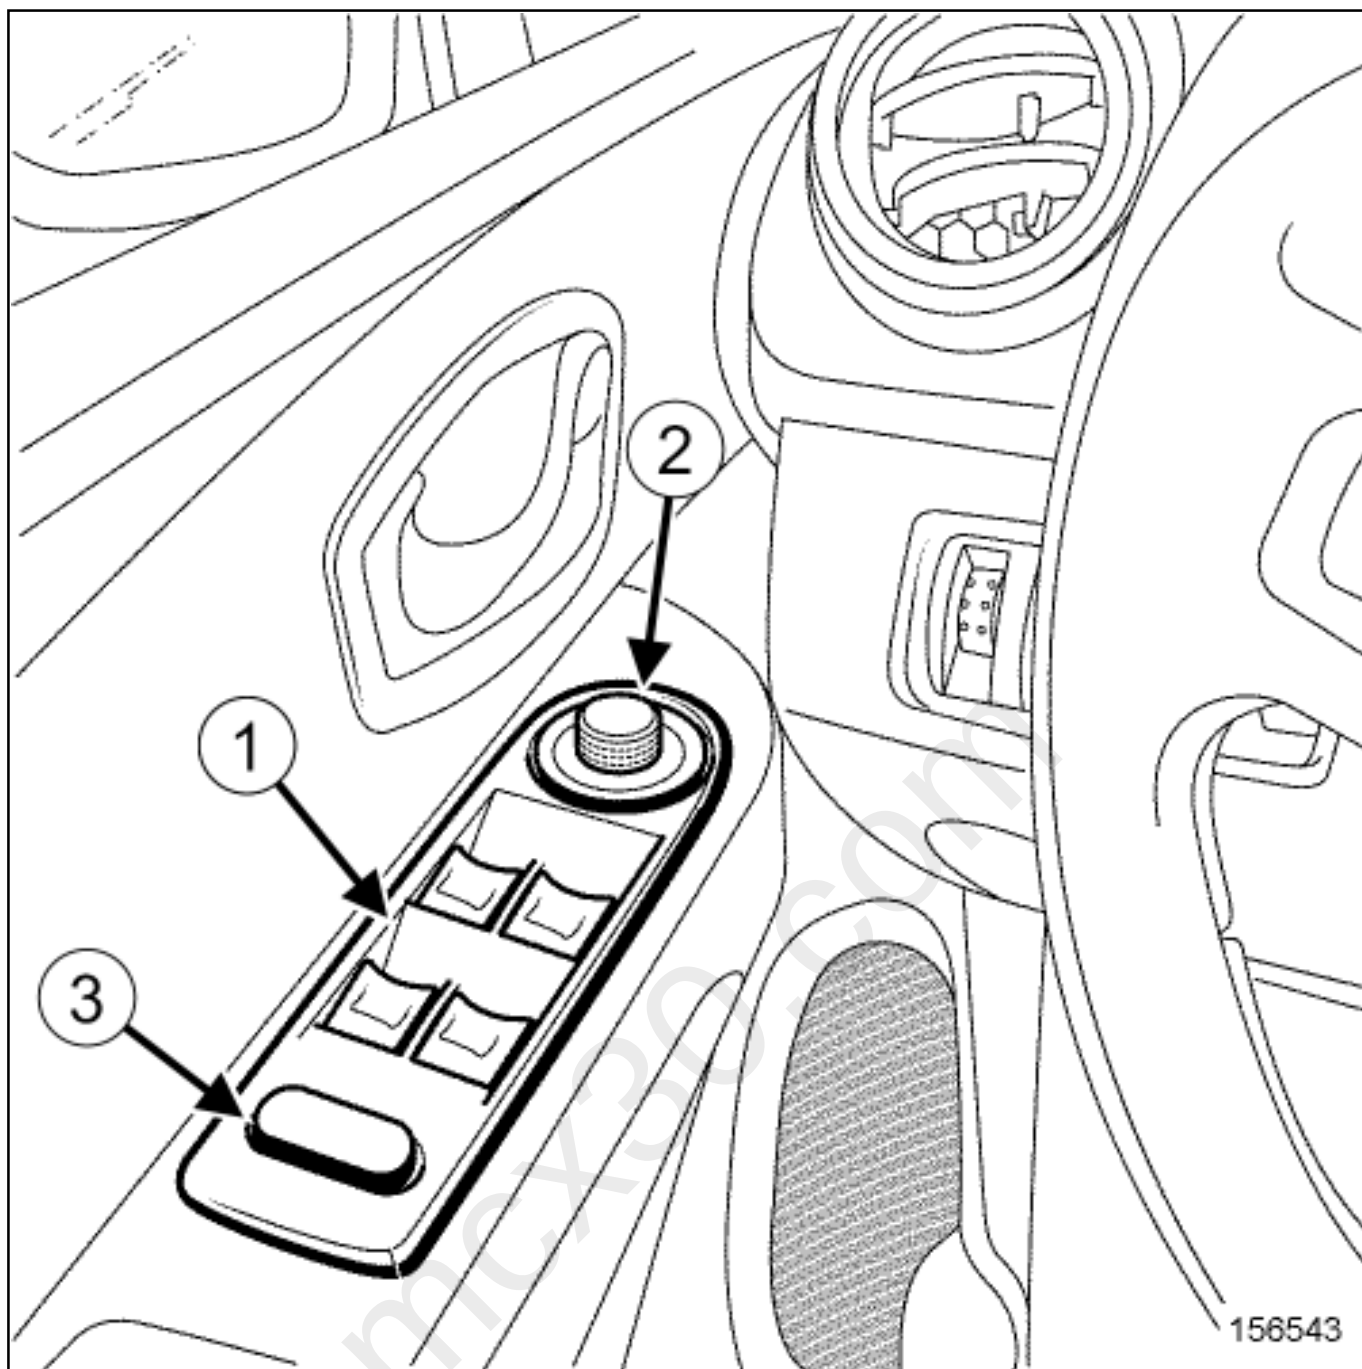



(1) electric window switches

(2) exterior rear view mirror control switch

(3) child safety switch

FRONT ELECTRIC WINDOW SWITCH ON PASSENGER DOOR

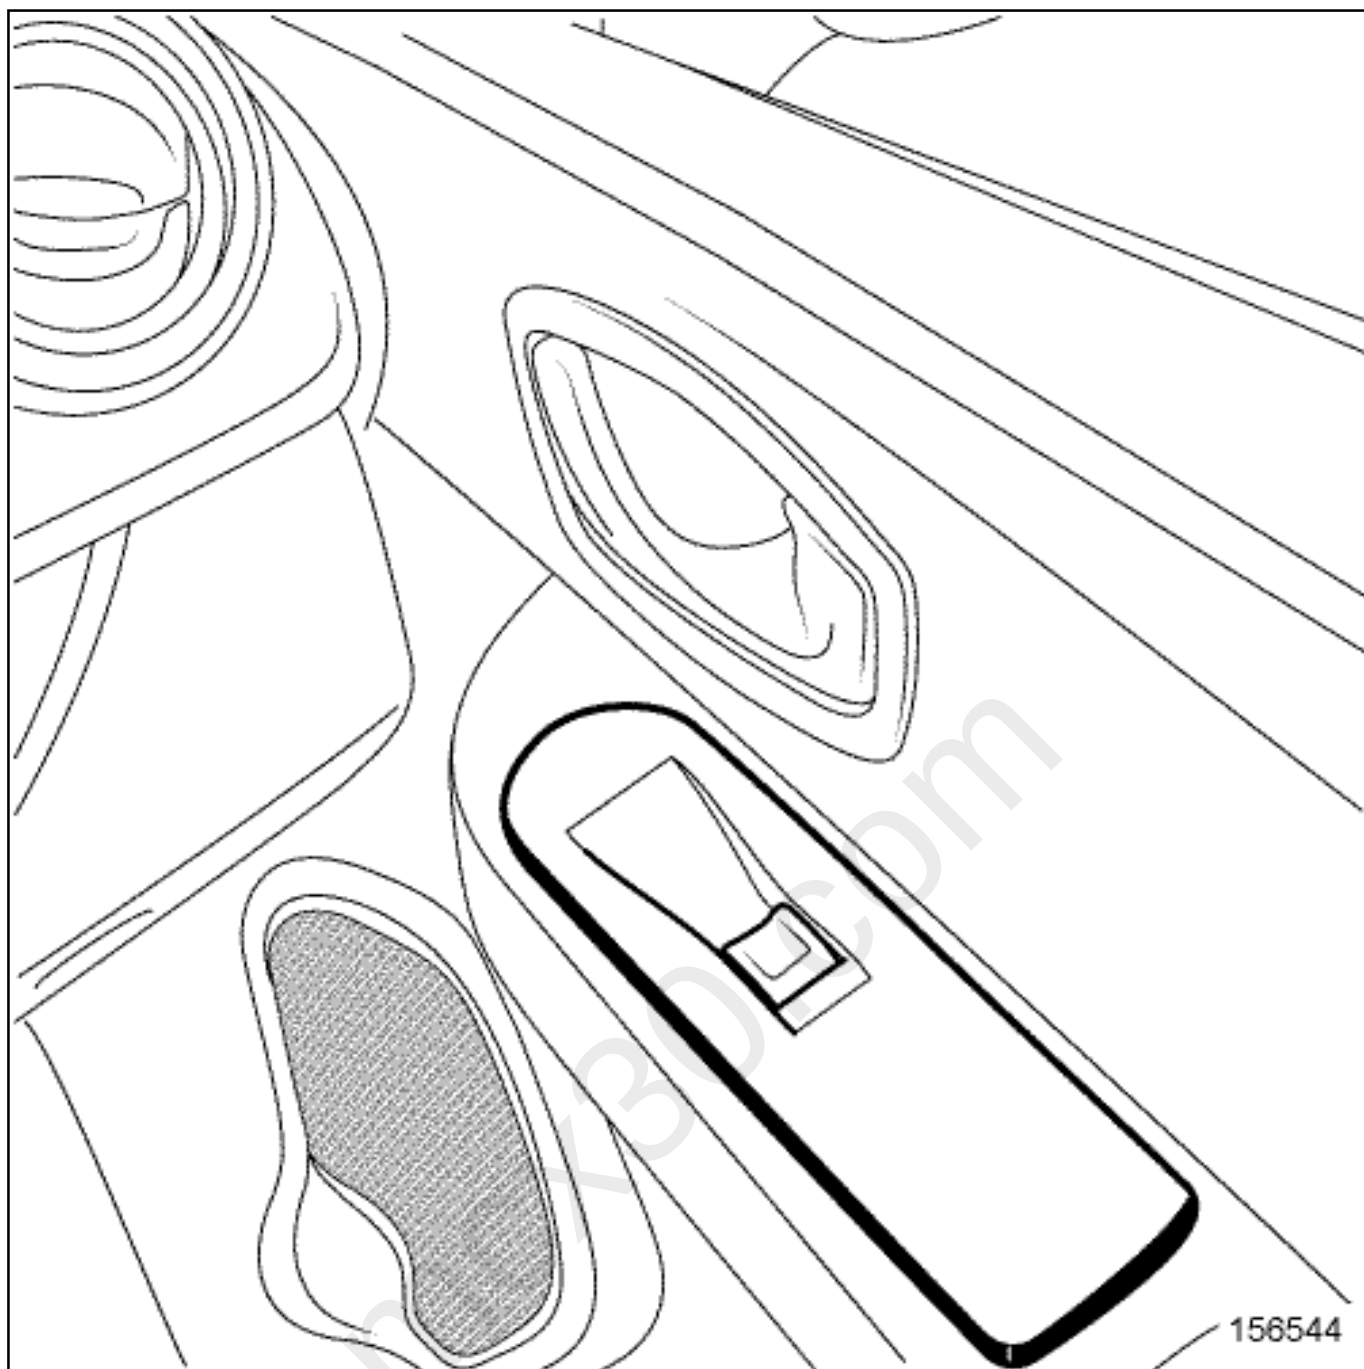

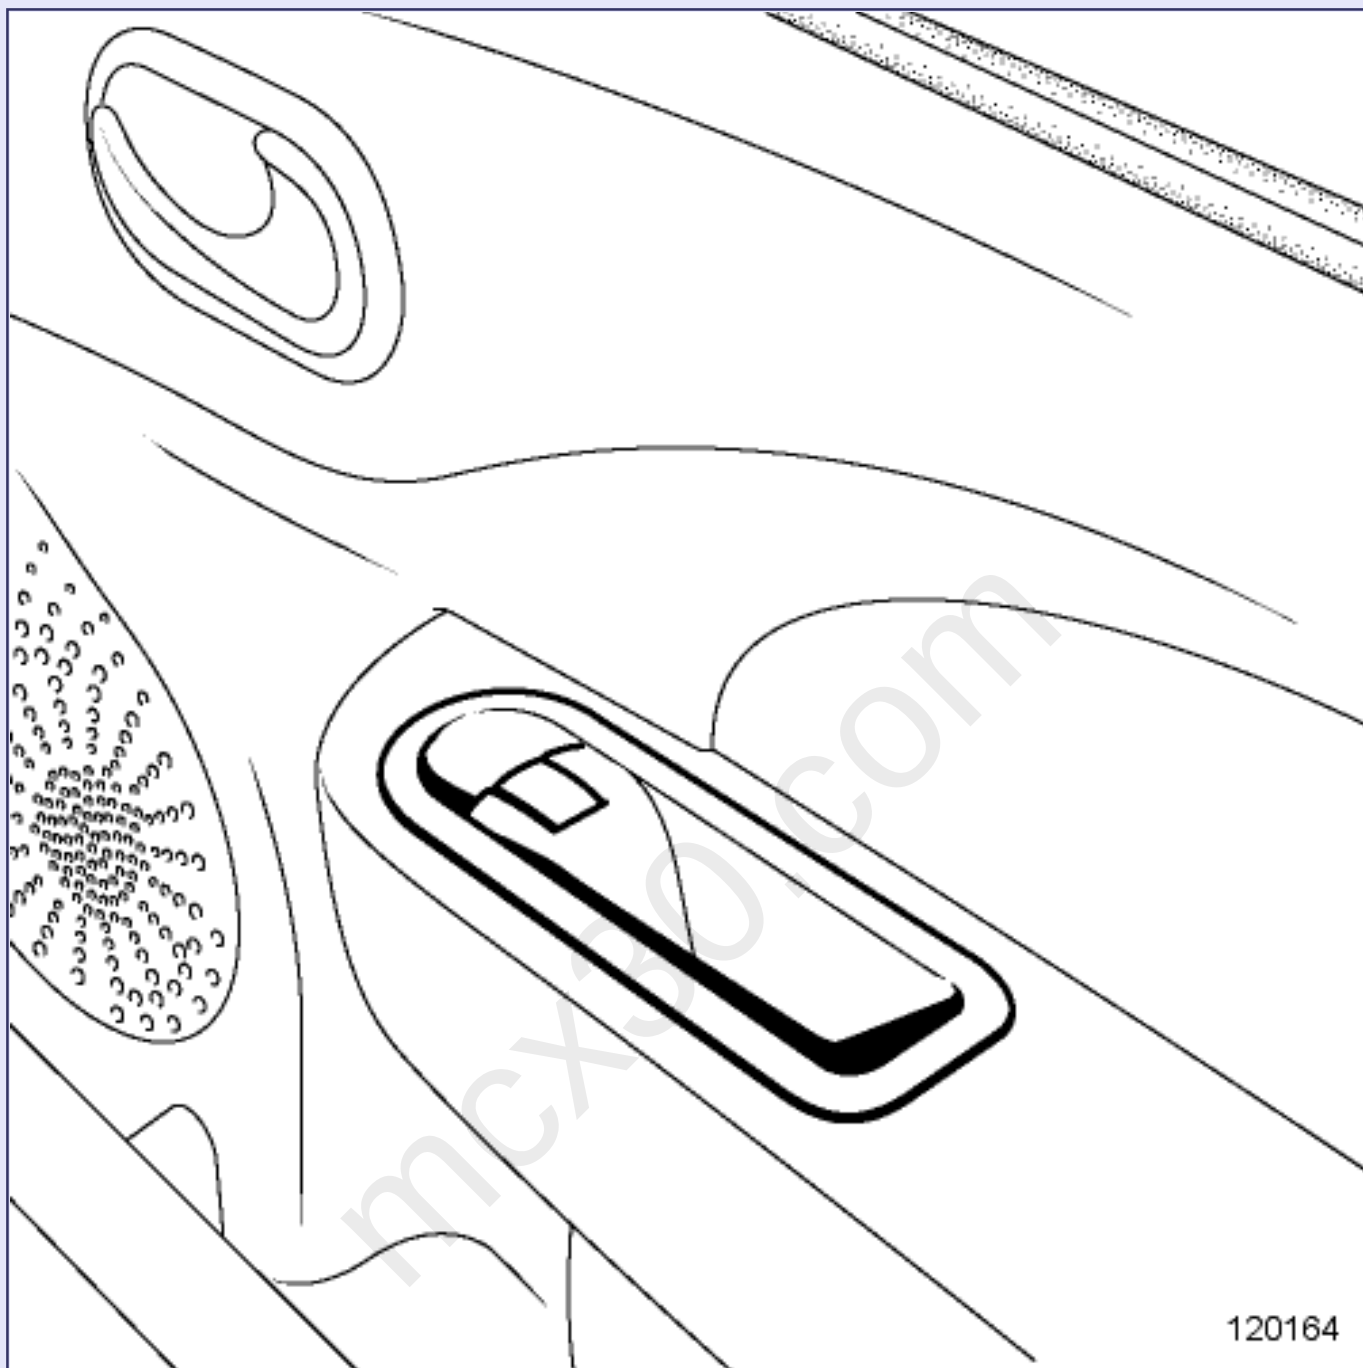

120164