





Repair-30x04x03-02x51-1-1-1.xml

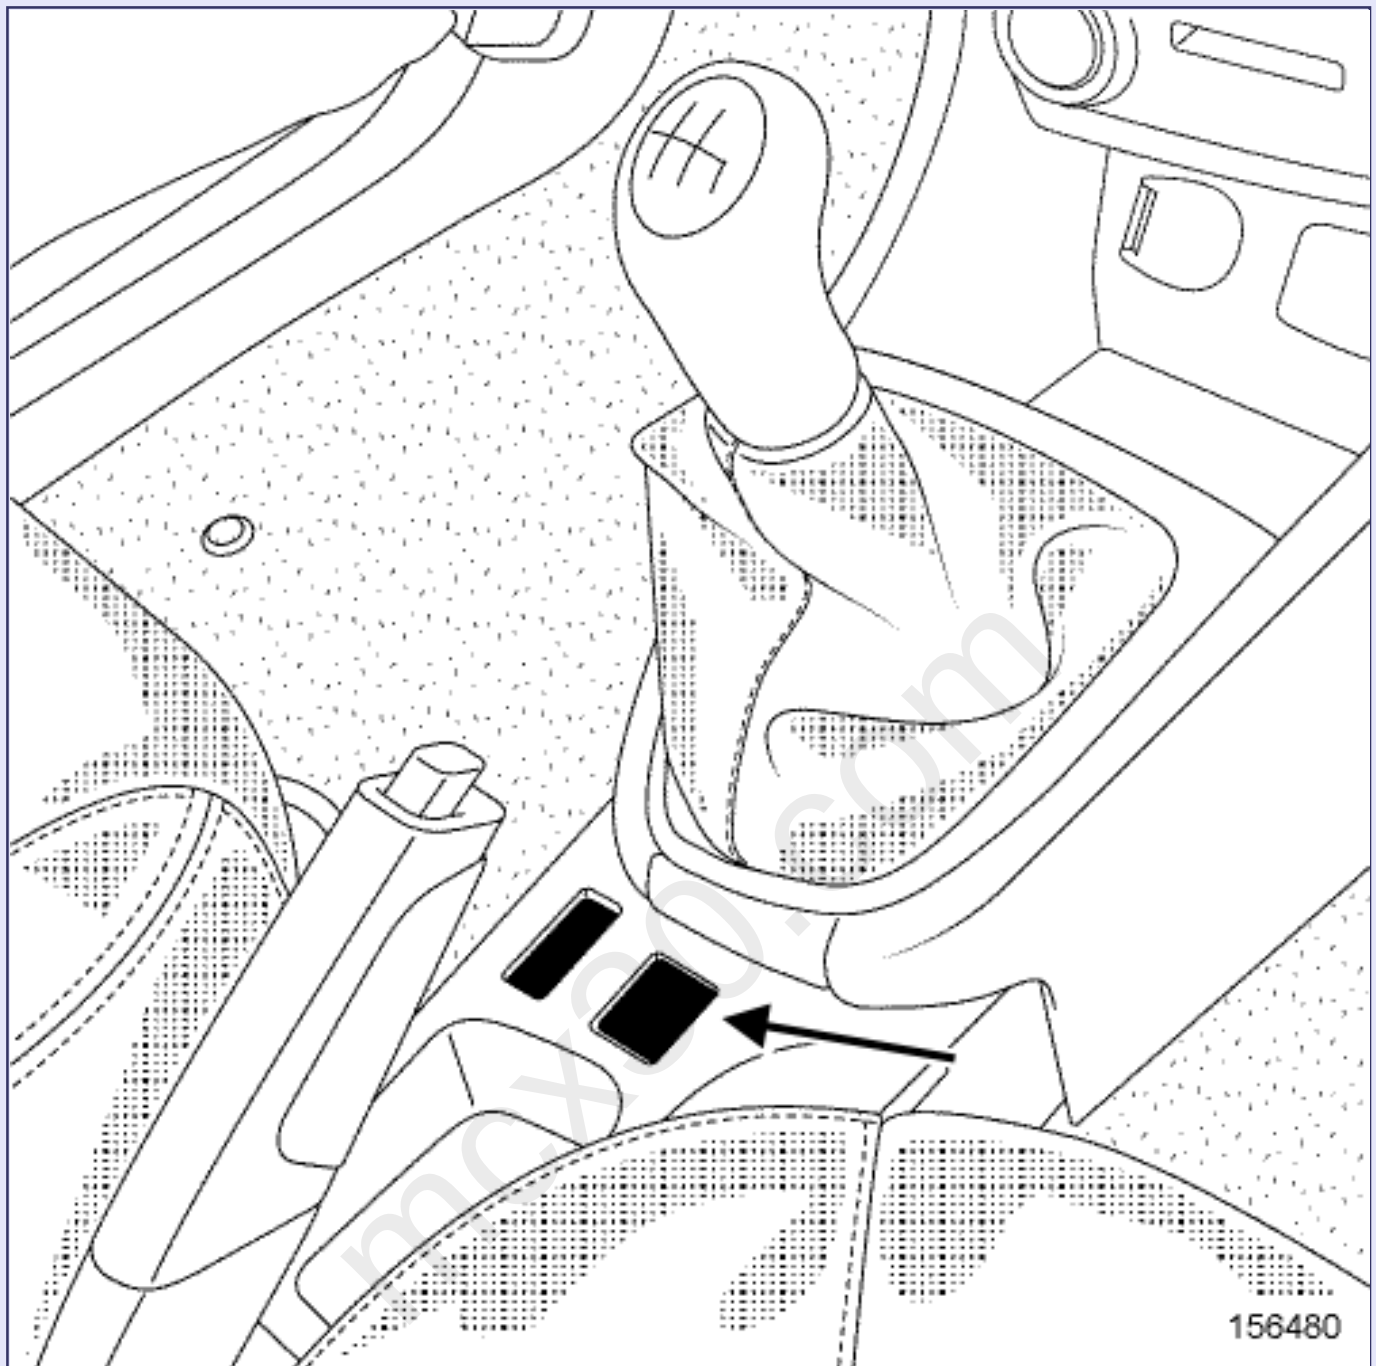


PASSENGER COMPARTMENT TEMPERATURE SENSOR: REMOVAL - REFITTING

REMOVAL


1. REMOVAL OPERATION

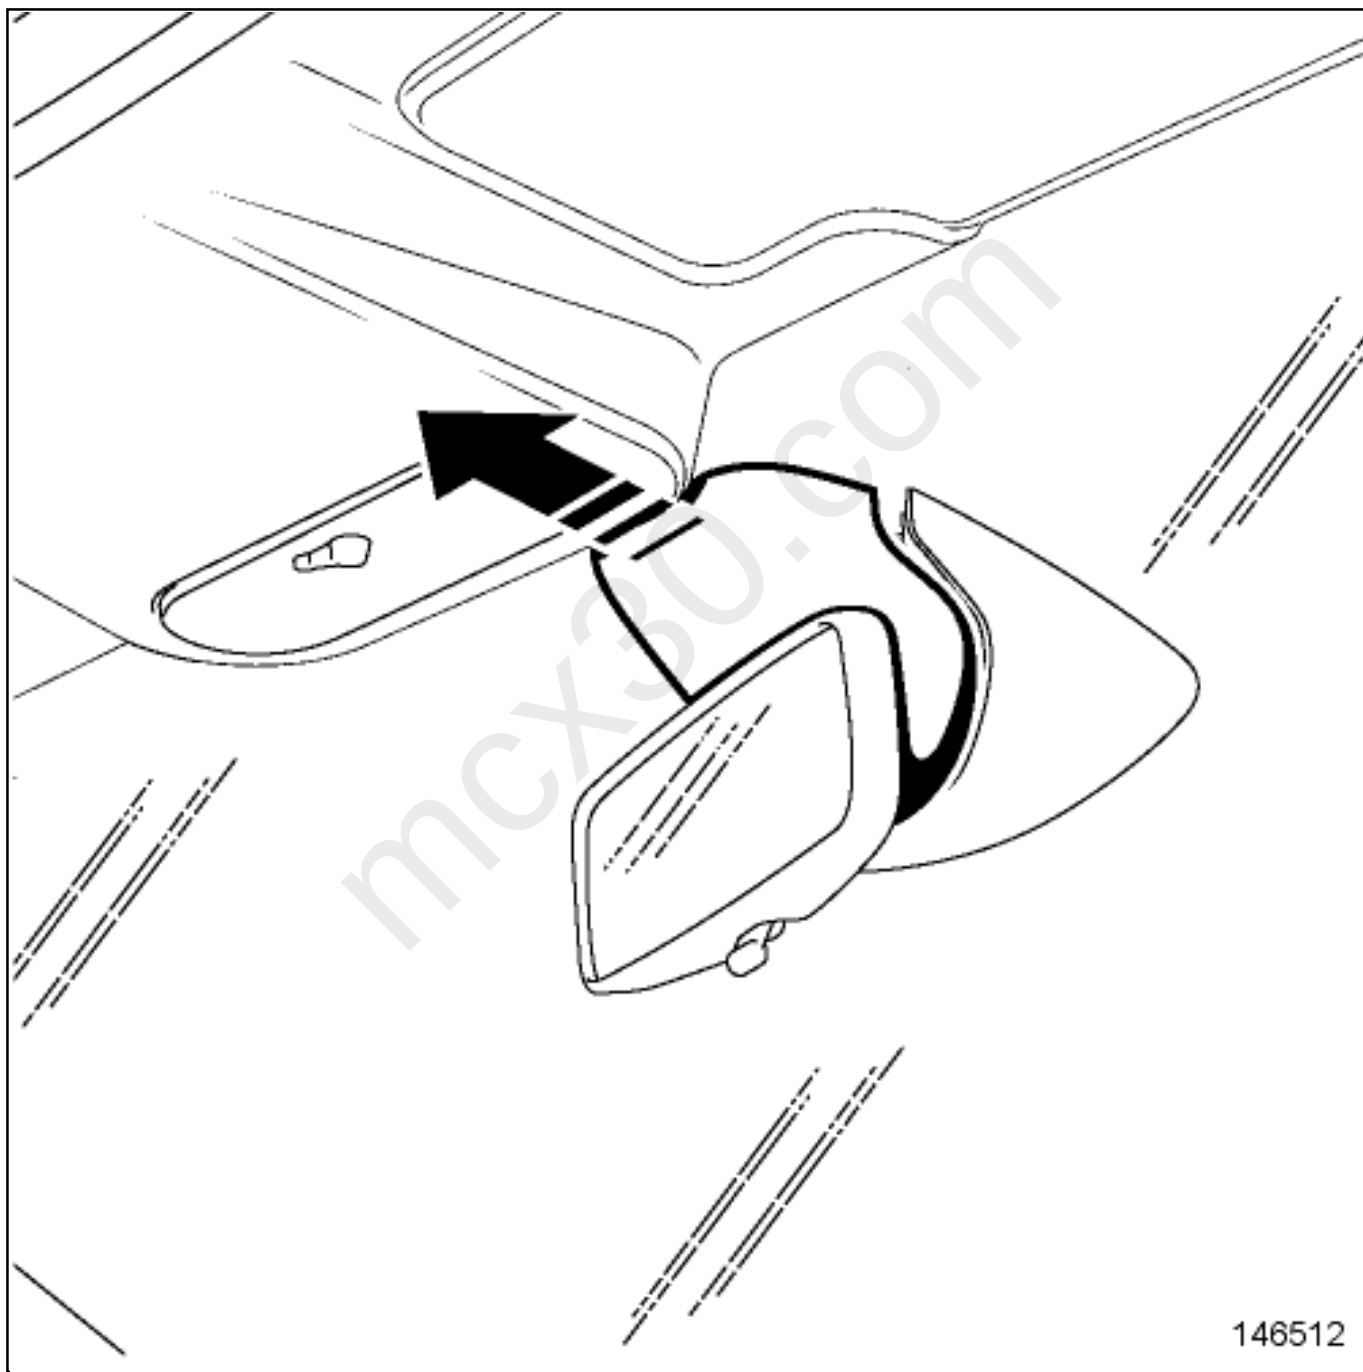

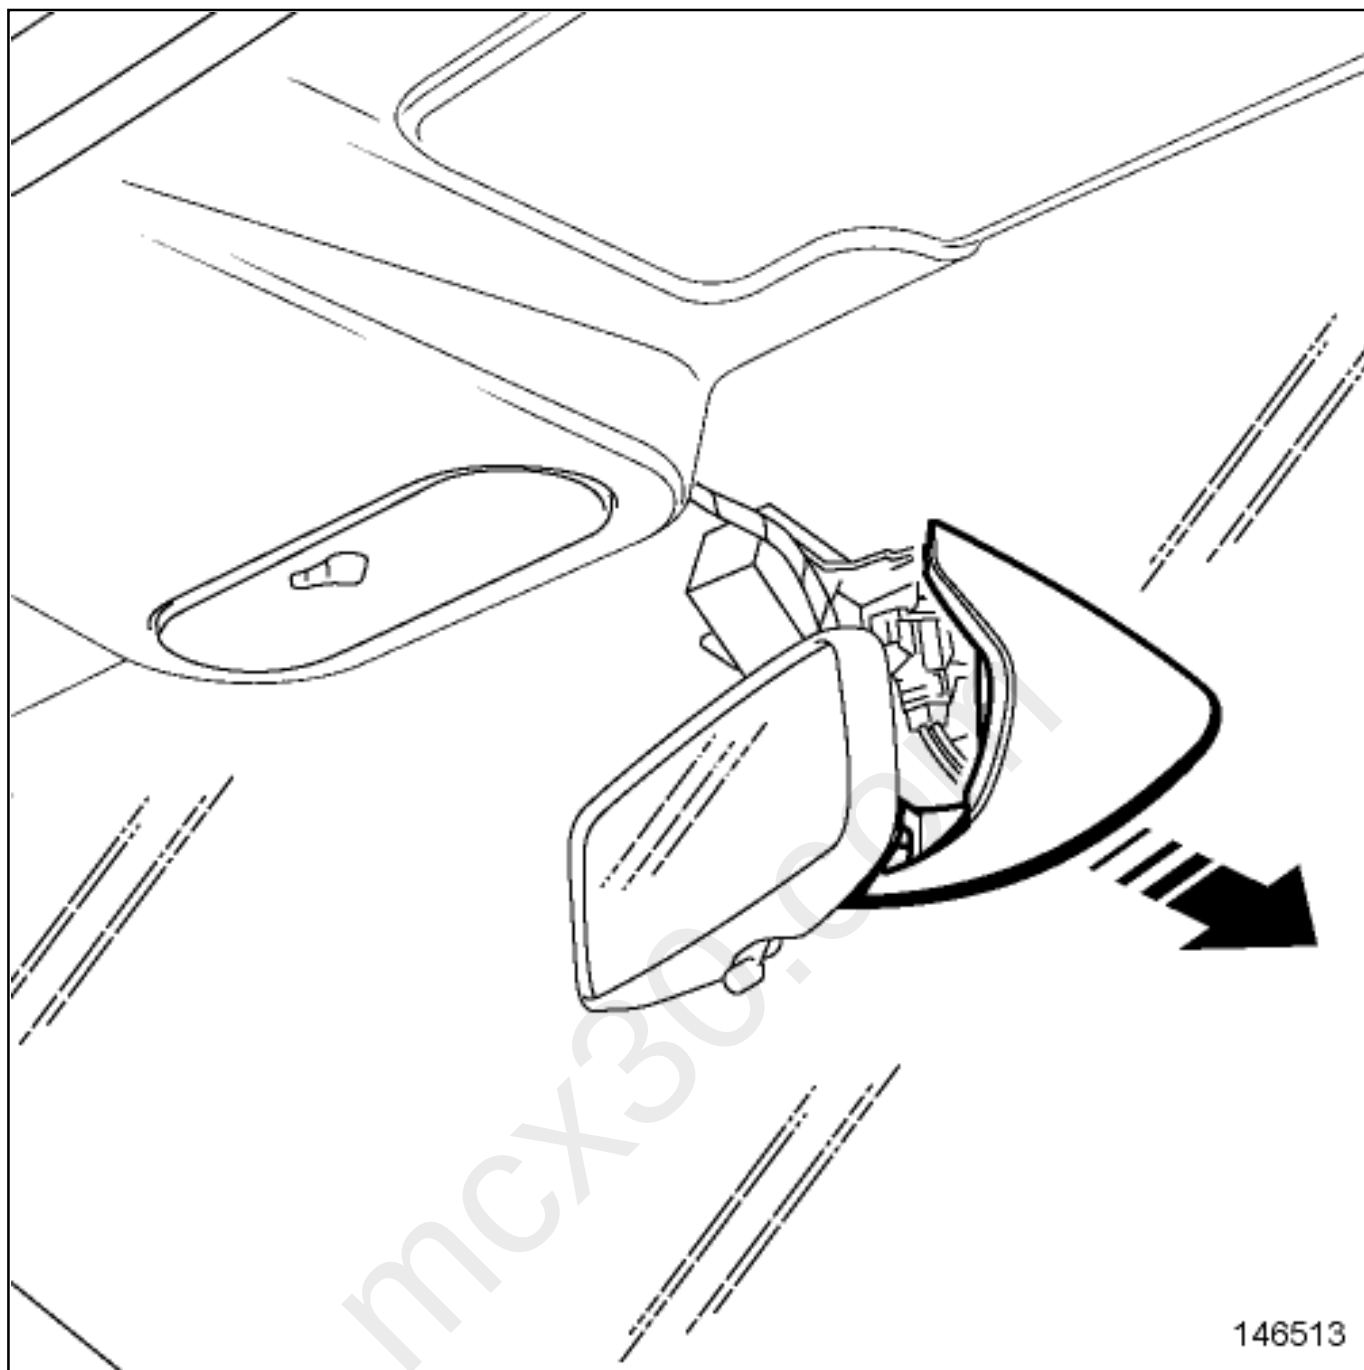


146513

Remove the interior rear view mirror trims.

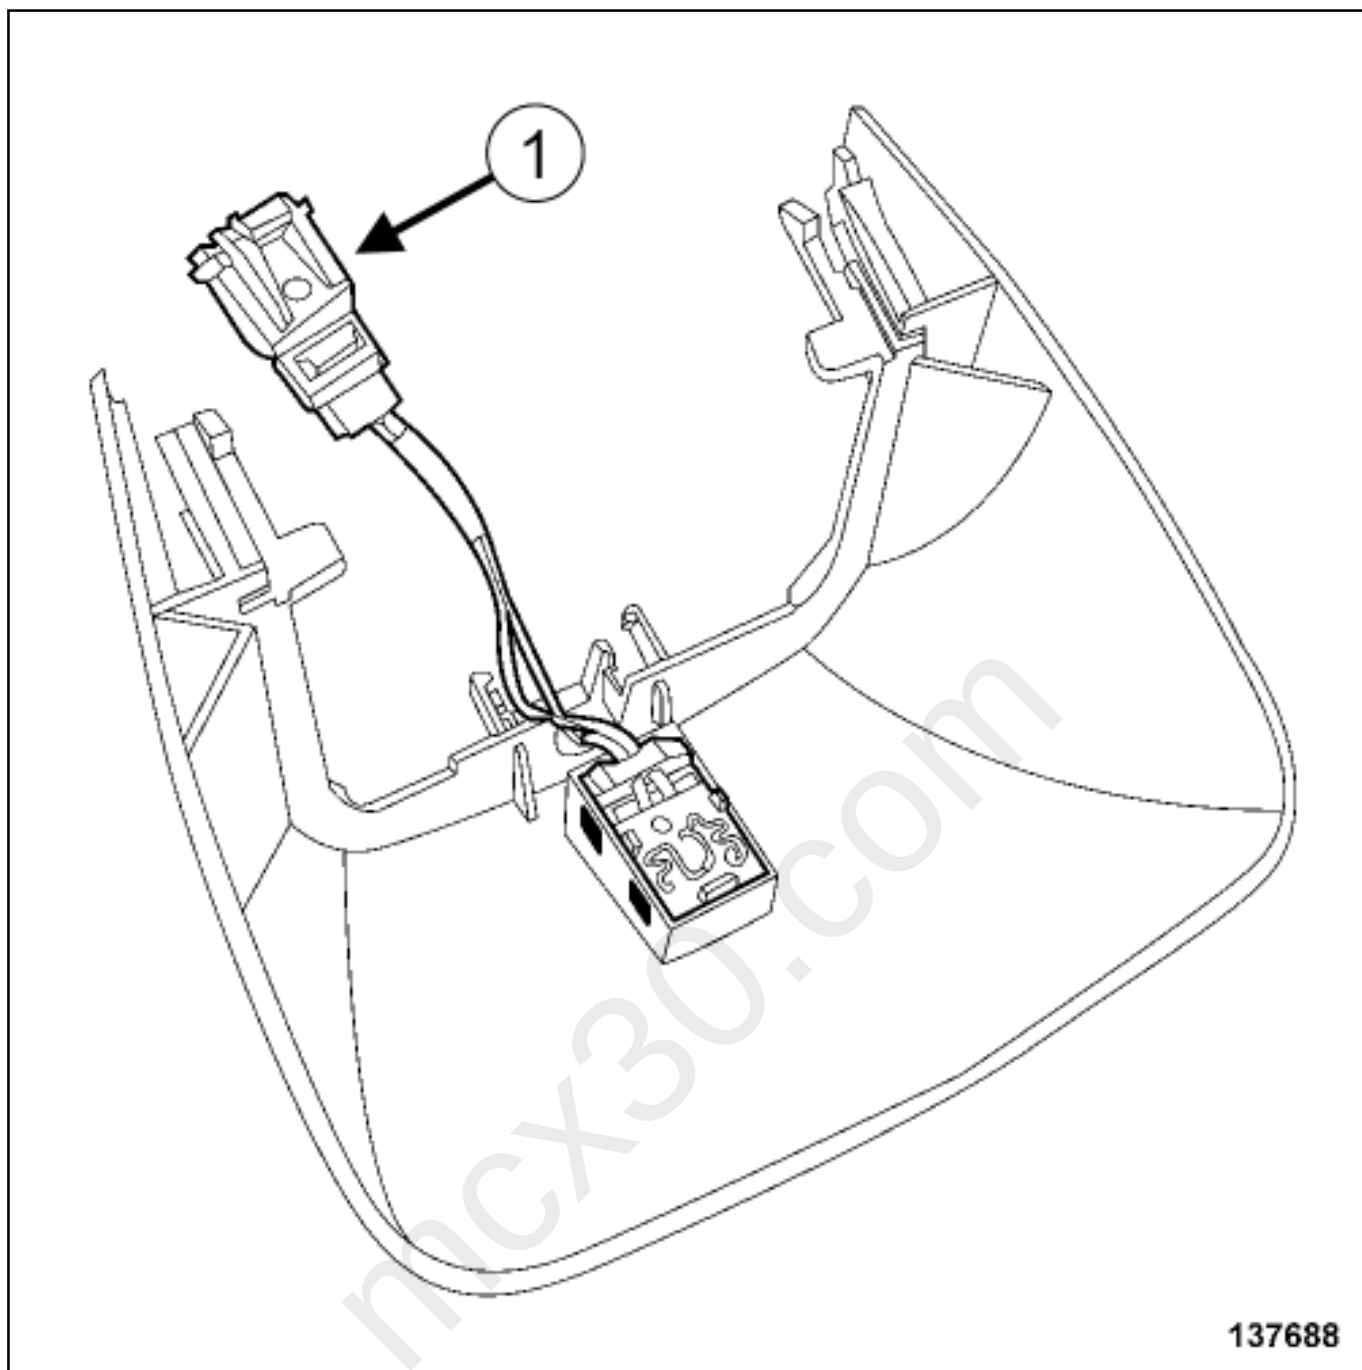

Disconnect the passenger compartment temperature sensor connector(1) .

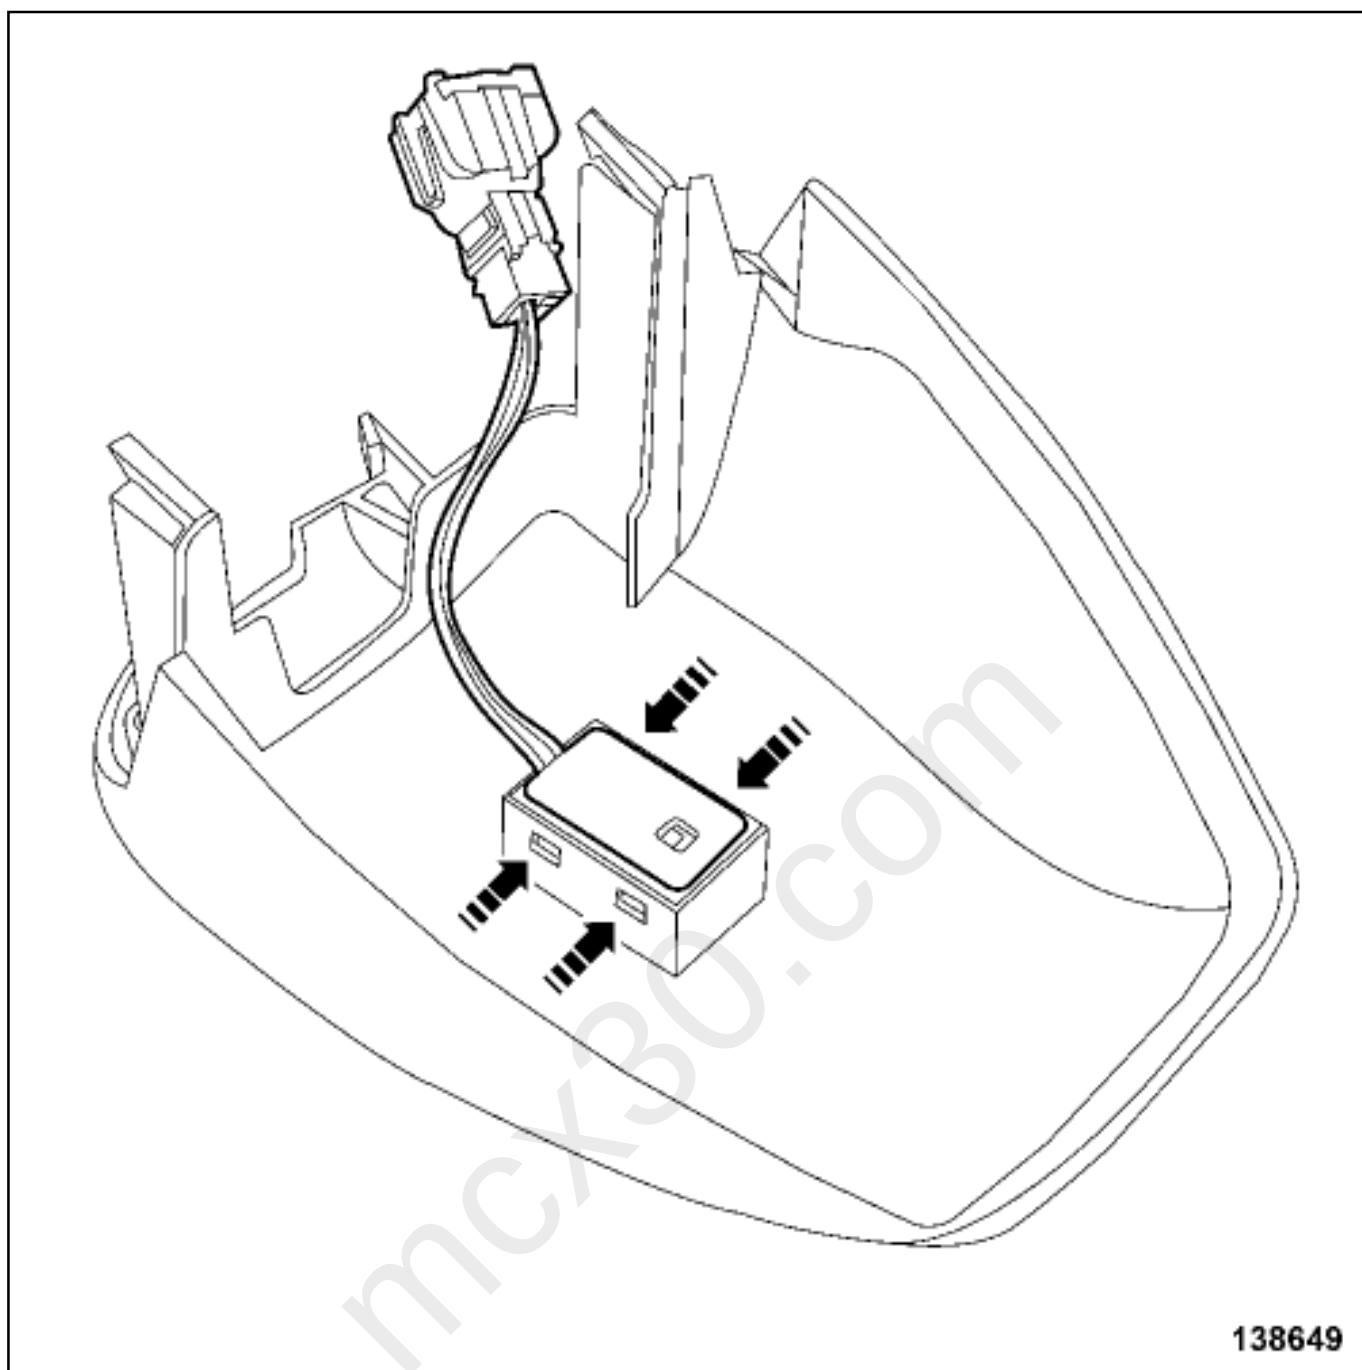

Unclip the passenger compartment temperature sensor from the interior rear view mirror trim.

REFITTING

1. REFITTING OPERATION

Proceed in the reverse order to removal.