



Note:

Do not press or move the pedal during disassembly in order to avoid damaging the switch.



Note:

Do not remove or fit the brake pedal switch if the brake pedal is not connected to the brake servo pushrod.



Note:

Hold the switch against the bracket.

Remove the brake pedal switch by turning it a quarter of a turn anti-clockwise.

Press the switch against the bracket and hold it perpendicular to the pedal aperture.

Refit the brake pedal switch by turning it a quarter of a turn clockwise.



Note:

There is no adjustment operation for this type of brake pedal switch.



Repair-30x03x05x01-01x67-1-1-1.xml



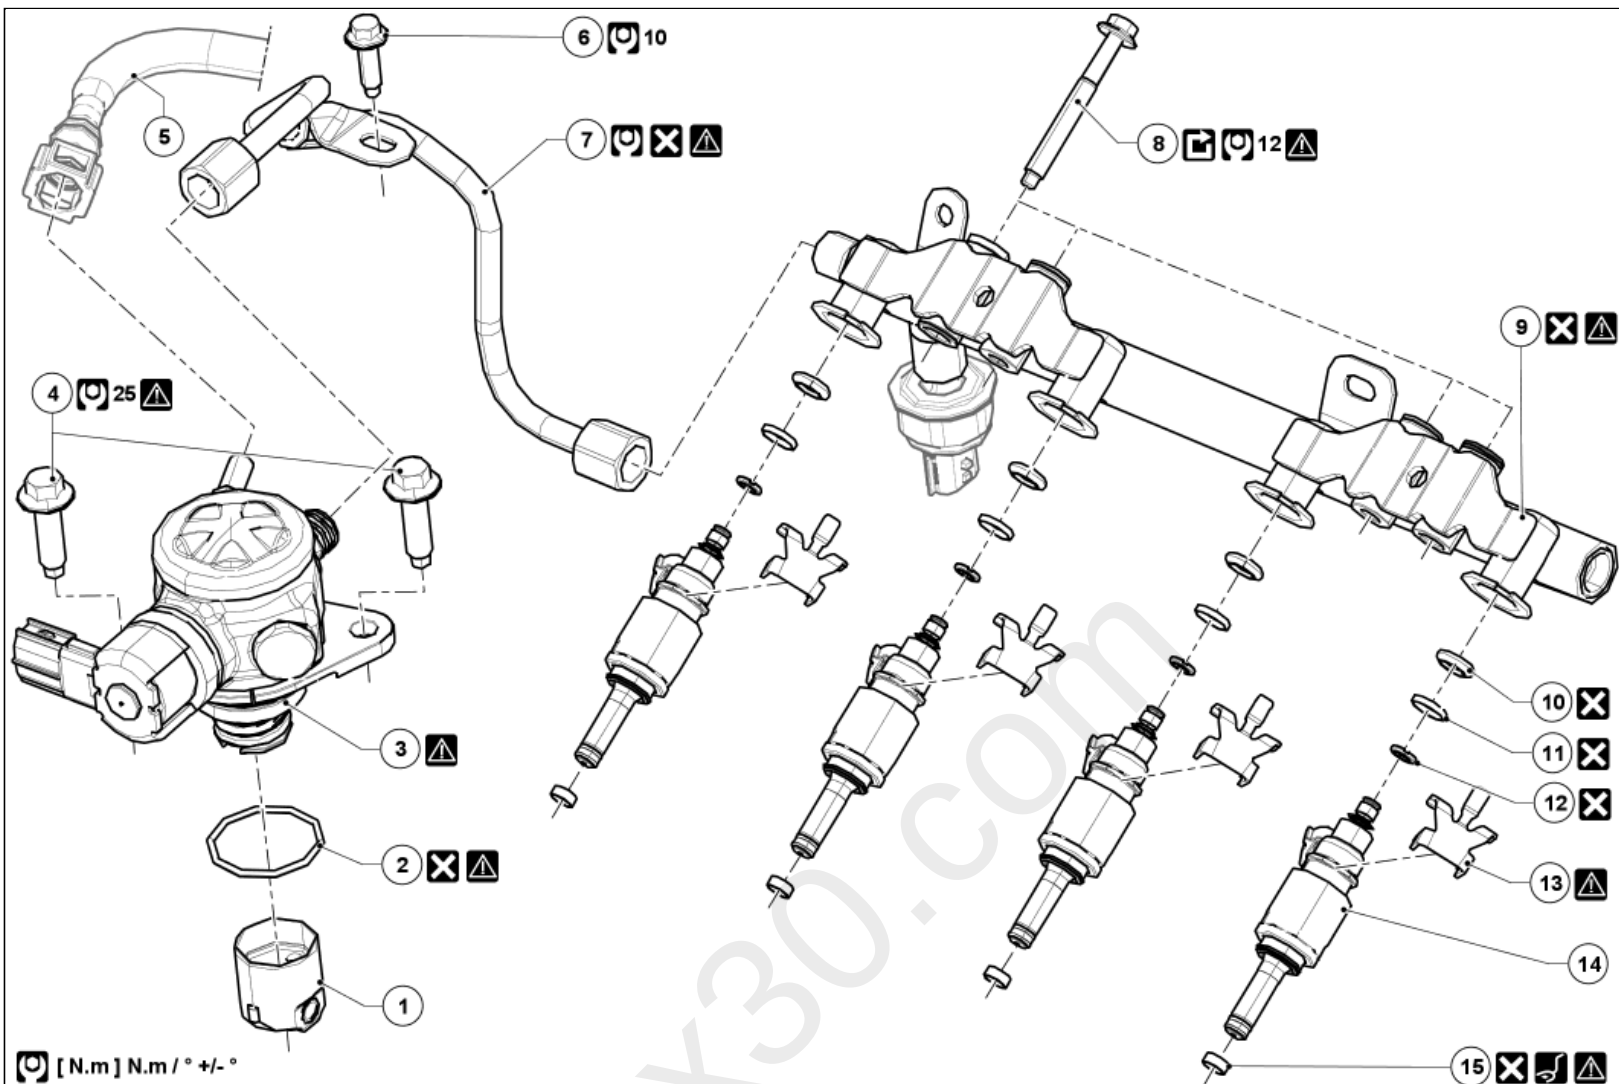


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques: [Tightening torques: General information](#) .