

Marks	Designations	Informations
1	Gasoline high pressure pump lifter	
2	Gasoline high pressure pump seal	Lightly oil the new seal
3	Gasoline high pressure pump	(see High pressure pump: Removal - Refitting) Tightening and replacement(see 17B, Petrol injection, Injector rail - Injectors: Removal - Refitting) Risk of damaging the pipe or the gasoline rail
4	Gasoline high pressure pump bolts	25 N.m +/-4 Place the drive cam on the camshaft at bottom dead center, then tightening bolts gradual and alternately
5	Low pressure gasoline supply hose	
6	Gasoline inlet high pressure pipe to high pressure rail bolt	10 N.m +/-2
7	Gasoline inlet high pressure pipe to high pressure rail	Tightening and replacement(see 17B, Petrol injection, Injector rail - Injectors: Removal - Refitting) Risk of damaging the pipe or the gasoline rail
8	Injector rail - injectors assembly bolts	12 N.m +/-1 Tightening spiral from the outside, timing end
9	Injector rail - injectors	(see 17B, Petrol injection, Injector rail - Injectors: Removal - Refitting) Tightening spiral from the outside Tightening and replacement(see 17B, Petrol injection, Injector rail - Injectors: Removal - Refitting) Risk of damaging the pipe or the gasoline rail
10	O-ring seal	
11	O-ring lower seal	
12	Ring stopper	
13	Injector damper clip	Warning: the injector is not held on the rail by the clip
14	Gasoline direct injection injector	(see 17B, Petrol injection, Injector rail - Injectors: Removal - Refitting) Warning: the injector is held neither on the rail or on the cylinder head. Do not shock the injector
15	Injector nozzle teflon ring seal	Respect the fitting instructions (Mot.1533)



Repair-11x04x01-02x50-1-3-1.xml



XSL version : 3.02 du 22/07/11

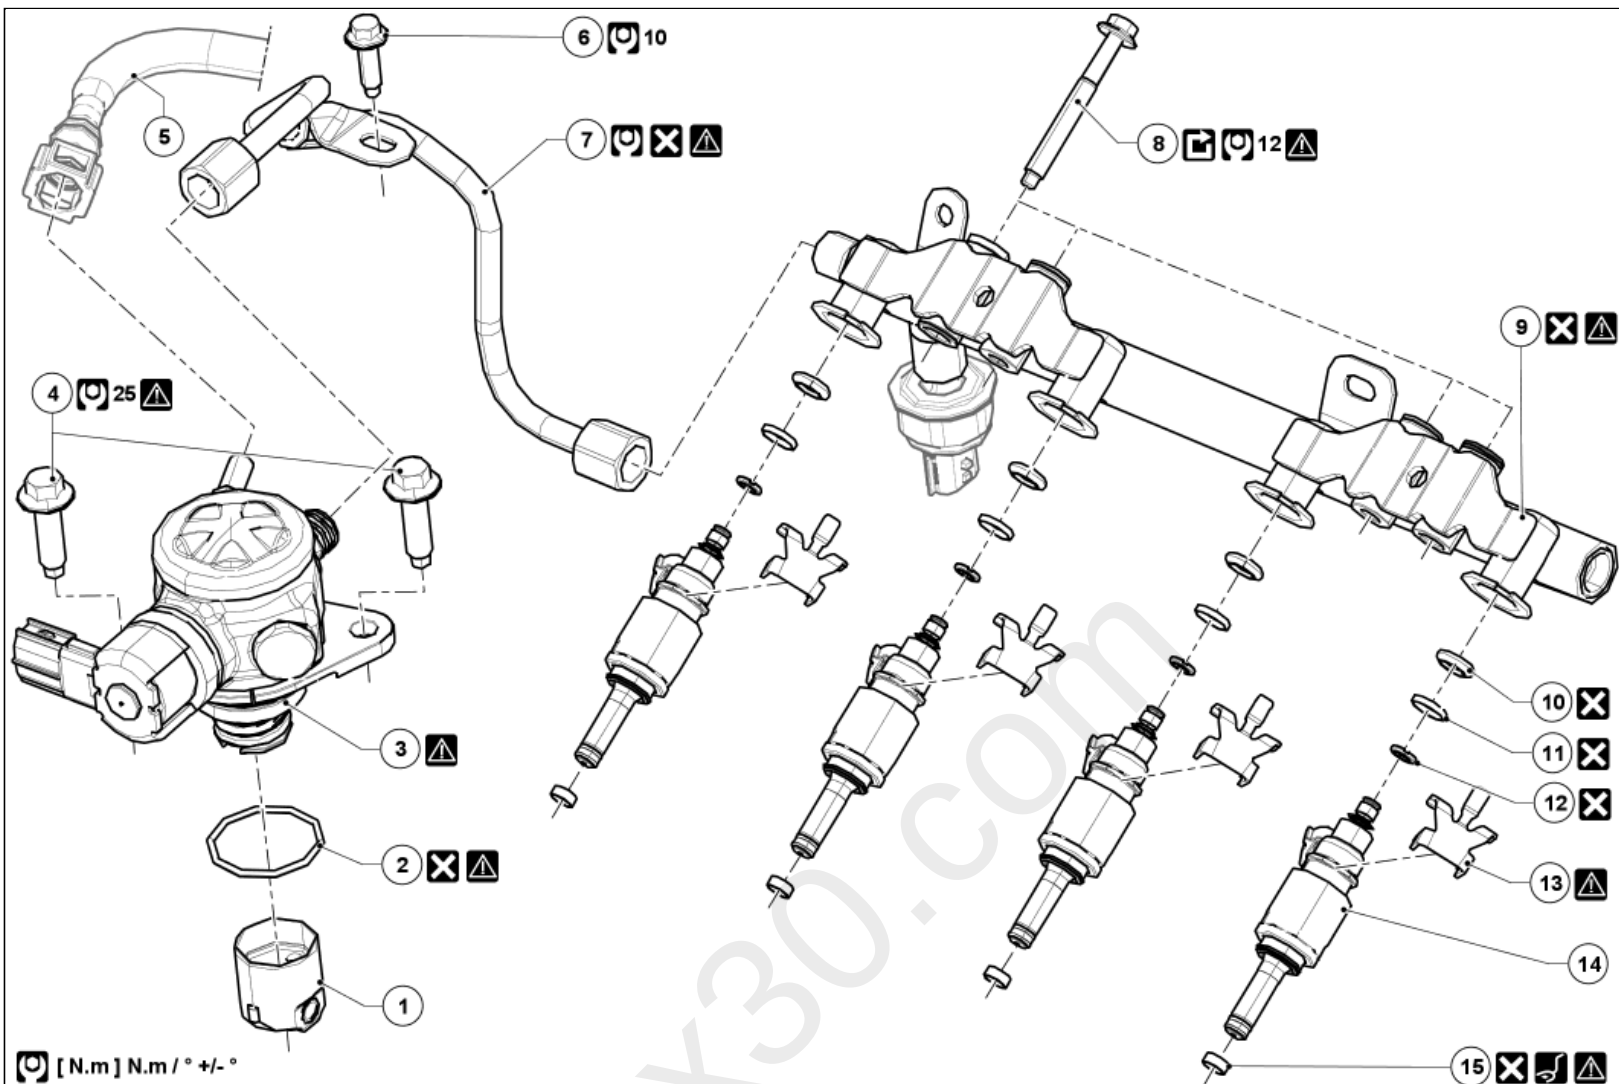


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques: [Tightening torques: General information](#) .