

Locate the earths located near to the weld area [Earths on body: List and location of components](#) .

3)SPECIAL NOTES ON MATING



CAUTION

If the mating faces of the parts to be welded are not accessible, use a GMAW plug weld in place of the original electrical resistance weld [Connections by arc welding under shielding gas: Description](#) (MR 400, 40C, Gas metal arc welded connections (GMAW)).



Repair-40x02x06x04-02x49-1-2-1.xml



XSL version : 3.02 du 22/07/11

RADIO: LIST AND LOCATION OF COMPONENTS



Note, one or more warnings are present in this procedure



Equipment required

Diagnostic tool

1. LIST OF COMPONENTS

1- THE RADIO SYSTEM COMPRISES:

-
- a radio aerial
- front speakers [Front side opening element assembly on the passenger compartment side: Exploded view](#)
- rear speakers [Rear side opening element assembly on the passenger compartment side: Exploded view](#)
- tweeters in the dashboard [Dashboard assembly: Exploded view](#)
- a radio control satellite
- a radio
- an offset multimedia socket
- an "hands-free" microphone

2. LOCATION OF COMPONENTS



CAUTION

To prevent damaging the navigation system, wait 1 minute after switching off the + after ignition feed.

CAUTION




To ensure correct operation:




- do not pinch the aerial cable,
- do not bend the aerial cable,
- do not force the aerial cable when refitting.

1- AERIAL

mcx30.com

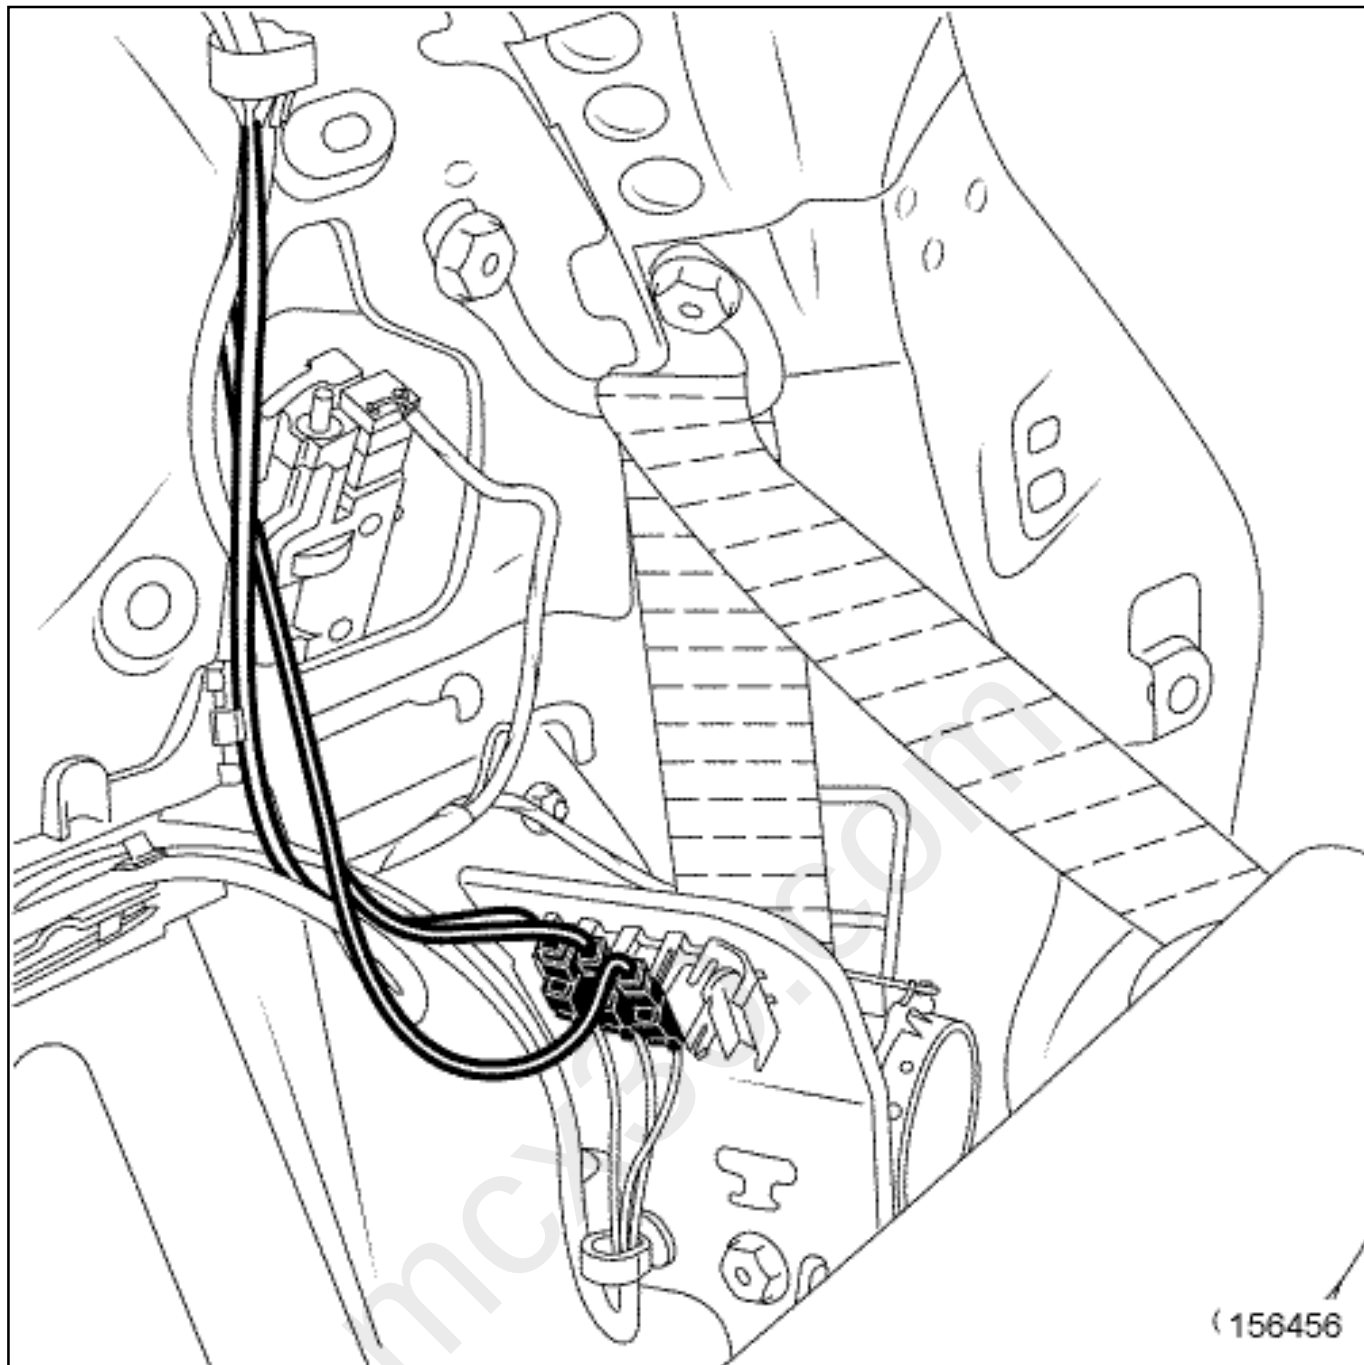

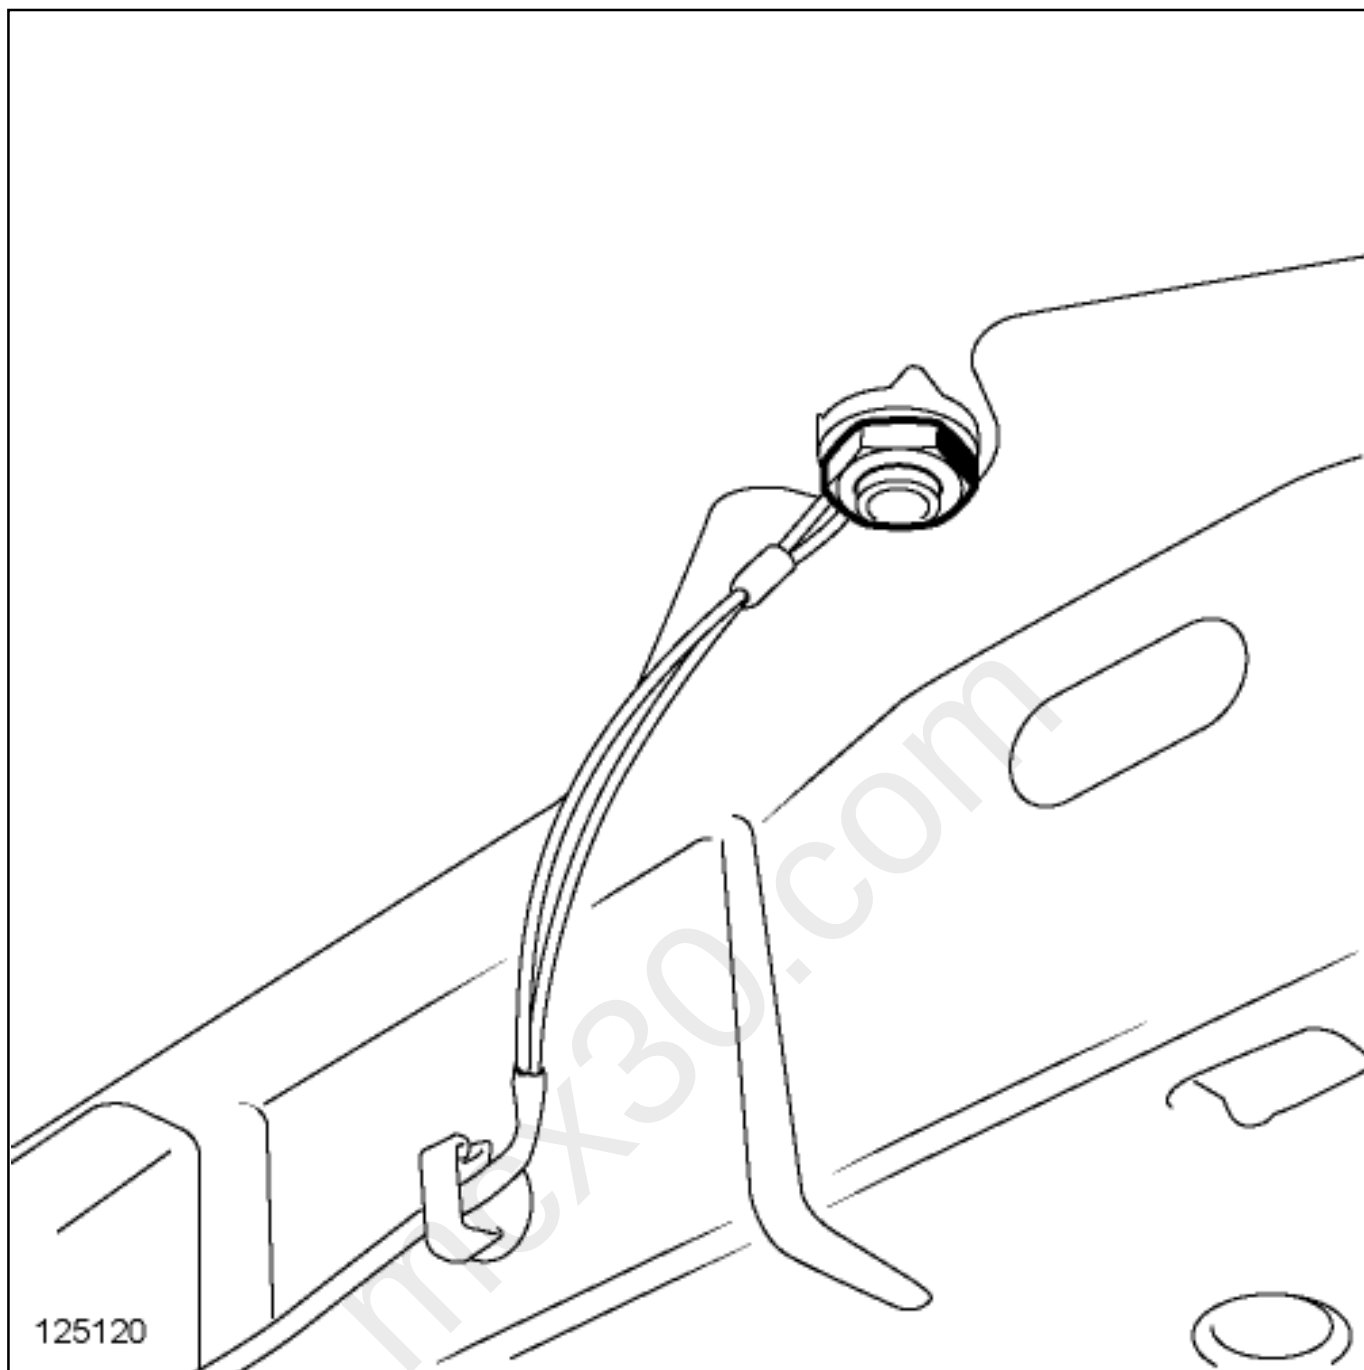

125120

2- RADIO CONTROL SATELLITE