

Clip the rain and light sensor's printed circuit unit onto the new adhesive base.

Clip the rain and light sensor onto the windscreen mounting base using the side clips.

Wait 5 minutes before connecting the rain and light sensor.

Connect the rain and light sensor connector.

3. FINAL OPERATION

Proceed in the reverse order to removal



Repair-80x04x02x11-01x37-1-25-1.xml



XSL version : 3.02 du 22/07/11

REAR AXLE ASSEMBLY: EXPLODED VIEW



Note, one or more warnings are present in this procedure



WARNING

- To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:



(see 33A, Rear axle components, Rear axle components: Precautions for the repair).

Vehicle: Precautions for the repair.

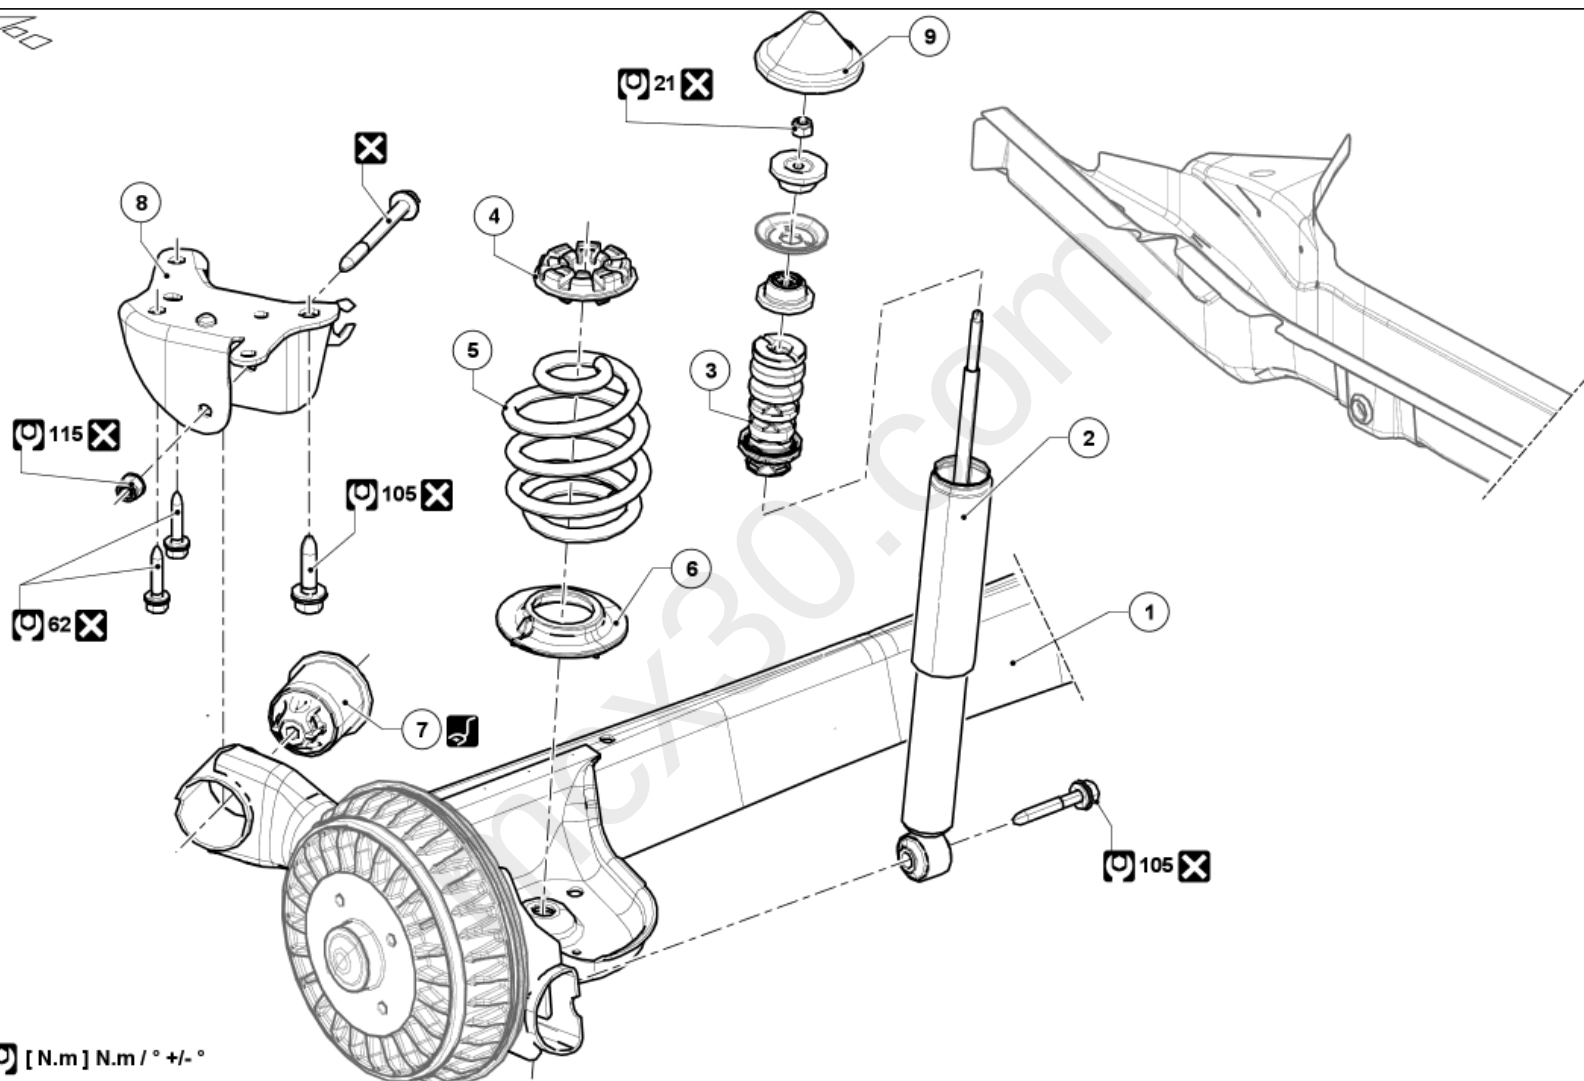


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .