

9	Rear bumper wiring	
10	Proximity radar	Parking distance control: List and location of components
11	Rear bumper mounting	
12	Rear bumper trim	(Car. 1363)

mcx30.com

REAR BUMPER: REMOVAL - REFITTING


Location and specifications (tightening torques, parts always to be replaced, etc.)[\(see 55A, Exterior protection, Rear bumper assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift[Vehicle: Towing and lifting](#) .
- Remove the rear wheels[Rear hub carrier assembly: Exploded view](#) .

mcx30.com

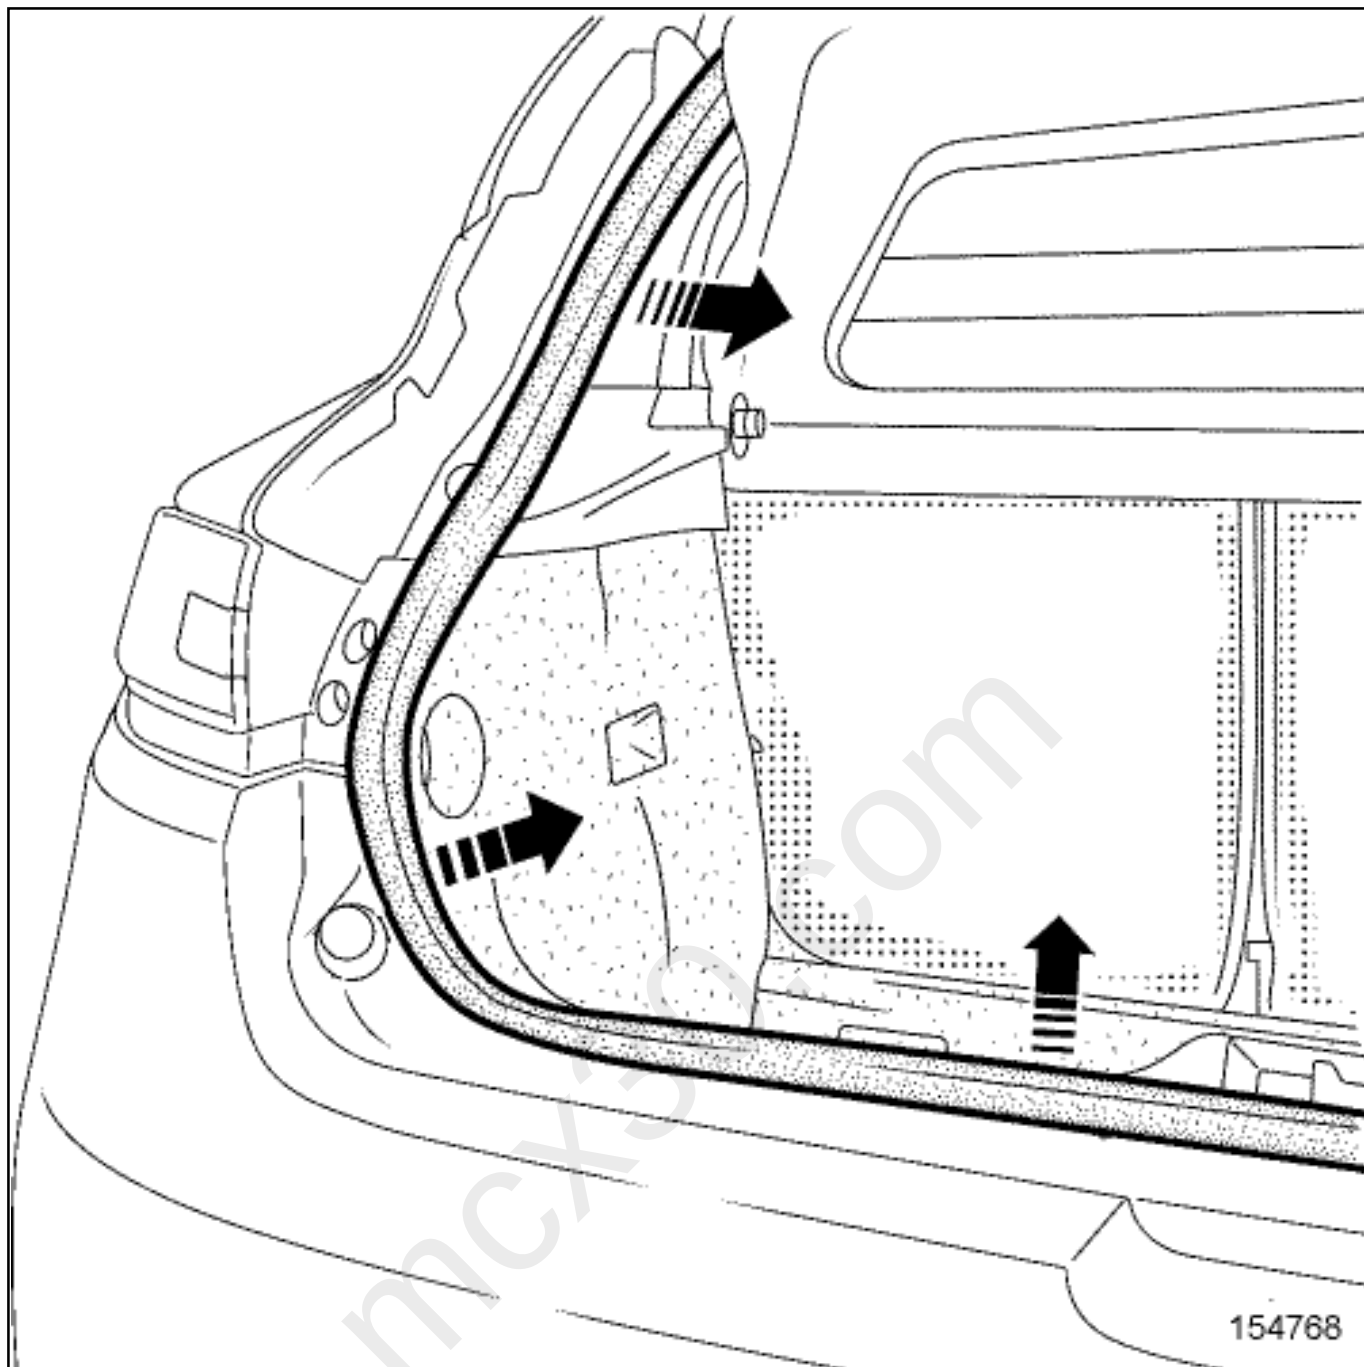


■ Move aside the luggage compartment seal.

■

Remove:

-
- rear side bumper trims([see 55A, Exterior protection, Rear bumper assembly: Exploded view](#)) ,
- the rear lights on wing([Rear signals - lighting assembly: Exploded view](#)) .

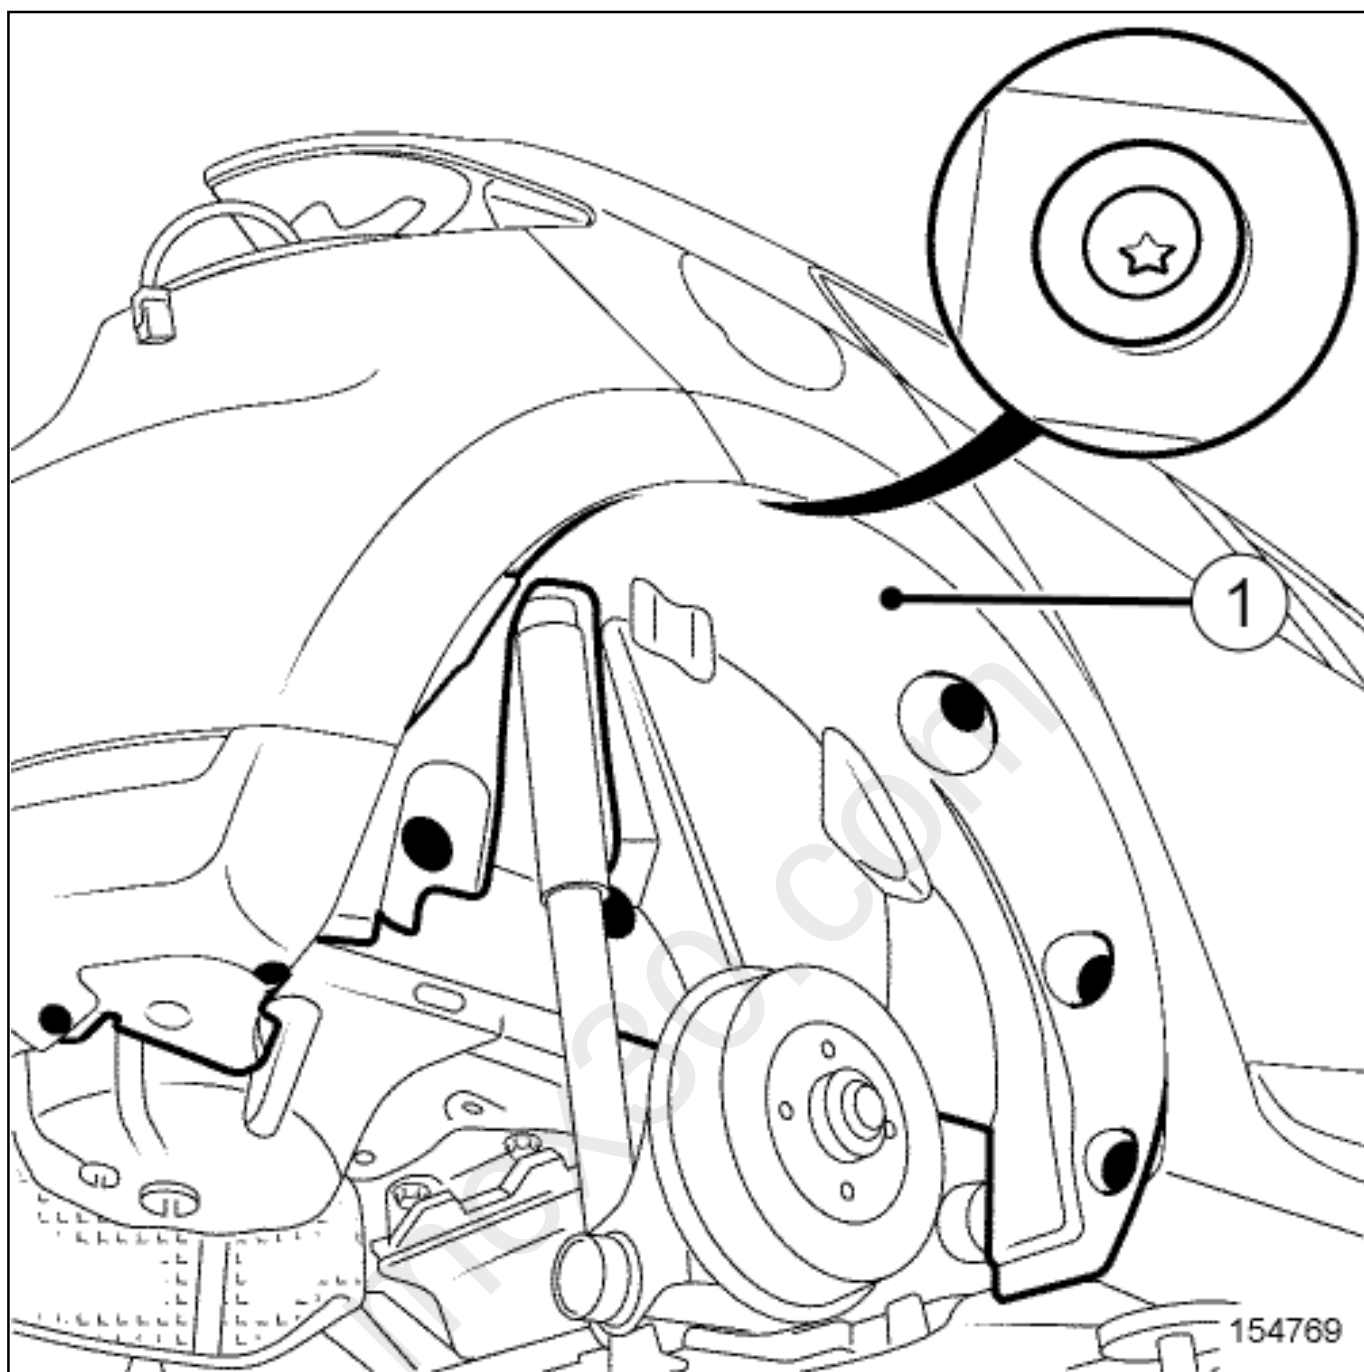

Remove the rear wheel arch liners(1) .

2. REMOVAL OPERATION

Remove the rear bumper screws([see 55A, Exterior protection, Rear bumper assembly: Exploded view](#)) .