



mcx30.com

REAR HUB CARRIER ASSEMBLY: EXPLODED VIEW



Note, one or more warnings are present in this procedure



WARNING

■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:




■

■ [\(see 33A, Rear axle components, Rear axle components: Precautions for the repair\)](#).

■

[Vehicle: Precautions for the repair](#).

mcx30.com

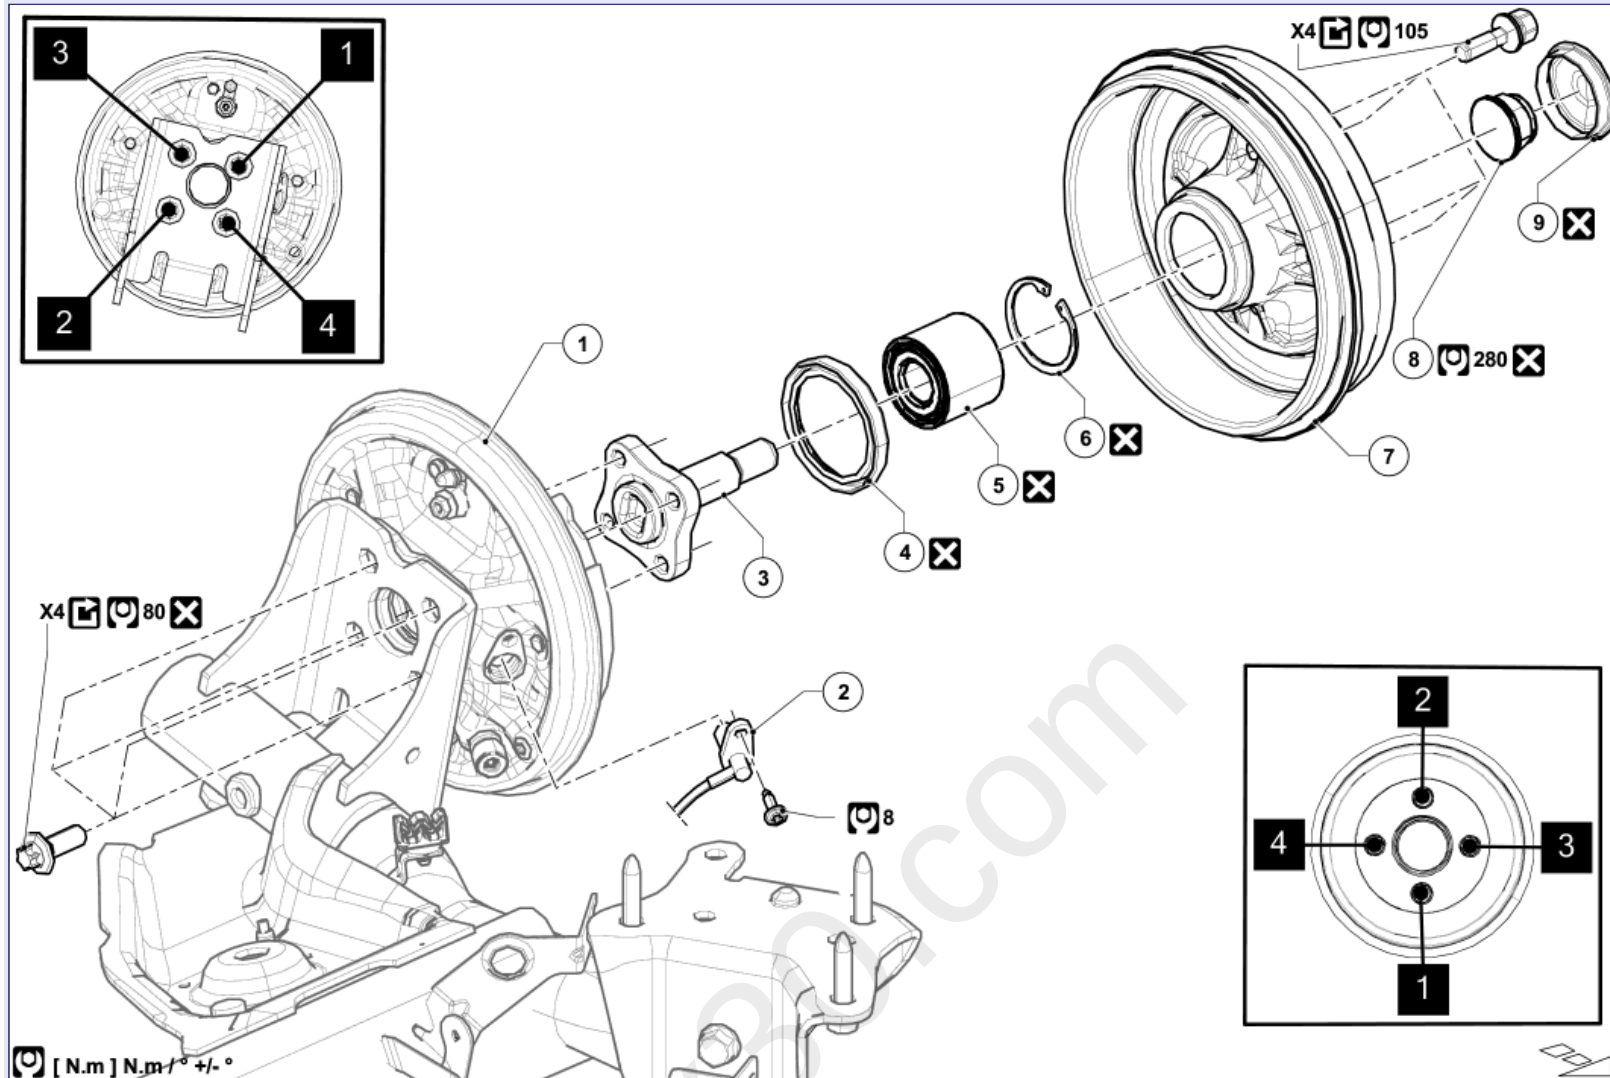

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Rear stub-axle plate	
2	Rear wheel speed sensor	Rear wheel speed sensor: Removal - Refitting
3	Rear stub-axle	
4	Target of rear wheel speed sensor	
5	Rear drum bearing	(see 33A, Rear axle components, Rear drum bearing: Removal - Refitting)
6	Bearing circlip	
7	Rear brake drum	(see 33A, Rear axle components, Rear drum brake assembly : Exploded view)
8	Rear stub-axle nut	
9	Rear stub-axle nut cap	
10	Wheel bolts	Wheel: Removal - Refitting