



XSL version : 3.02 du 22/07/11

mcx30.com


REAROPENINGELEMENT:ADJUSTMENT

Location and specifications (tightening torques, parts always to be replaced, etc.)[Rear opening element mechanism assembly: Exploded view](#) .


ADJUSTMENT VALUES

☐ For all information about tailgate adjustment values[Vehicle panel gaps: Adjustment value](#) .

mcx30.com

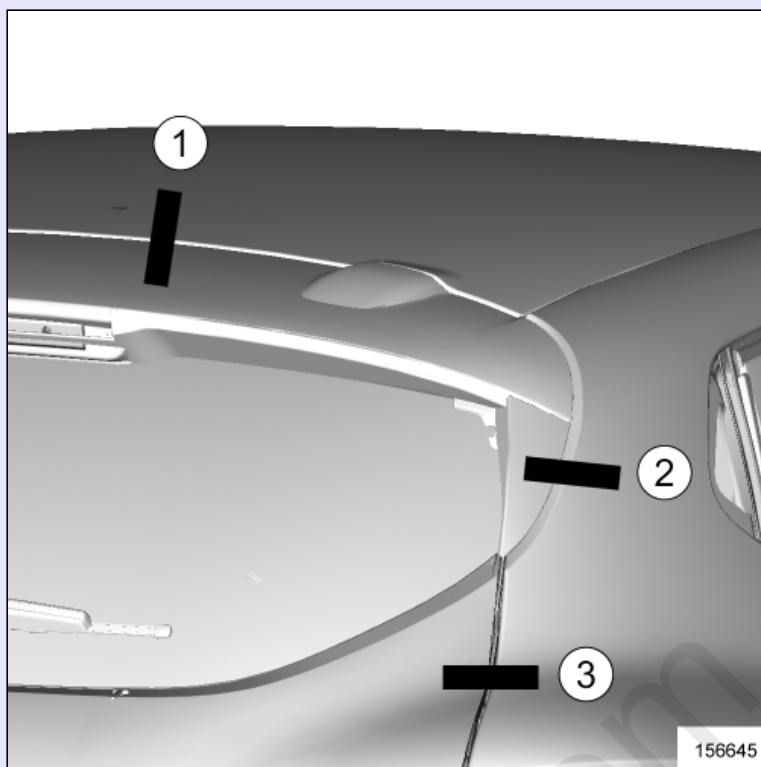


■ Observe the adjustment sequence(1) , (2) , (3) .

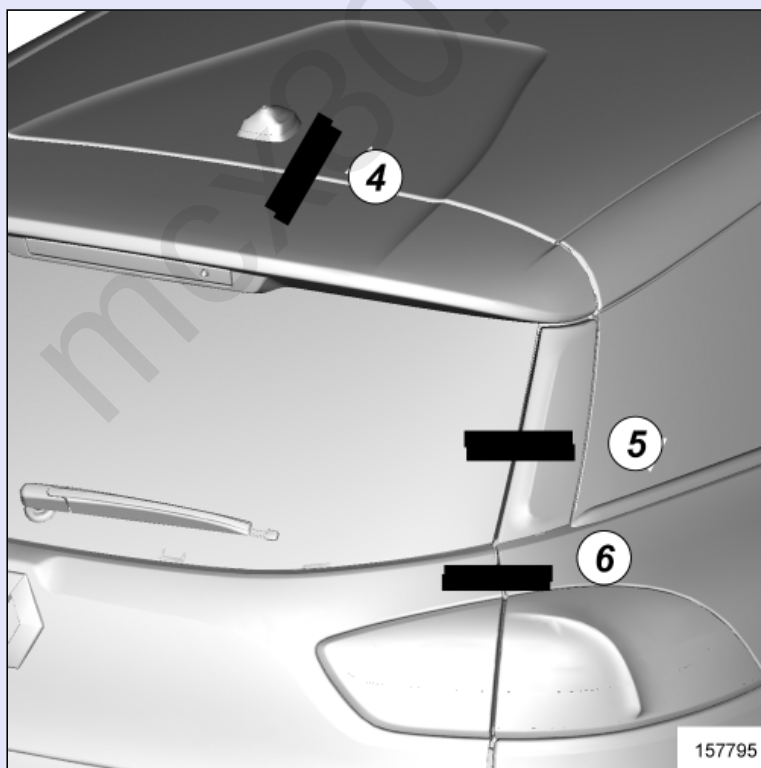

■ Observe the adjustment sequence(4) , (5) , (6) .

ADJUSTMENT

- There are three options for adjusting the tailgate:
- using the tailgate bolts,
 - using the tailgate hinge nuts,
 - using the rear end panel striker plate.

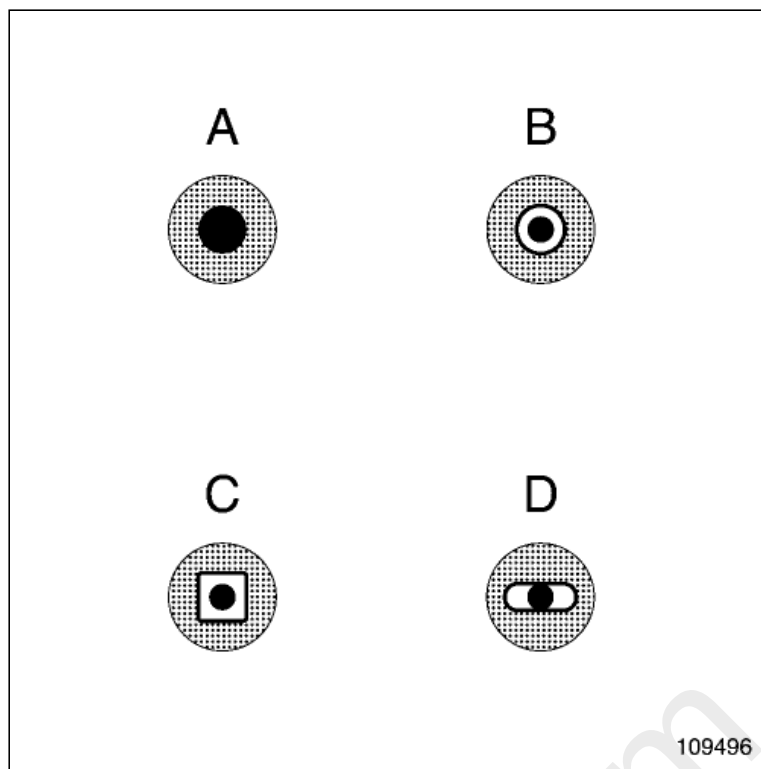


▣ Symbols A, B, C and D show the adjustment options.

The black dot in the centre represents the body of the bolt.


The grey section represents the component to be adjusted.

The white section represents the adjustment area.

1. ADJUSTMENT USING THE TAILGATE BOLTS

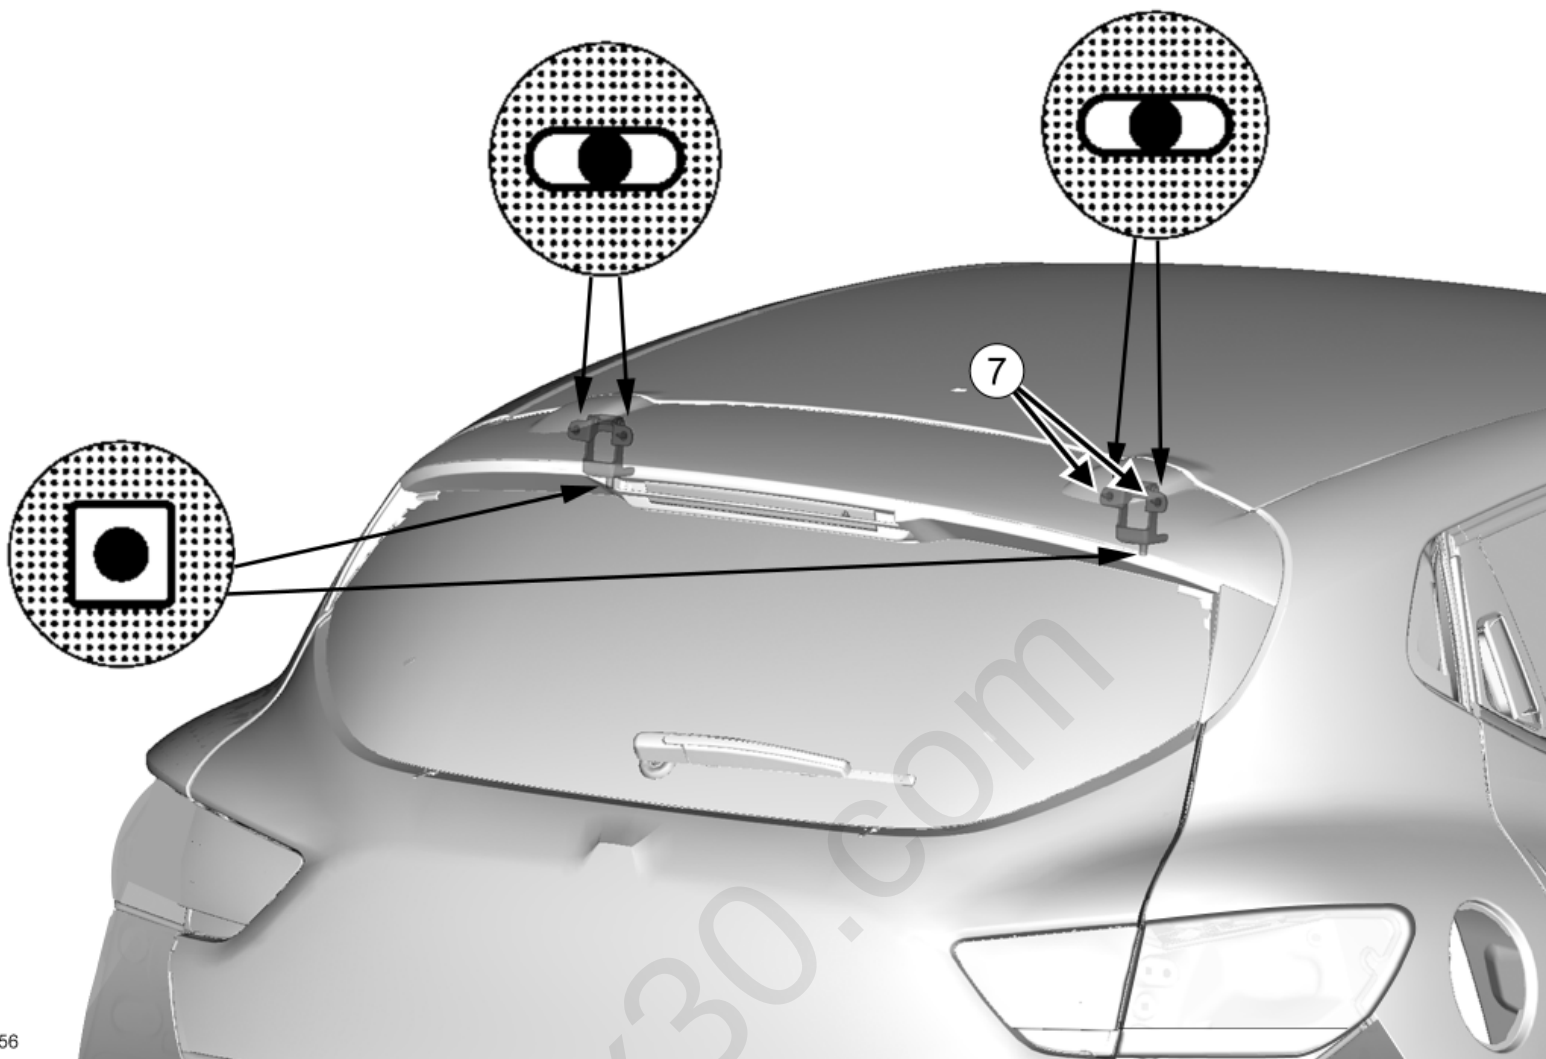

- Undo the tailgate bolts(7) on each side of the vehicle.
- Adjust the tailgate panel gaps.
- Torque tighten the tailgate bolts [Rear opening element mechanism assembly: Exploded view](#).

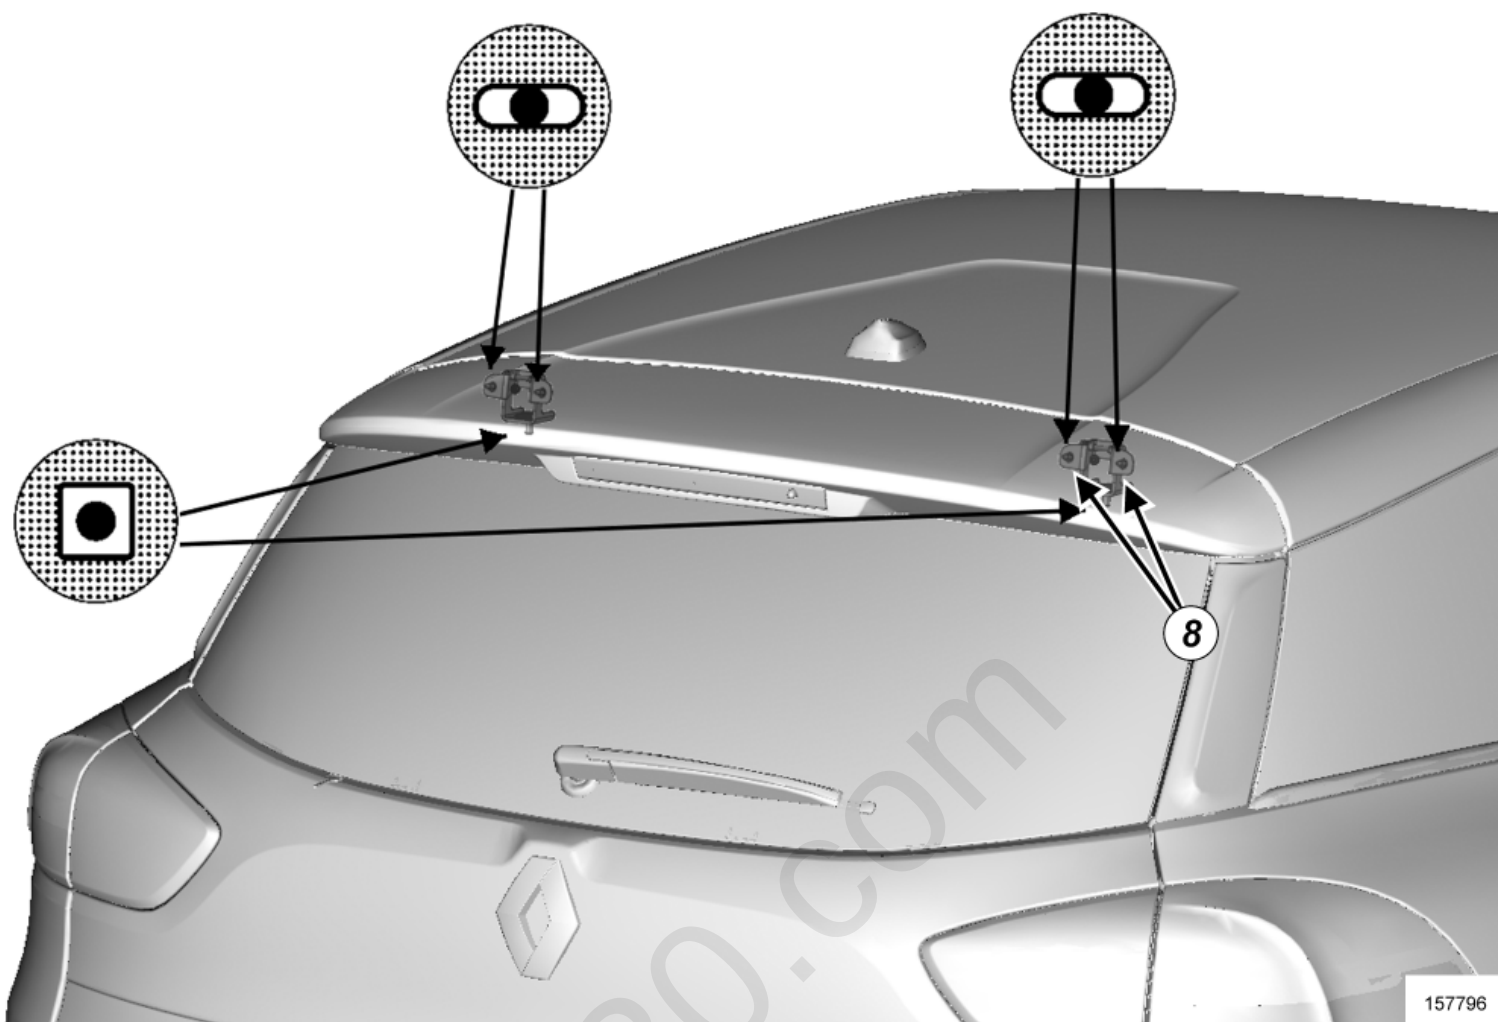


157796

- ❑ Undo the tailgate bolts(8) on each side of the vehicle.
- ❑ Adjust the tailgate panel gaps.
- ❑ Torque tighten the tailgate bolts[Rear opening element mechanism assembly: Exploded view](#) .

2. ADJUSTMENT USING THE HINGE NUTS



- K98(K98)

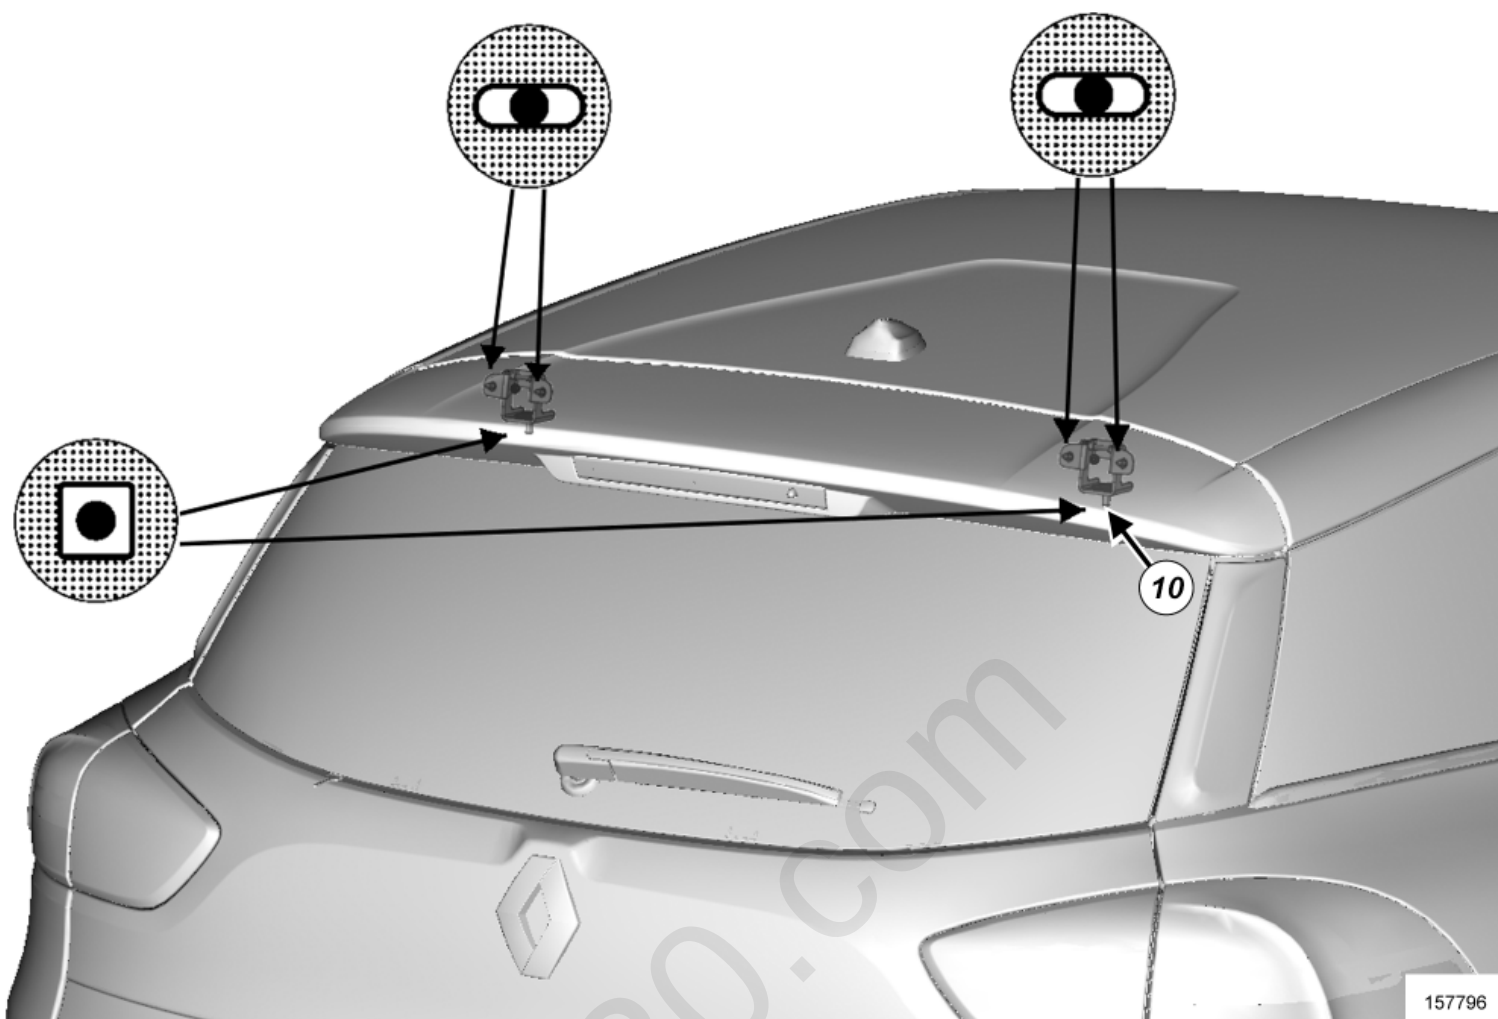

157796

- Undo the hinge nut(10) on each side of the vehicle.
- Adjust the tailgate panel gaps.
- Tighten the hinge nuts.

3. REAR END PANEL STRIKER PLATE ADJUSTMENT

