


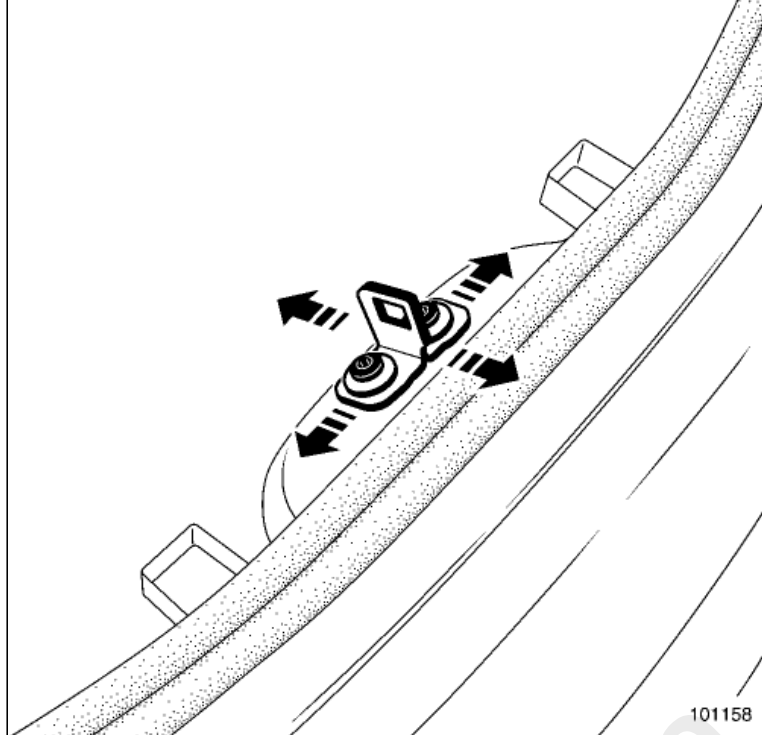


- Loosen the striker plate bolts on the rear end panel.
- Adjust the tailgate panel gaps.
- Tighten the striker plate bolts.

XSL version : 3.02 du 22/07/11

Repair-40x10x25x01-01x67-1-3-1.xml

mcx30.com

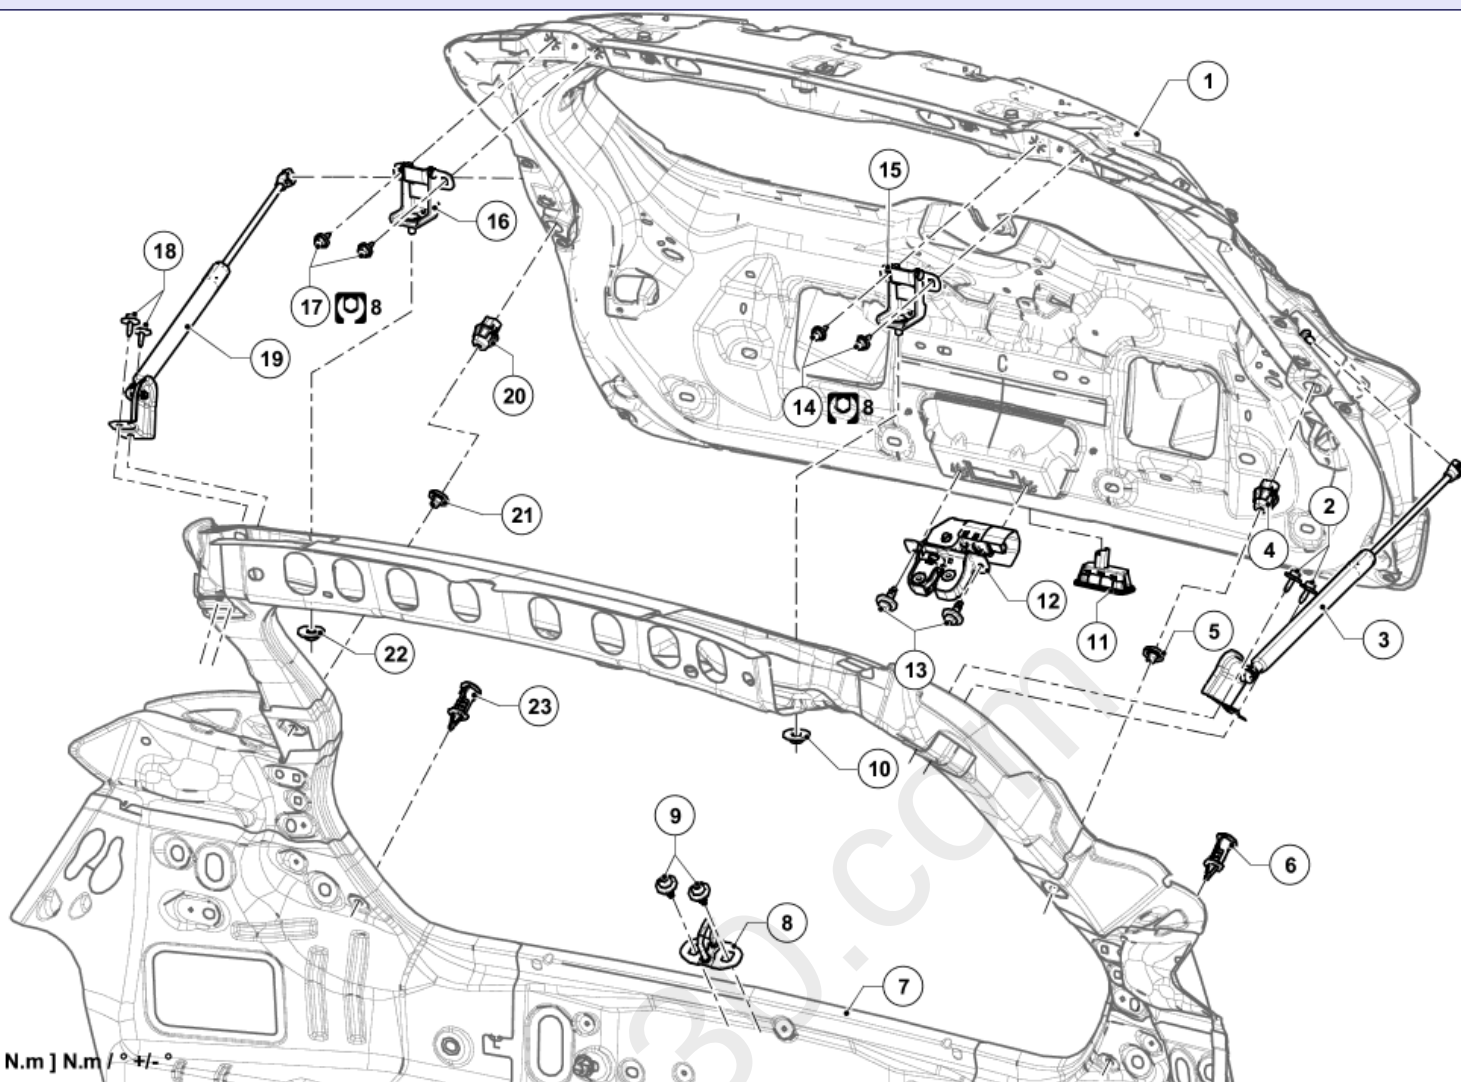

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Rear opening element	Rear opening element: Removal - Refitting
2	Strut ball joint support bolts	
3	Rear opening element strut	
4	Rear opening element stop	
5	Rear opening element stop pad	
6	Rear opening element stop	
7	Body	
8	Rear opening element striker panel	
9	Rear opening element striker panel bolts	
10	Rear opening element hinge nut	

11	Rear opening element opening switch	
12	Rear opening element lock	
13	Rear opening element lock bolts	
14	Rear opening element hinge bolts	
15	Rear opening element hinge	
16	Rear opening element hinge	
17	Rear opening element hinge bolts	
18	Strut ball joint support bolts	
19	Rear opening element strut	
20	Rear opening element stop	
21	Rear opening element stop pad	
22	Rear opening element hinge nut	
23	Rear opening element stop	



[Illustration key: Description .](#)

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information .](#)

Marks	Designations	Informations
1	Rear opening element hinge	
2	Rear opening element hinge bolts	
3	Rear opening element strut	
4	Strut ball joint support bolts	
5	Rear opening element stop	
6	Rear opening element stop pad	
7	Rear opening element hinge nut	
8	Rear opening element stop	
9	Body	