

2. REFITTING OPERATION

☐ Proceed in the reverse order to removal.



Repair-70x04x02x01-01x37-1-4-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

REAR QUARTER PANEL WINDOW: REMOVAL - REFITTING



Note:

The seal of the rear quarter panel window is moulded onto the rear quarter panel window. If the seal has deteriorated, always replace the rear quarter panel window.

REMOVAL

1. REMOVAL PREPARATION OPERATION

■ Remove [Interior body side trim assembly: Exploded view](#) :

- the rear inner sill upper trim,
- the rear parcel shelf side trim,
-

the rear quarter panel trim.



Protect the area around the rear quarter panel window with masking tape.

2. REMOVAL OPERATION



Cut the cement bead [Window bonding tool: Use](#) and [Window detachment: Description](#) .



Remove the rear quarter panel window.

REFITTING

1. REFITTING PREPARATION OPERATION



For preparation and bonding [Products for preparing and bonding windows: Description](#) .