



mcx30.com

REFRIGERANT CIRCUIT PIPE SEAL: CLEANING



Note, one or more warnings are present in this procedure



Equipment required

compressed air nozzle



WARNING

Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions [Vehicle: Precautions for the repair](#)



WARNING



To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:




[\(see 62A, Air conditioning, Air conditioning: Precautions for the repair\)](#)

[Vehicle: Precautions for the repair](#)


CLEANING



Insert the blanking plugs.

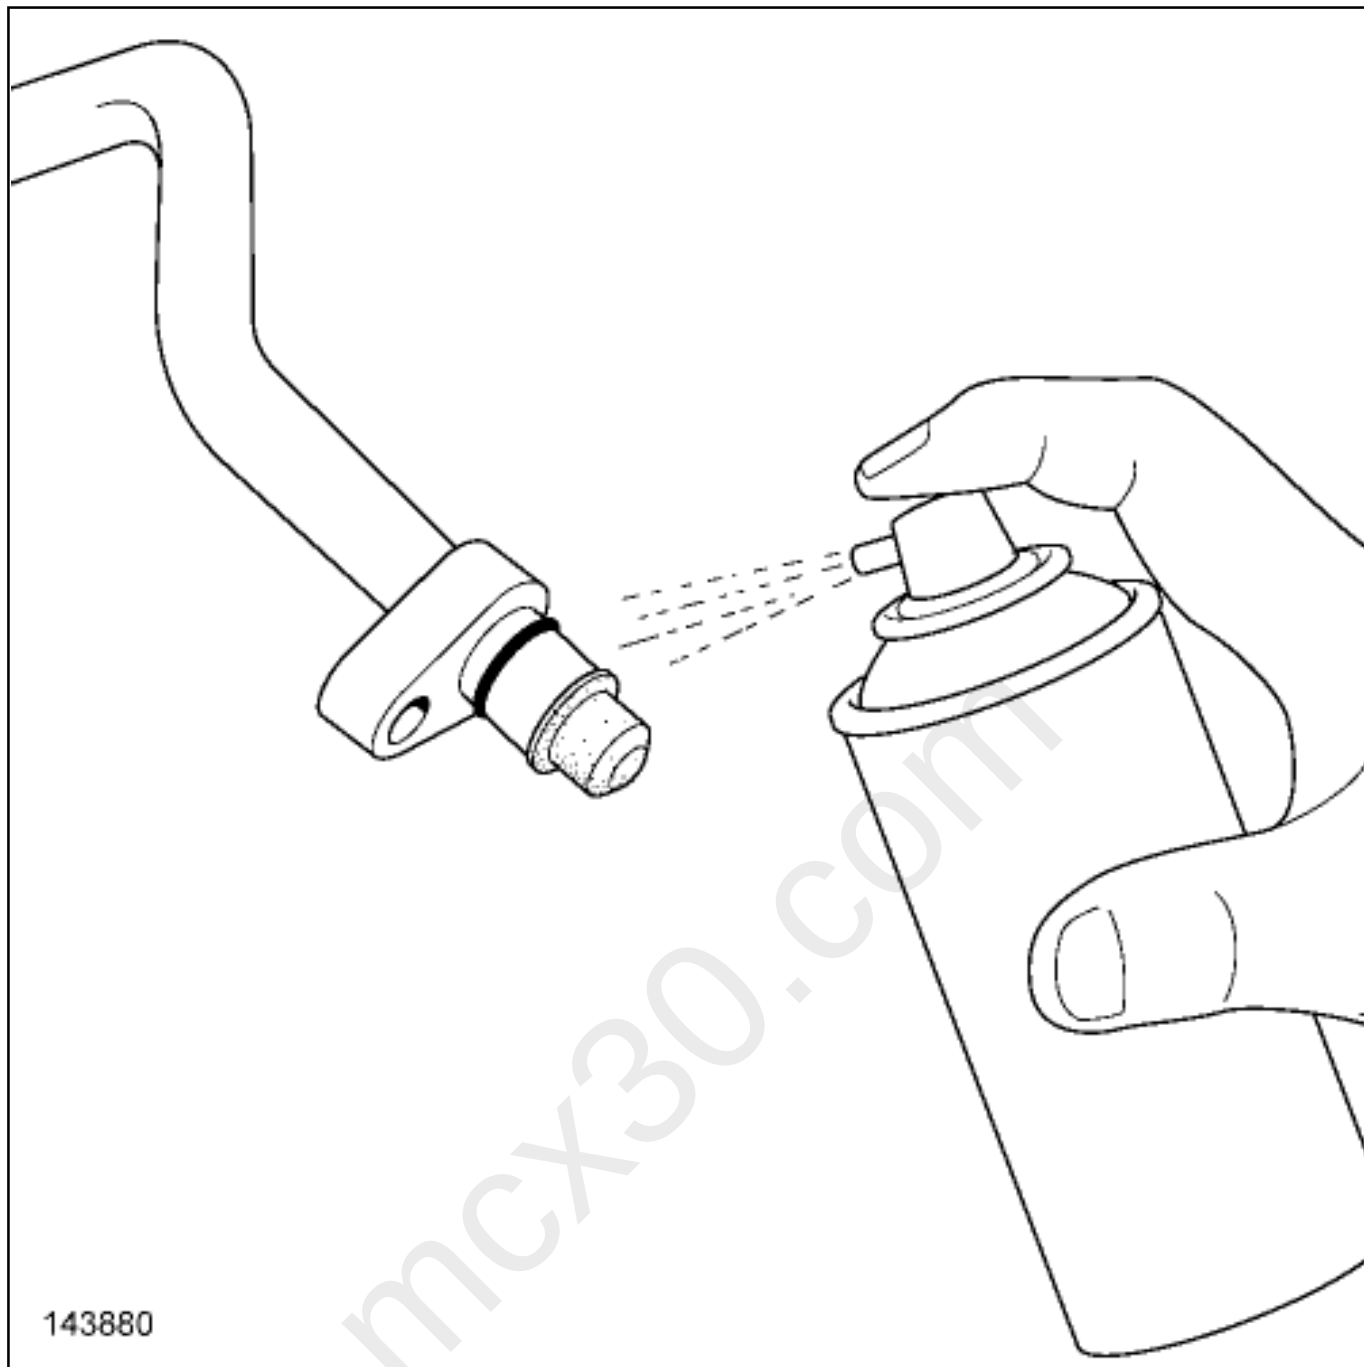

Clean the surface and the seals of the connecting pipes using ENGINE CLEANER [Vehicle: Parts and consumables for the repair](#) .

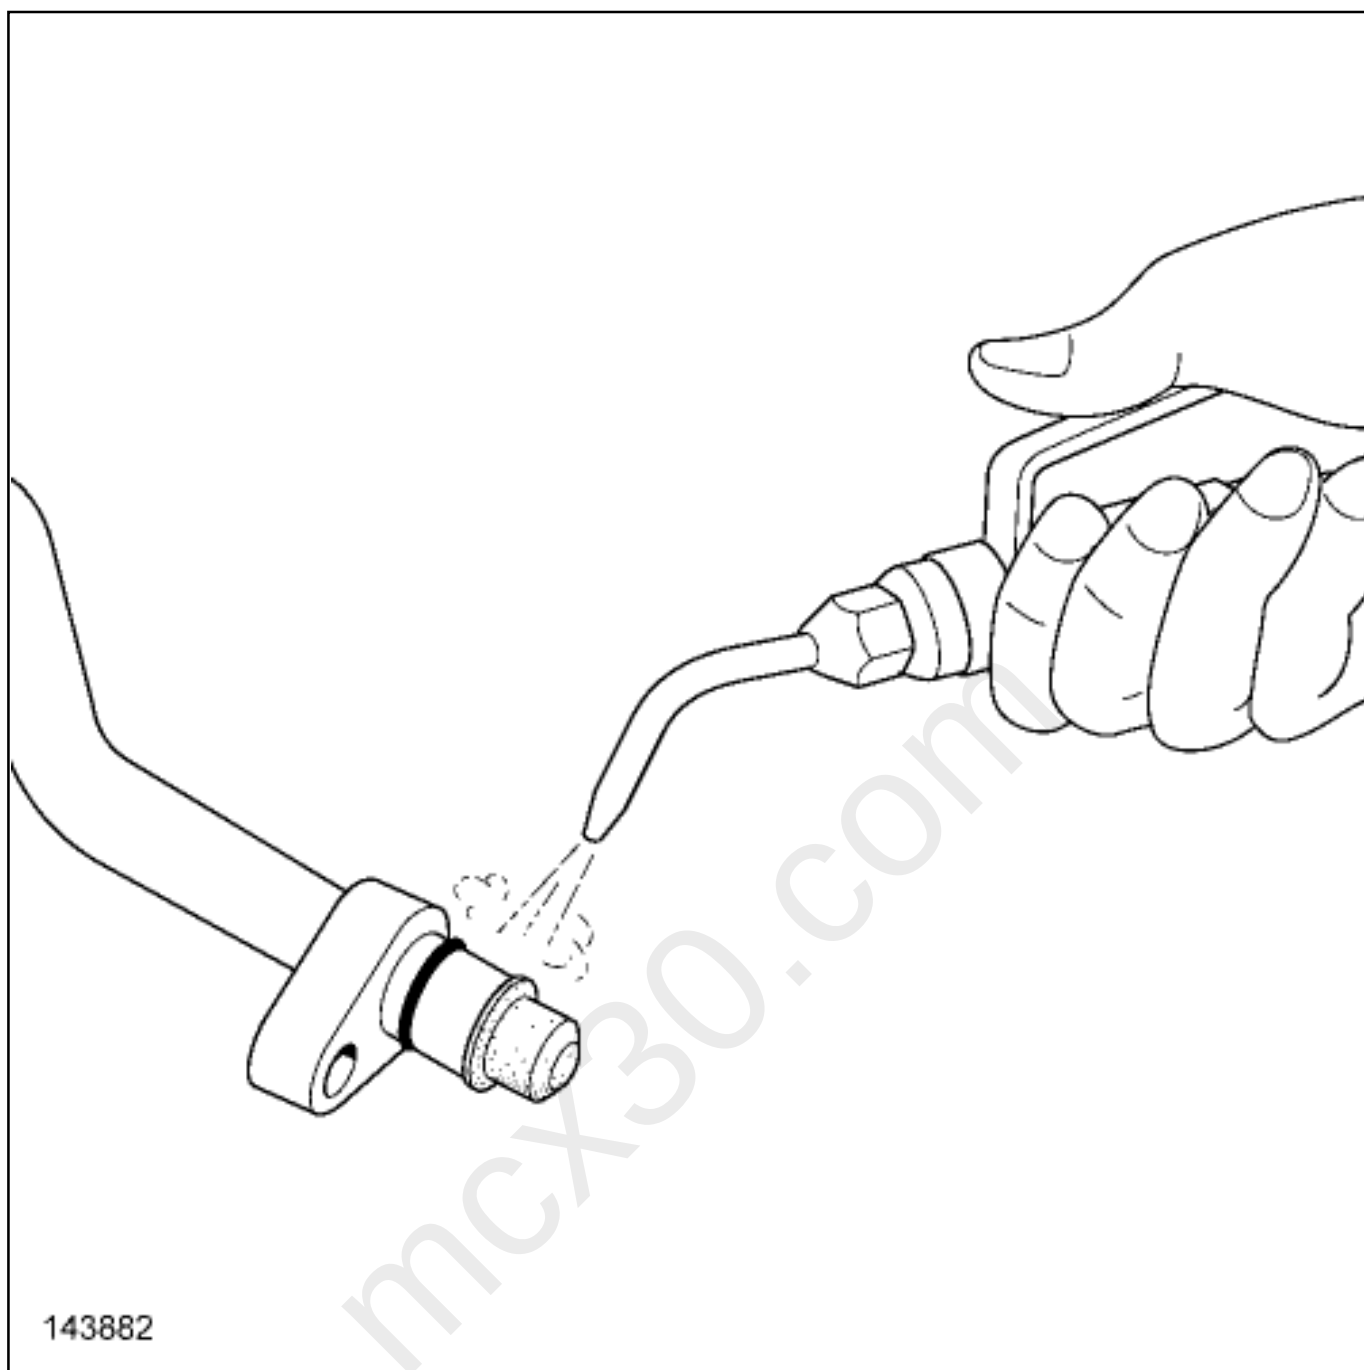

Blow using a compressed air nozzle on the surface and the seals of the connecting pipes.

Lubricate the surface and the seals of the connecting pipes with air conditioning oil ([see 62A, Air conditioning, Air conditioning: Parts and consumables for the repair](#)) .

Remove the blanking plugs.