

Refit the seal on the connecting pipe.

2. FINAL OPERATION

Proceed in the reverse order to removal.

Note:



A summary table gives the quantities of refrigerant in the system according to the engine types ([see 62A, Air conditioning, Air conditioning: Parts and consumables for the repair](#)).

Connect the battery ([Battery: Removal - Refitting](#)).

Perform the following operations:

- refill the refrigerant circuit using the refrigerant charging station ([see 62A, Air conditioning, Refrigerant circuit: Draining - Filling](#)),

■ check for leaks ([see 62A, Air conditioning, Refrigerant circuit: Check](#)).

Check that the air conditioning system is operating correctly ([see 62A, Air conditioning, Air conditioning: Check](#)).



Repair-30x02x02x52-01x37-1-3-1.xml



REFRIGERANT PIPE SEAL: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



Special tooling required

Set of trim removal levers.

Car. 1363

Equipment required

refrigerant charging station



WARNING

Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions [Vehicle: Precautions for the repair](#)



WARNING



To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:



(see 62A, Air conditioning, Air conditioning: Precautions for the repair)



[Vehicle: Precautions for the repair](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION



Drain the refrigerant circuit using the refrigerant charging station [\(see 62A, Air conditioning, Refrigerant circuit: Draining - Filling\)](#) .

Disconnect the battery [Battery: Removal - Refitting](#) .


Remove the connecting pipe concerned:

-
- (see **Condenser - evaporator connecting pipe: Removal - Refitting**)
- [\(see 62A, Air conditioning, Condenser - expansion valve connecting pipe: Removal - Refitting\)](#)
-
- (see **Rear condenser - front condenser connecting pipe: Removal - Refitting**)
-
- (see **Evaporator - dehydrator reservoir connecting pipe: Removal - Refitting**)
-
- (see **Compressor - rear condenser connecting pipe: Removal - Refitting**)
-
- (see **Condenser - evaporator connecting pipe: Removal - Refitting**)
-
- (see **Compressor - dehydrator reservoir connecting pipe: Removal - Refitting**)
-
- (see **Dehydrator reservoir - rear expansion valve connecting pipe: Removal - Refitting**)
-
- (see **Main expansion valve - additional expansion valve pipe: Removal - Refitting**)
- [\(see 62A, Air conditioning, Expansion valve - intermediate pipe connecting pipe at the expansion valve outlet: Removal - Refitting\)](#)
-
- (see **Dehydrator reservoir - expansion valve connecting pipe: Removal - Refitting**)
-
- (see **Condenser - dehydrator reservoir connecting pipe: Removal - Refitting**)
-
- (see **Expansion valve - compressor connecting pipe: Removal - Refitting**)
-
- (see **Expansion valve - rear expansion valve connecting pipe: Removal - Refitting**)
-
- (see **Rear expansion valve - compressor connecting pipe: Removal - Refitting**)

■ [\(see 62A, Air conditioning, Compressor - condenser connecting pipe: Removal - Refitting\)](#)


[\(see 62A, Air conditioning, Compressor - intermediate pipe connecting pipe: Removal - Refitting\)](#)

2. OPERATION FOR REMOVAL OF PART CONCERNED

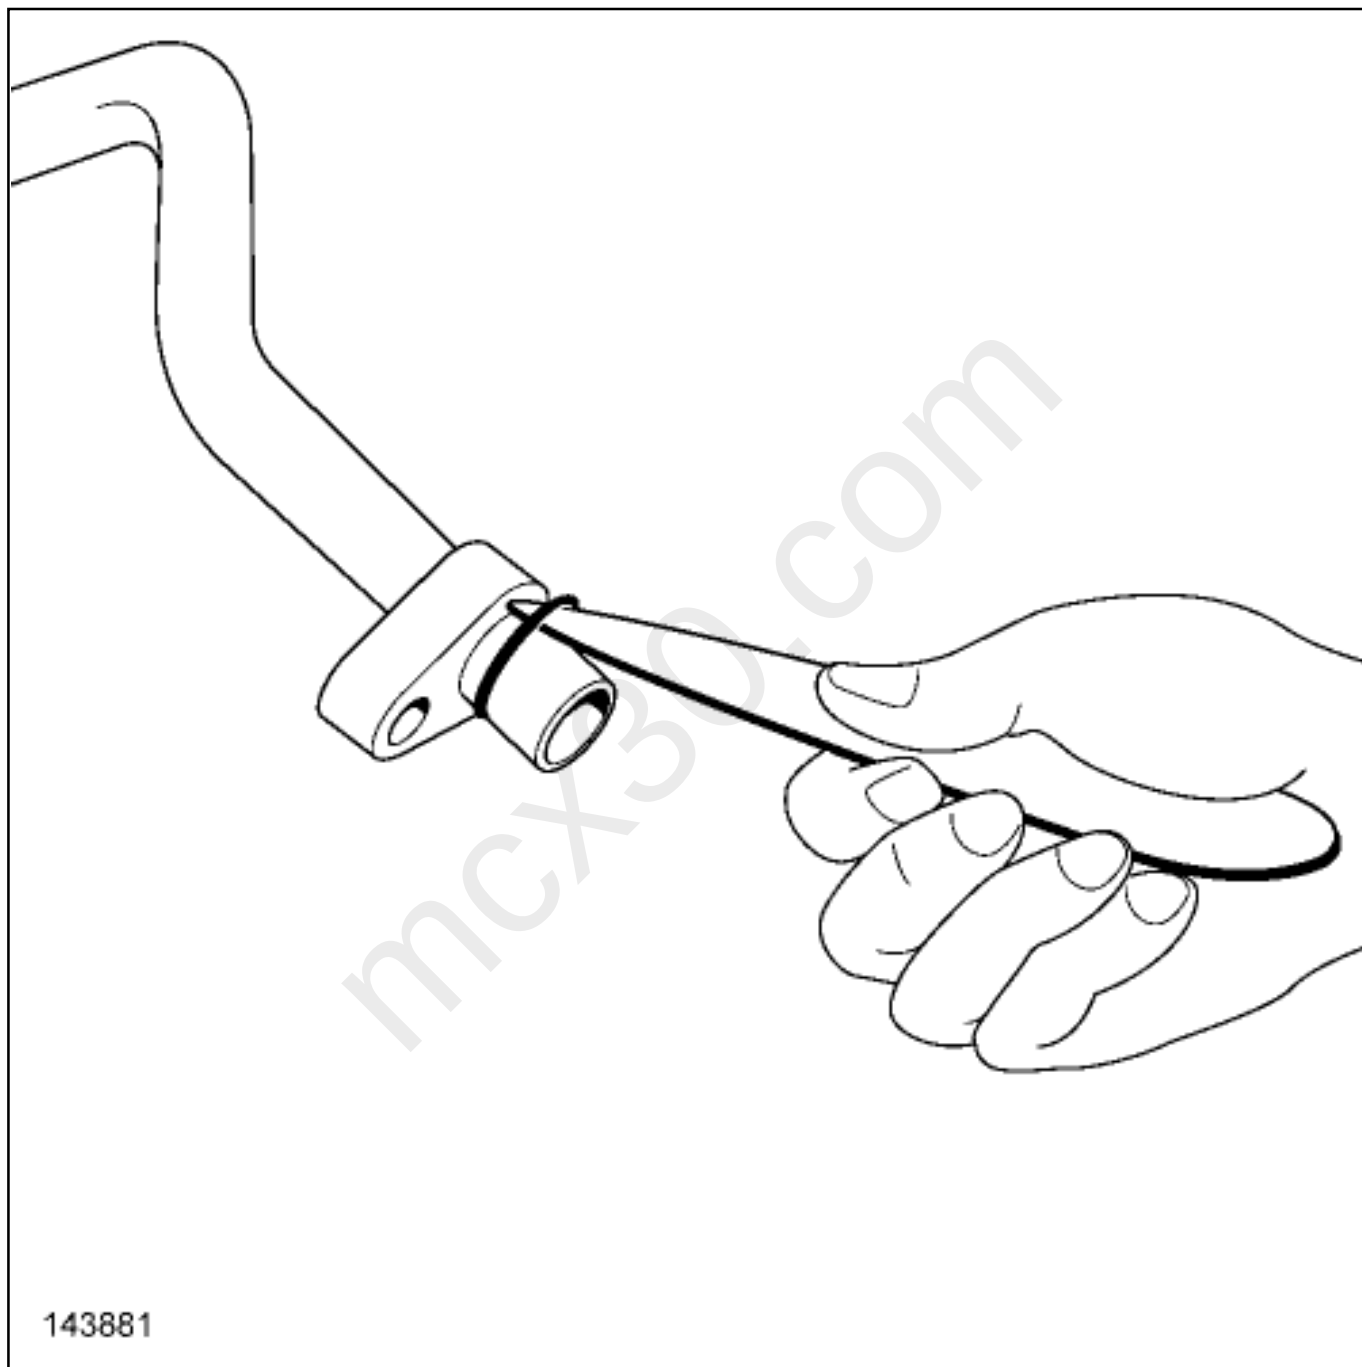

■ Remove the seal from the connecting pipe using the toolSet of trim removal levers.([Car. 1363](#)) .

Fit blanking plugs.

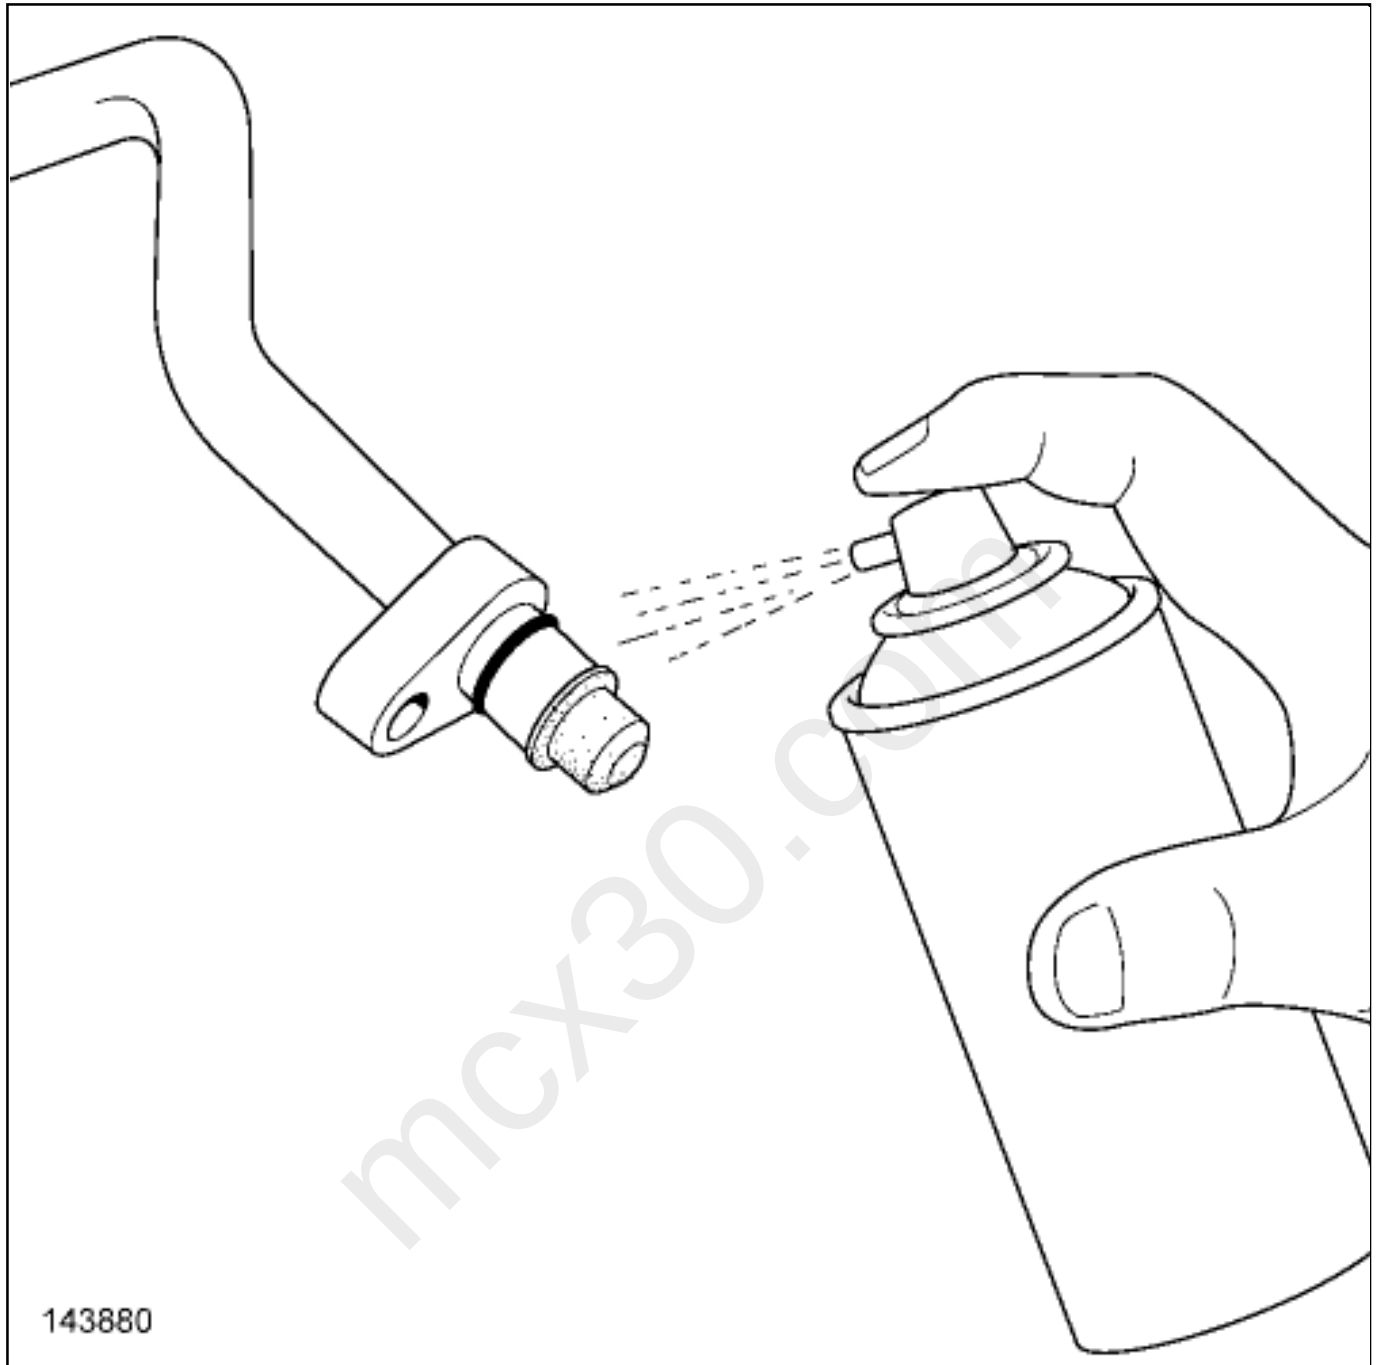

Clean the surface of the pipe([see 62A, Air conditioning, Refrigerant circuit pipe seal: Cleaning](#)) .

REFITTING

1. REFITTING OPERATION FOR PART CONCERNED