



Torque tighten the upstream oxygen sensor connector bracket bolts [Exhaust assembly in engine compartment: Exploded view](#) .



Proceed in the reverse order to removal.



Top up with engine oil recommended by the manufacturer [Engine oil - Oil filter : Draining - Filling](#) .



Repair-10x02x01x09-01x37-1-125-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com


ROOF BAR: REMOVAL - REFITTING


REMOVAL

1. REMOVAL PREPARATION OPERATION

-  Remove [Roof trim assembly: Exploded view](#) :
- the grab handles,
 - the headlining partially.


2. REMOVAL OPERATION

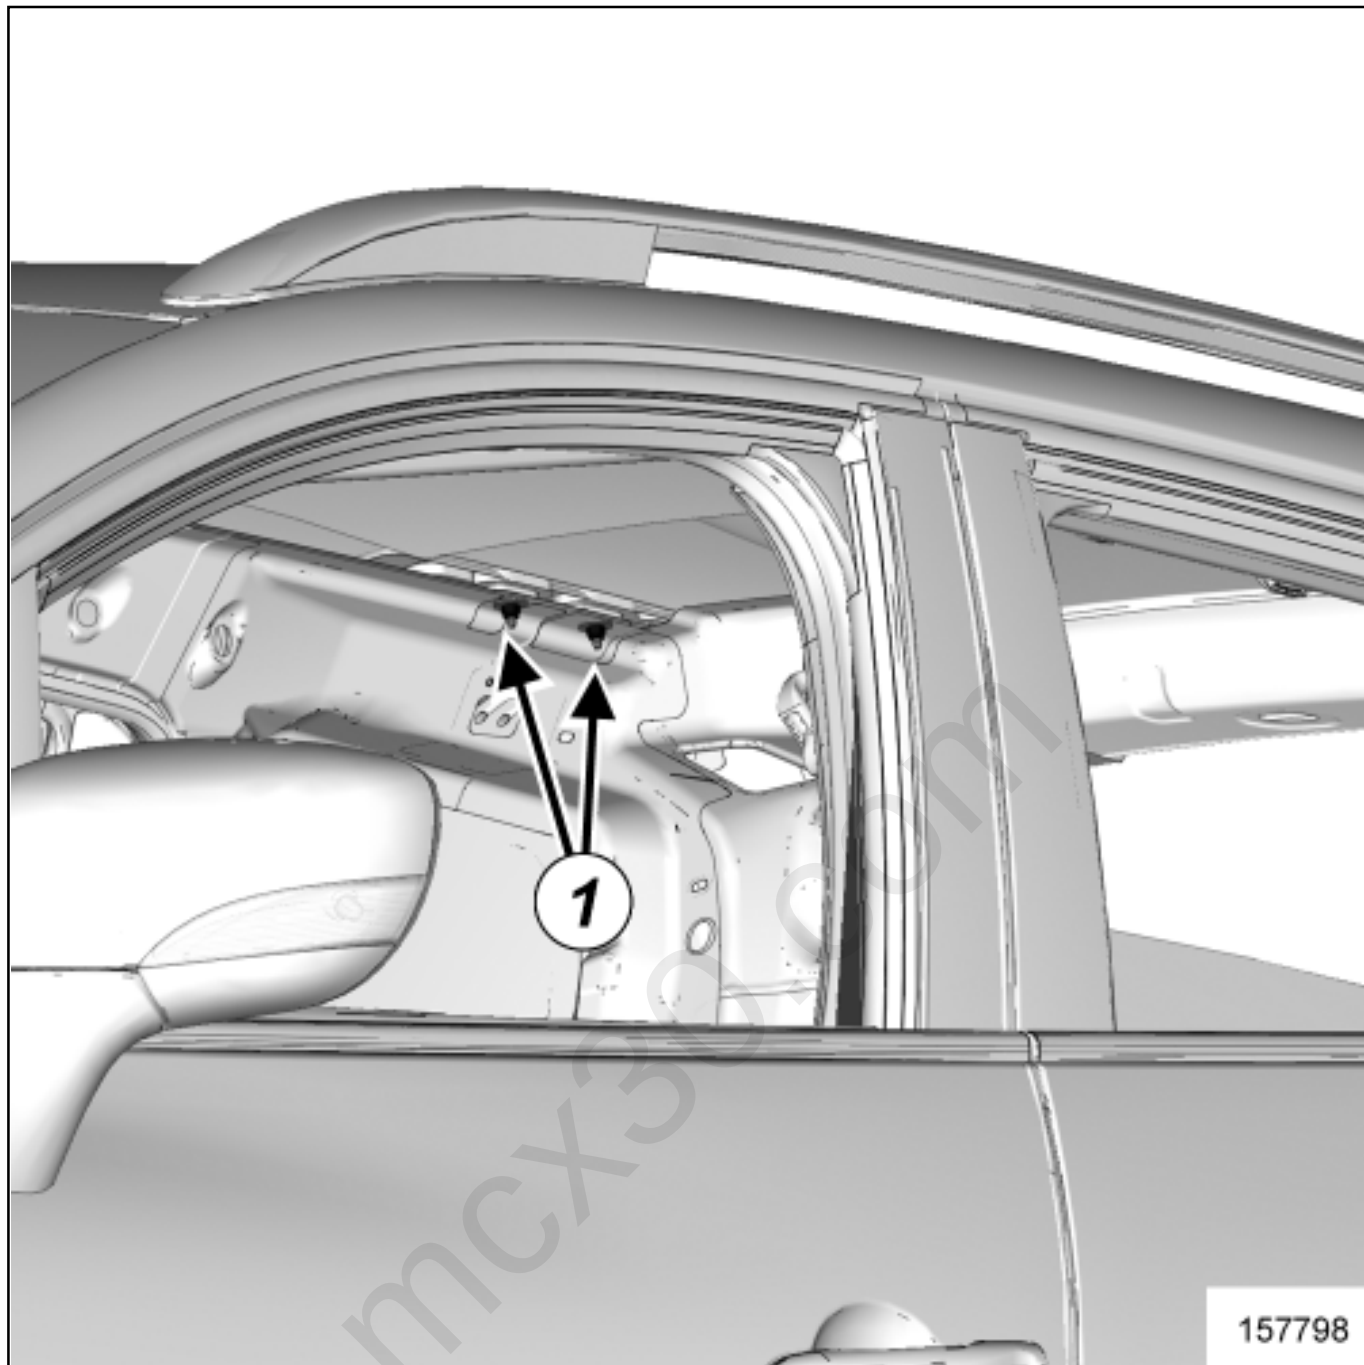

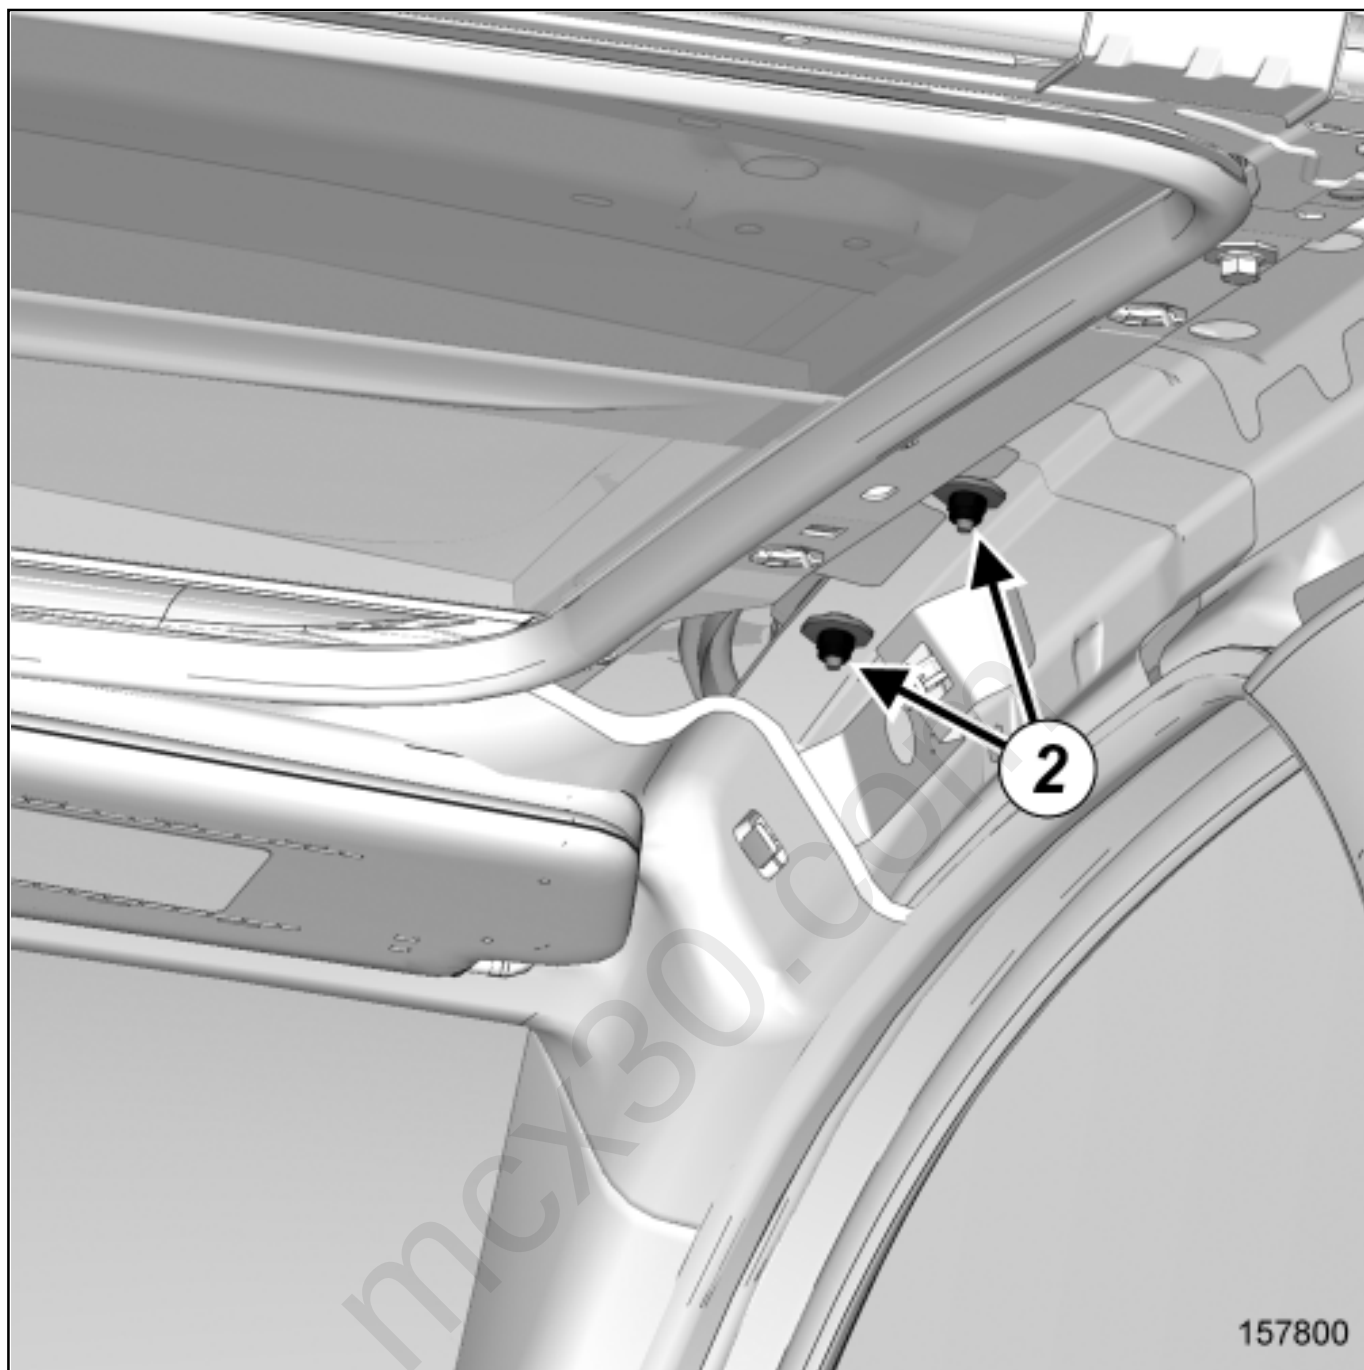

Remove:

- the rear roof bar nuts(1) ,
- the front roof bar nuts(2) .

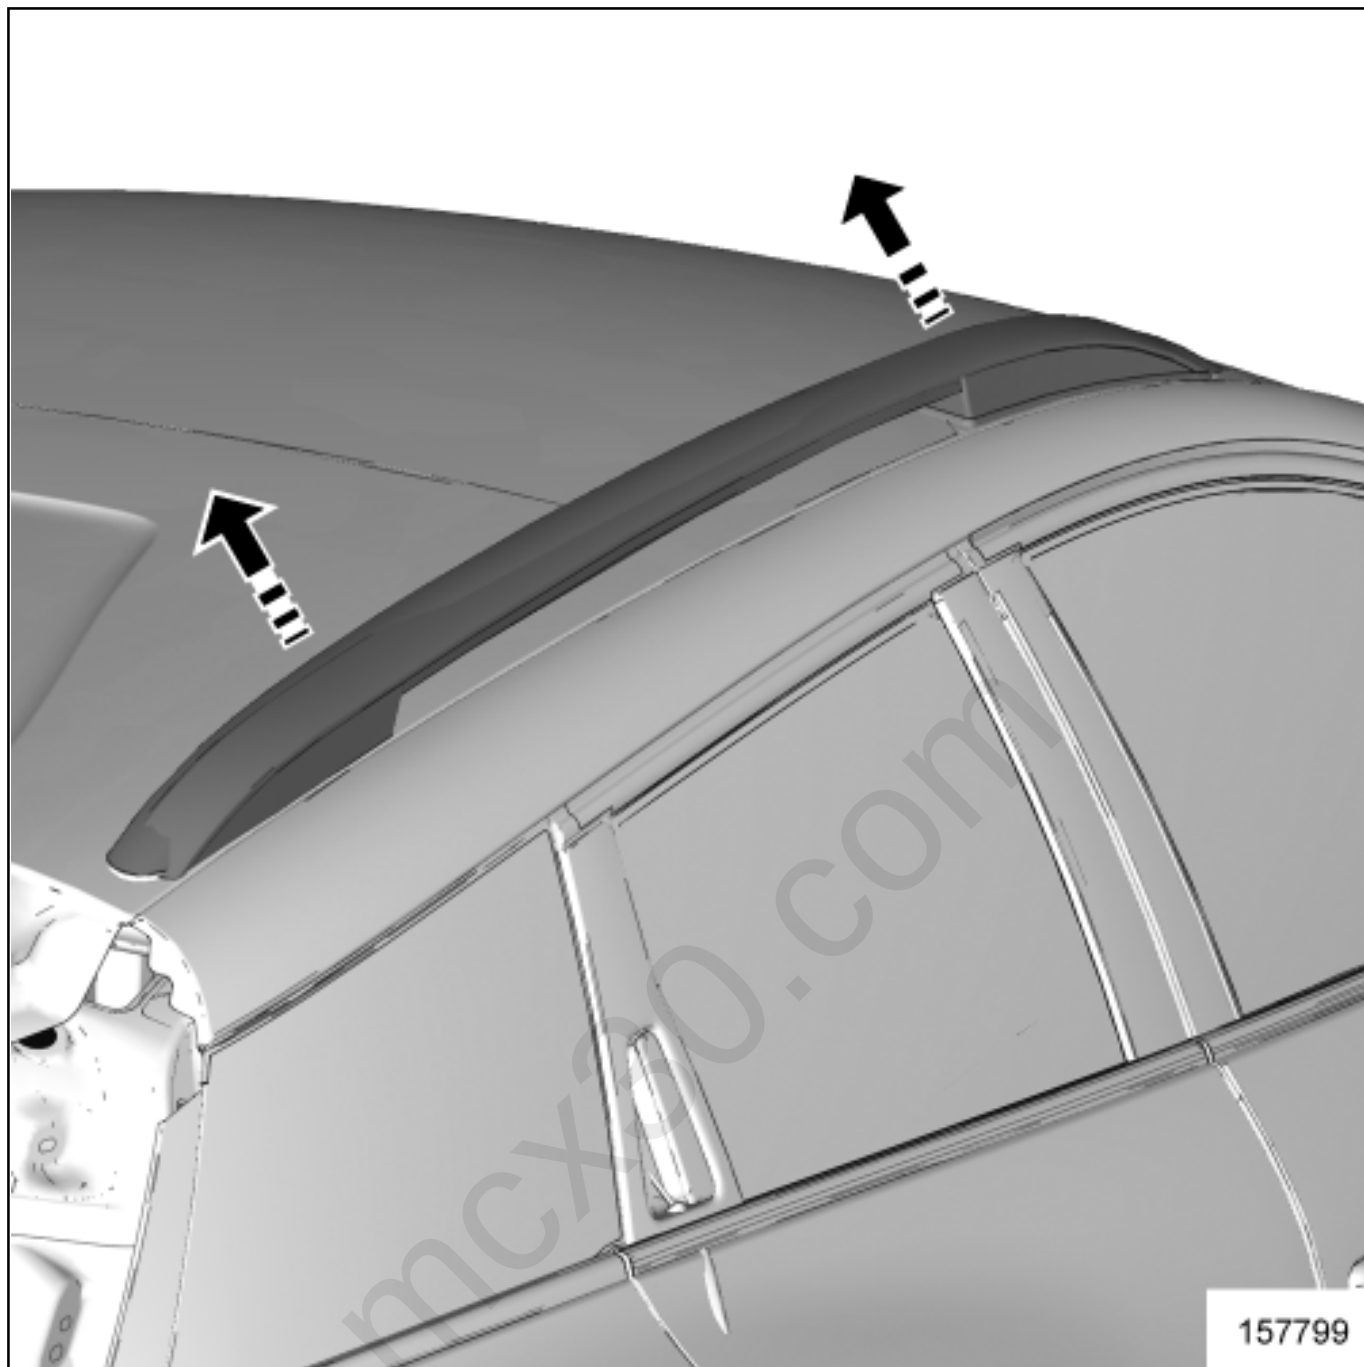

Remove the roof bar following the direction of the arrows.

REFITTING

1. REFITTING PREPARATION OPERATION

Check the condition and cleanliness of: