

mcx30.com

SIDE OPENING ELEMENTS: SEALING CHECK

Note:



Before any operation, check the water outlet openings. Clean any residue which has accumulated (example: dead leaves, twigs, etc.) in order to check that the water flows out correctly.

Note:



To check the sealing of the side opening element windows([see 60A, General information, Windows: Sealing check](#)) .


1. PREPARATION OPERATION FOR CHECKING THE SEALING

1- CONDITIONS TO RESPECT BEFORE CHECKING THE SEALING

- ❑ Position the vehicle on a level washing area([see 60A, General information, Vehicle sealing: General information](#)) .
- ❑ Check that all of the opening elements are closed([see 60A, General information, Vehicle sealing: General information](#)) .
- ❑ Prepare the equipment to perform the operation([see 60A, General information, Sealing tools: Use](#)) ,([see 60A, General information, Sealing tools: Description](#)) and([see 60A, General information, Vehicle sealing: General information](#)) .
- ❑ Adjust the flow of the water jet([see 60A, General information, Sealing tools: Use](#)) .


2. OPERATION FOR CHECKING THE SEALING

1- SIDE OPENING ELEMENT SEALING FILM OR TRIMS

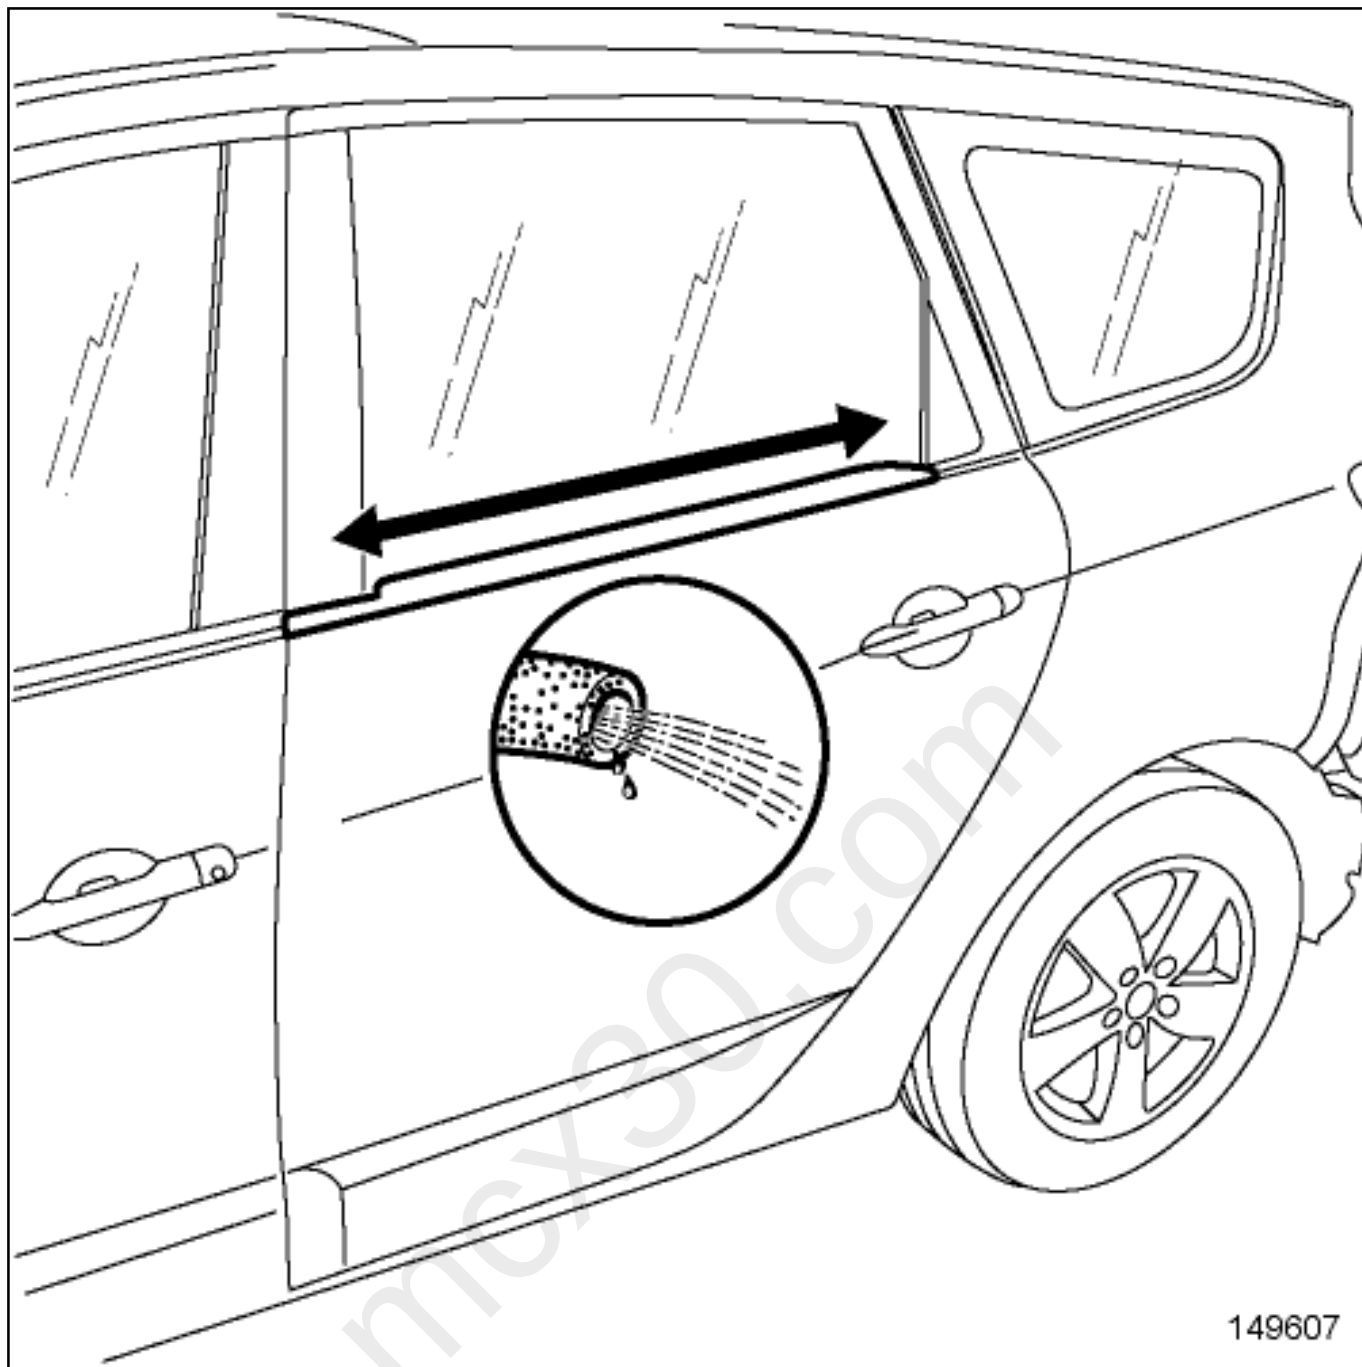

- Spray the exterior weatherstrip by sweeping the zone from right to left.
- Visually inspect for the presence of water inside the vehicle([see 60A, General information, Vehicle sealing: General information](#)) .

2- SIDE OPENING ELEMENT SEAL

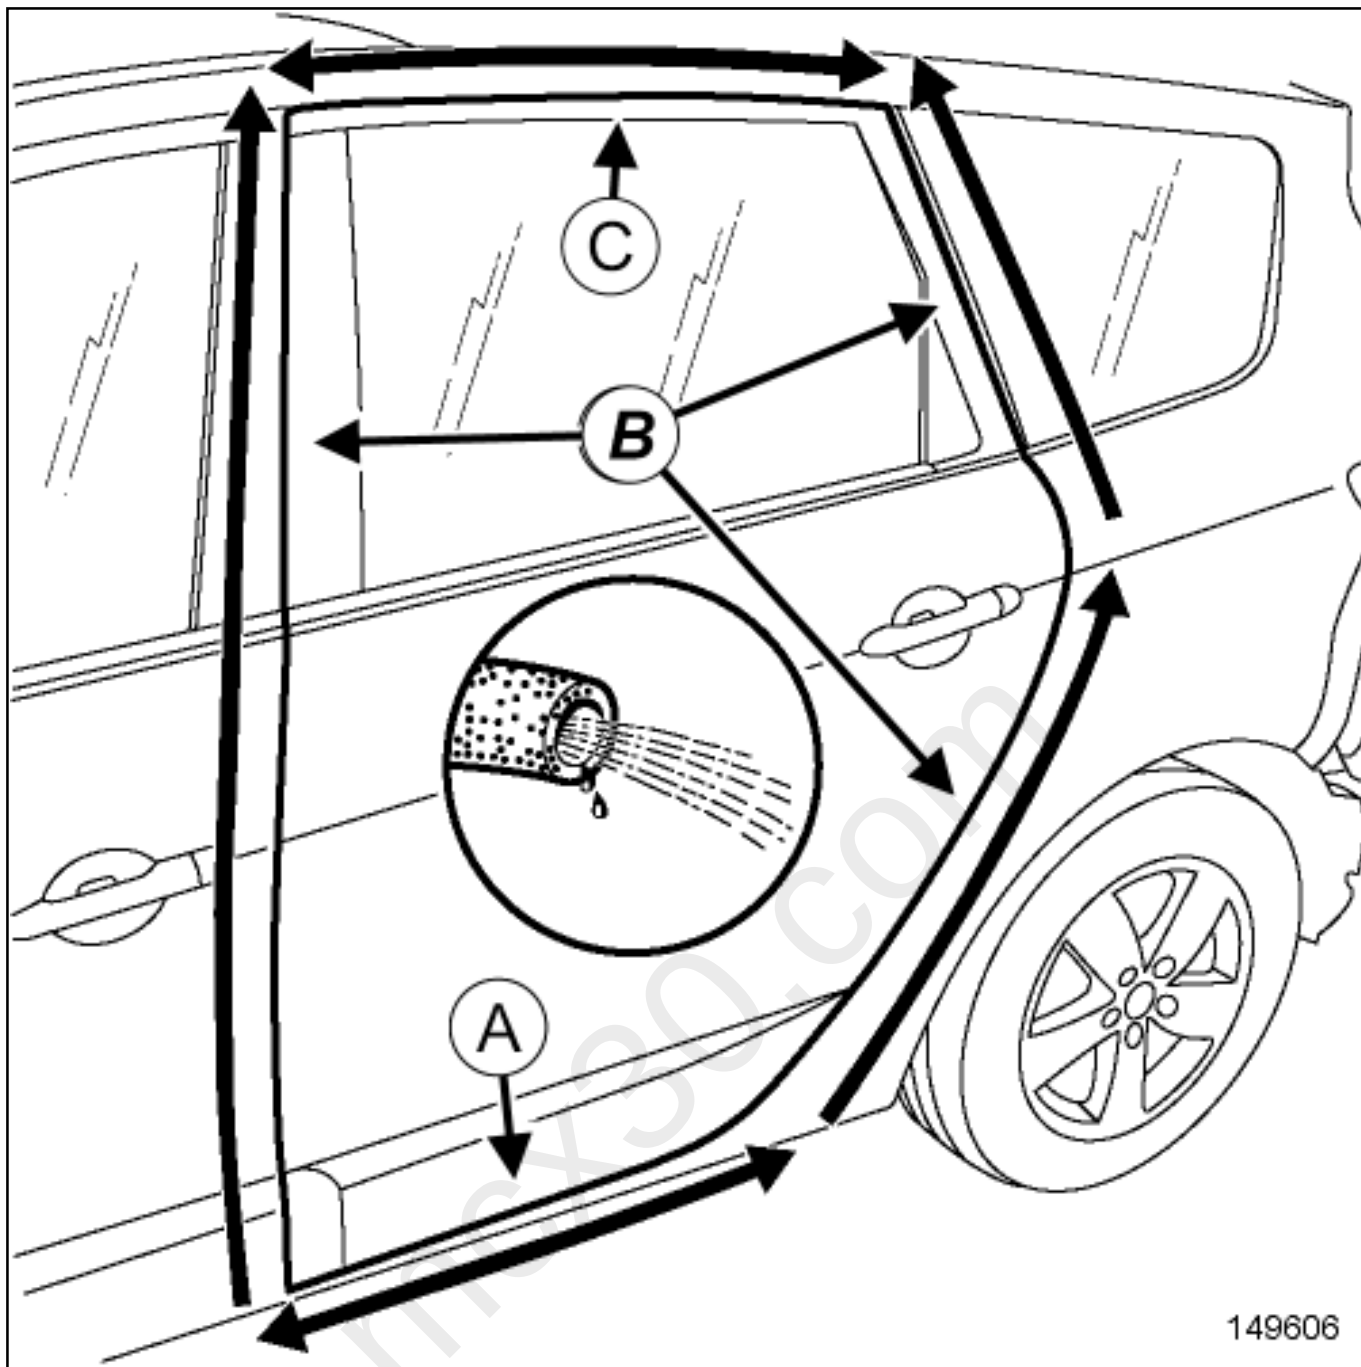

Spray the low section(A) of the opening element by sweeping the zone from right to left.

Visually inspect for the presence of water inside the vehicle([see 60A, General information, Vehicle sealing: General information](#)) .

Gradually spray the vertical sections(B) of the opening element from the bottom upwards to the upper section.