

TOXICITY SENSOR: REMOVAL-REFITTING

Locations and specifications (tightening torques, parts to always be replaced, etc.)[\(see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- ❑ Disconnect the battery[\(see Battery: Removal - Refitting\)](#) .
- ❑ Remove the dashboard[Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

- ❑ Disconnect the toxicity sensor connector.
- ❑ Remove the toxicity sensor[\(see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view\)](#) .

REFITTING



Proceed in the reverse order to removal.



Repair-30x02x04x18-01x37-1-11-1.xml



XSL version : 3.02 du 22/07/11

TRACK ROD: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



Special tooling required

Ball joint extractor.

Tav. 476

WARNING



To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:



[\(see 36A, Steering assembly , Steering: Precautions for the repair\) ,](#)



[Vehicle: Precautions for the repair](#) (01D, Mechanical introduction).



Location and specifications (tightening torques, parts always to be replaced, etc.)[\(see 36A, Steering assembly , Steering assembly: Exploded view\) .](#)

REMOVAL

1. REMOVAL PREPARATION OPERATION




Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .



Remove the front wheel [Wheel: Removal - Refitting](#) .


2. REMOVAL OPERATION

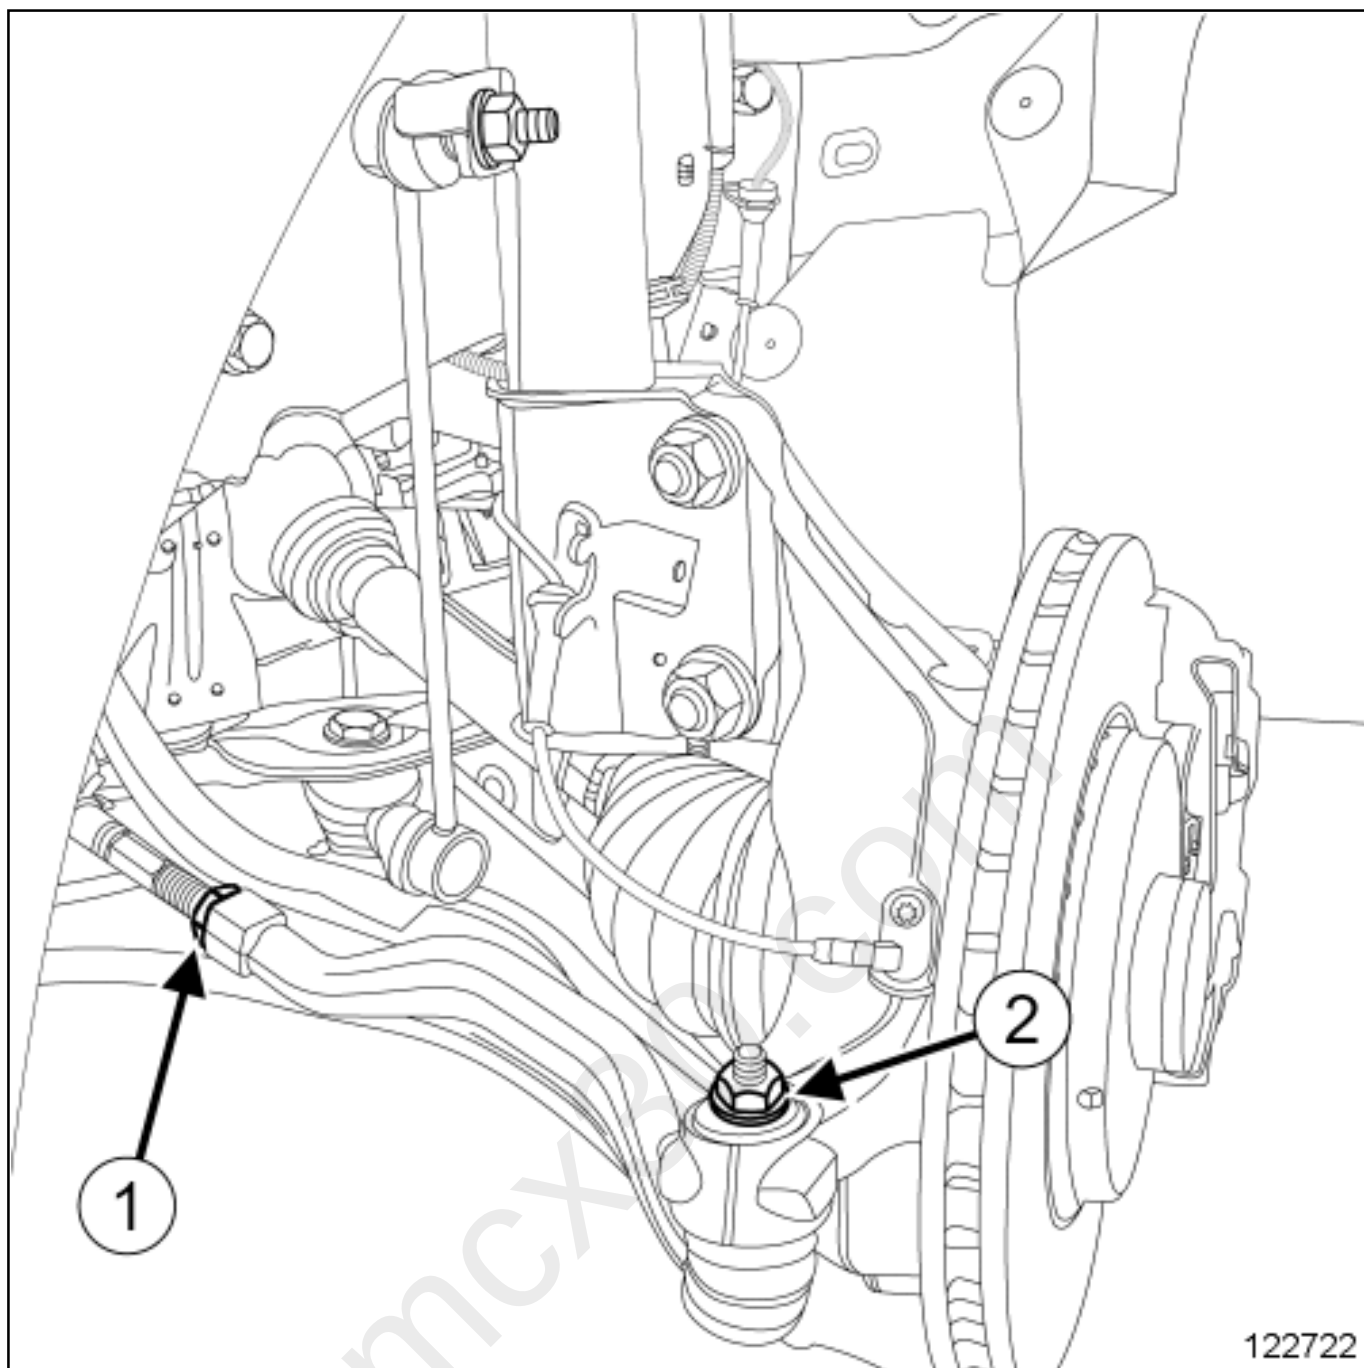

122722

Loosen the wheel alignment adjustment lock nut(1) .

Remove the track rod ball joint nut(2) .

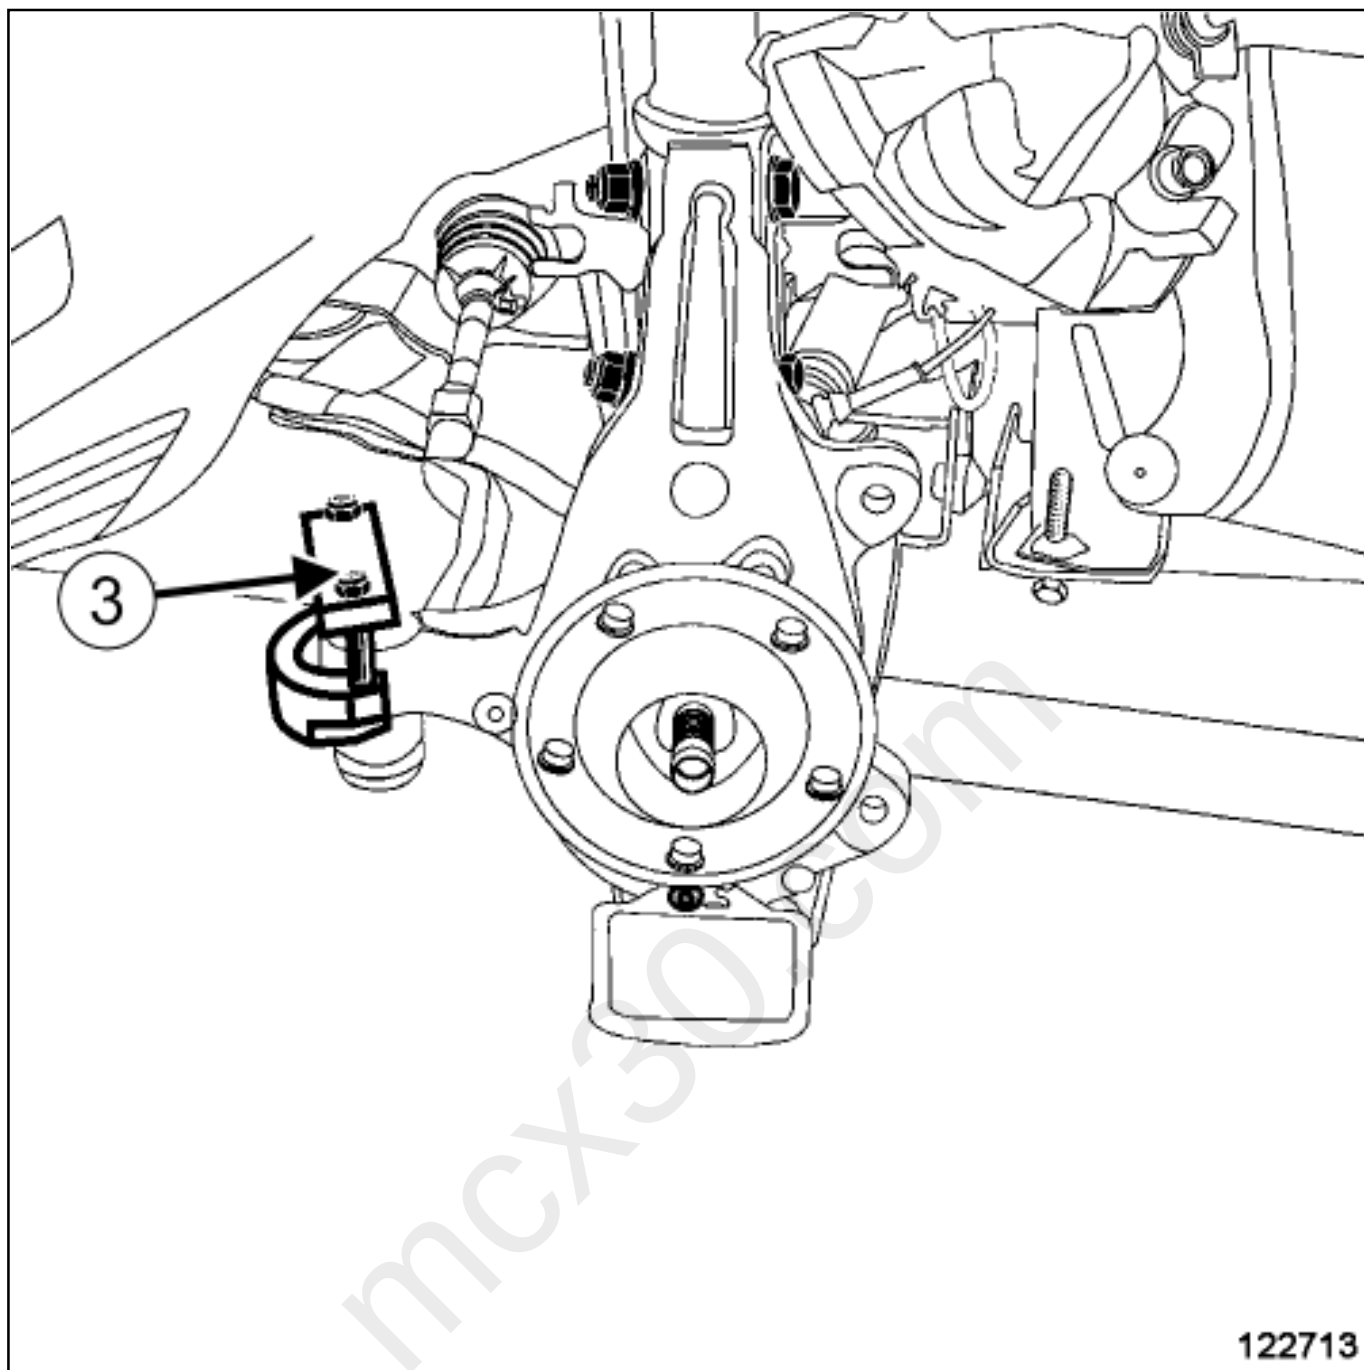

Extract the ball joint using the tool Ball joint extractor. (Tav. 476) (3).

Unscrew the track rod anti-clockwise and note the number of turns for refitting.

Remove the track rod.