

if the pipe is blocked, even partially (due to scale, carbonised oil etc.),

if the pipe is fitted with self-retaining seals.



CAUTION

Failure to observe the following instructions will lead to the turbocharger breaking again.

Metal objects may enter the oil and air circuits as a result of a broken turbocharger.



CAUTION

Failure to observe the following procedure may lead to destruction of the turbocharger.

When starting the engine:

- - do not accelerate,
- - allow the engine to run for **1 minute**, the time taken for the oil circuit pressure to increase (until the oil pressure warning light on the instrument panel goes out),
- - accelerate several times at no load,
- - check the air circuit and the oil circuit for leaks.




[Repair-10x09-02x60-1-1-1.xml](#)



TYRE IDENTIFICATION

Example of a tyre identification mark: 205/65 R 15 91 V.

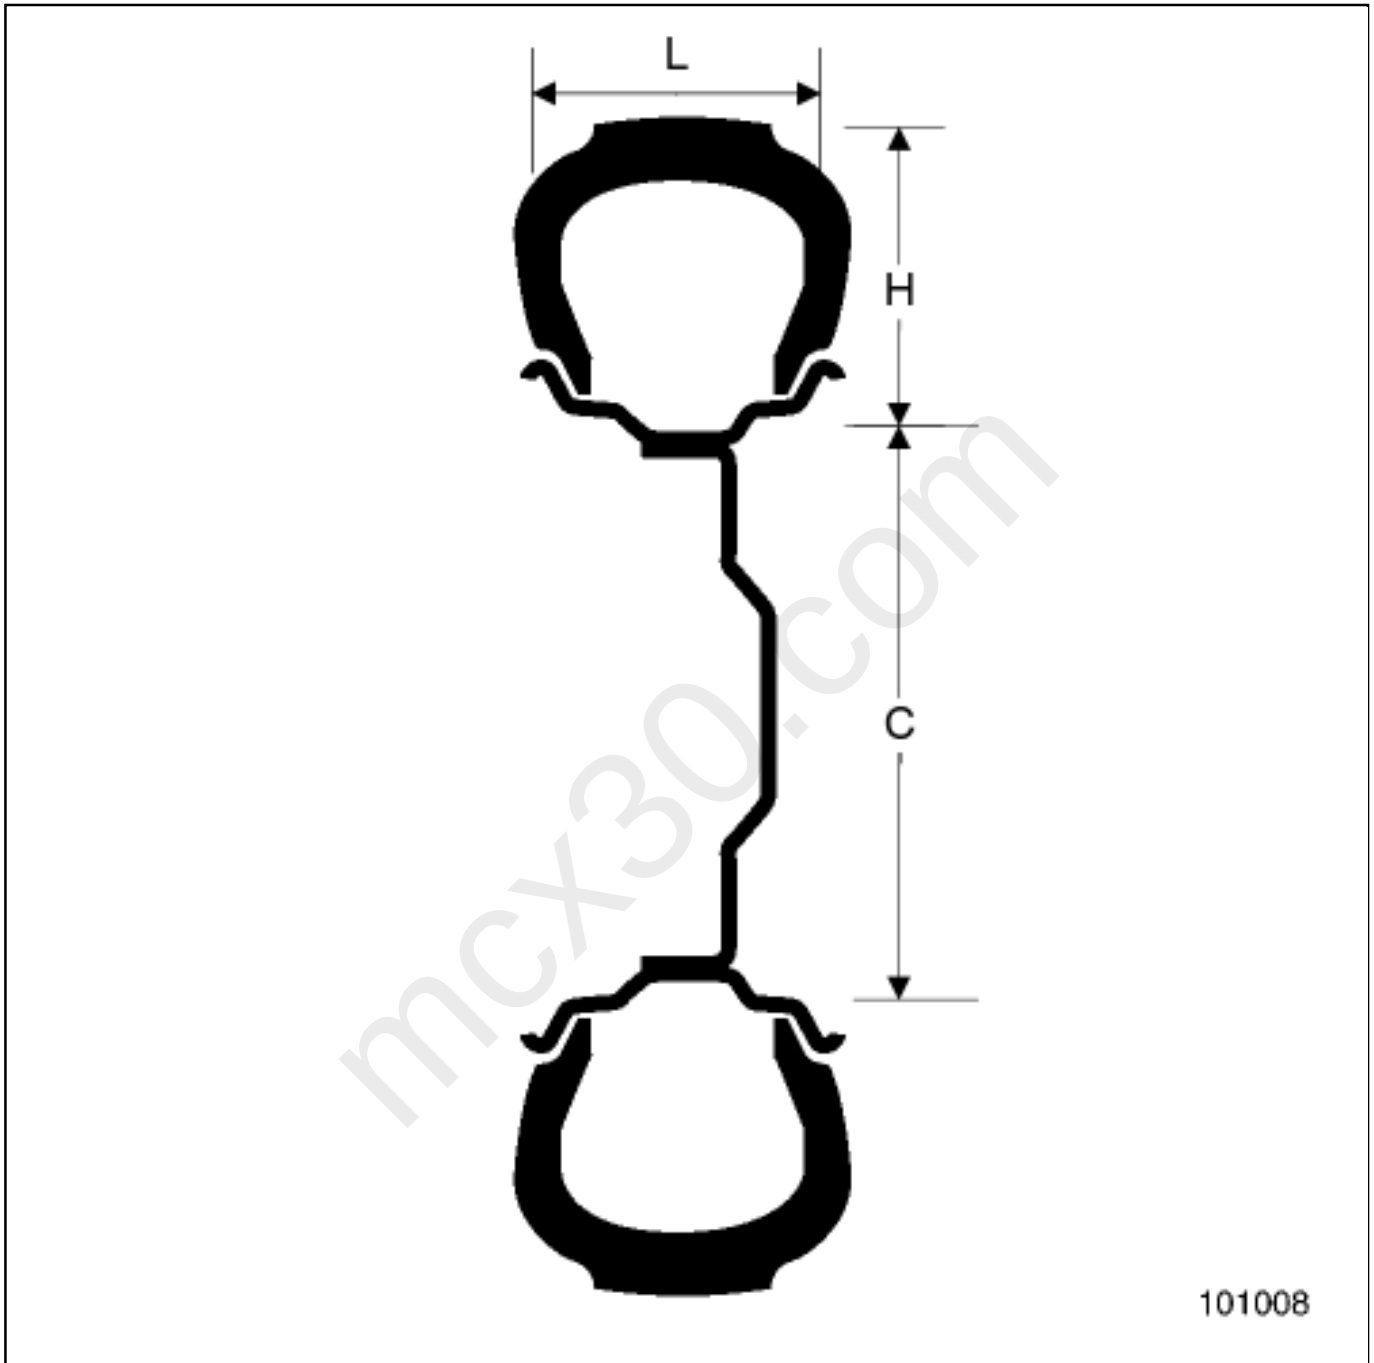



123448

205	Tyre width in mm (L)
65	Height/width ratio
R	Radial structure
15	Internal diameter in inches (c)
91	Load index
V	Speed code

SPEED CODE TABLE: