

| Code | Maximum speed in mph (km/h) |
|------|-----------------------------|
| R    | 170                         |
| S    | 180                         |
| T    | 190                         |
| U    | 200                         |
| H    | 210                         |
| V    | 240                         |
| ZR   | above 240                   |
| W    | 270                         |
| Y    | 300                         |



Repair-13x05x02-02x07-2-21-1.xml



# TYRE: PRECAUTIONS FOR THE REPAIR



Note, one or more warnings are present in this procedure



## 1. CLEANLINESS

 Clean:

- the tyre bead,
- 

the tyre bead/wheel rim contact surface.

Remove any grit trapped in the tyre treads.



Clean the bearing surfaces on:

- 
- the wheels,
- the discs,
- the hubs.

## 2. GENERAL RECOMMENDATIONS



### CAUTION

If checking the pressure when hot, increase the tyre inflation pressure by 0.2 to 0.3 bar above the recommended pressure.



### CAUTION

In order to remove any flat spots on the tread after the vehicle has stopped, it is essential to carry out a road test for a minimum distance of 1 mile (2 km) before balancing the wheels.