



Put the LPG switch in the LPG position,



switch on the ignition, the tank solenoid valve should "click".

2)CHECKING THAT THERE IS A PLASTIC BLANKING COVER ON THE SAFETY VALVE:

Confirm that there is a blanking cover on the LPG tank overpressure valve.

3)BLEEDING THE EXPANSION VALVE:



The operation should be carried out with the engine warm and stopped:



Undo the bleed screw of the LPG expansion valve and allow the liquid residue to flow out for approximately a minute into an appropriate container.

6- SPECIAL NOTES FOR CNG VEHICLES

Only authorised personnel, i.e. those with specific CNG vehicle training, may work on the CNG system of a vehicle.

1)VISUAL INSPECTION OF THE TANK AND ITS SUPPORT:


Check that there is no evidence of corrosion, impact, chips or scratches on the CNG tank. Check that the support is in good condition.



Repair-00x01x01-02x31-1-1-1.xml




mcx30.com

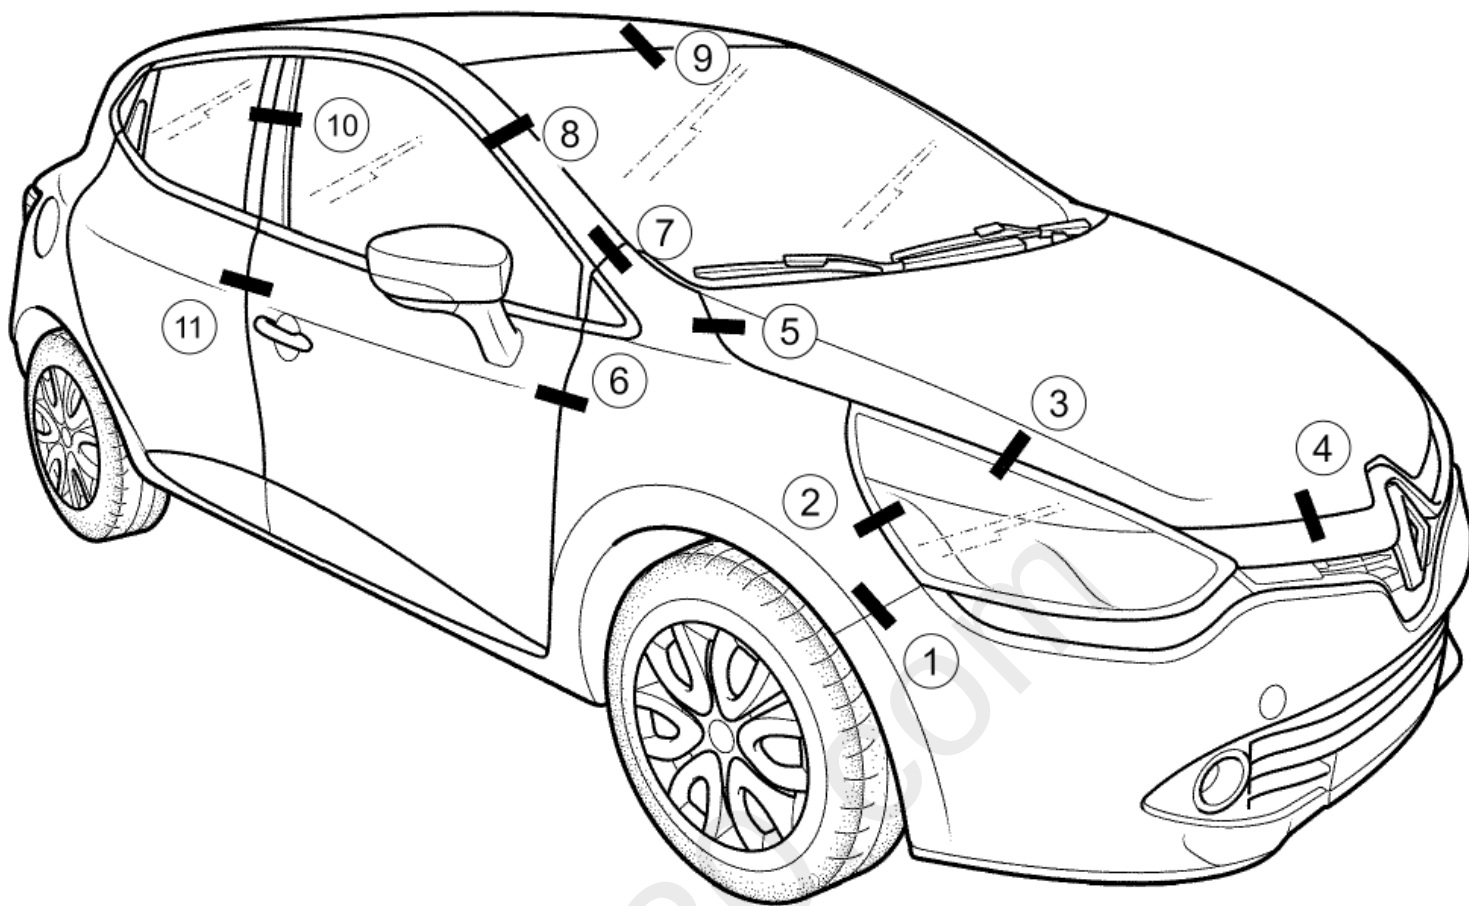

155531

No.	Location	Clearances (mm)
(1)	Front bumper - front wing	0 ± 1
(2)	Headlight - front wing	1.5 ± 1.5
(3)	Bonnet - headlight	3.5 ± 1.7
(4)	Superior trim - bonnet	6 ± 2.5
(5)	Front wing - bonnet	3.5 ± 1.5
(6)	Front side door - front wing	4.5 ± 1.3
(7)	Front wing - A-pillar	3.5 ± 1.5
(8)	Windscreen - windscreen aperture pillar	4 ± 2
(9)	Windscreen - roof panel	3 ± 1.5
(10)	Front side door - rear side door	4 ± 1.6
(11)	Front side door - rear side door	4 ± 1.3

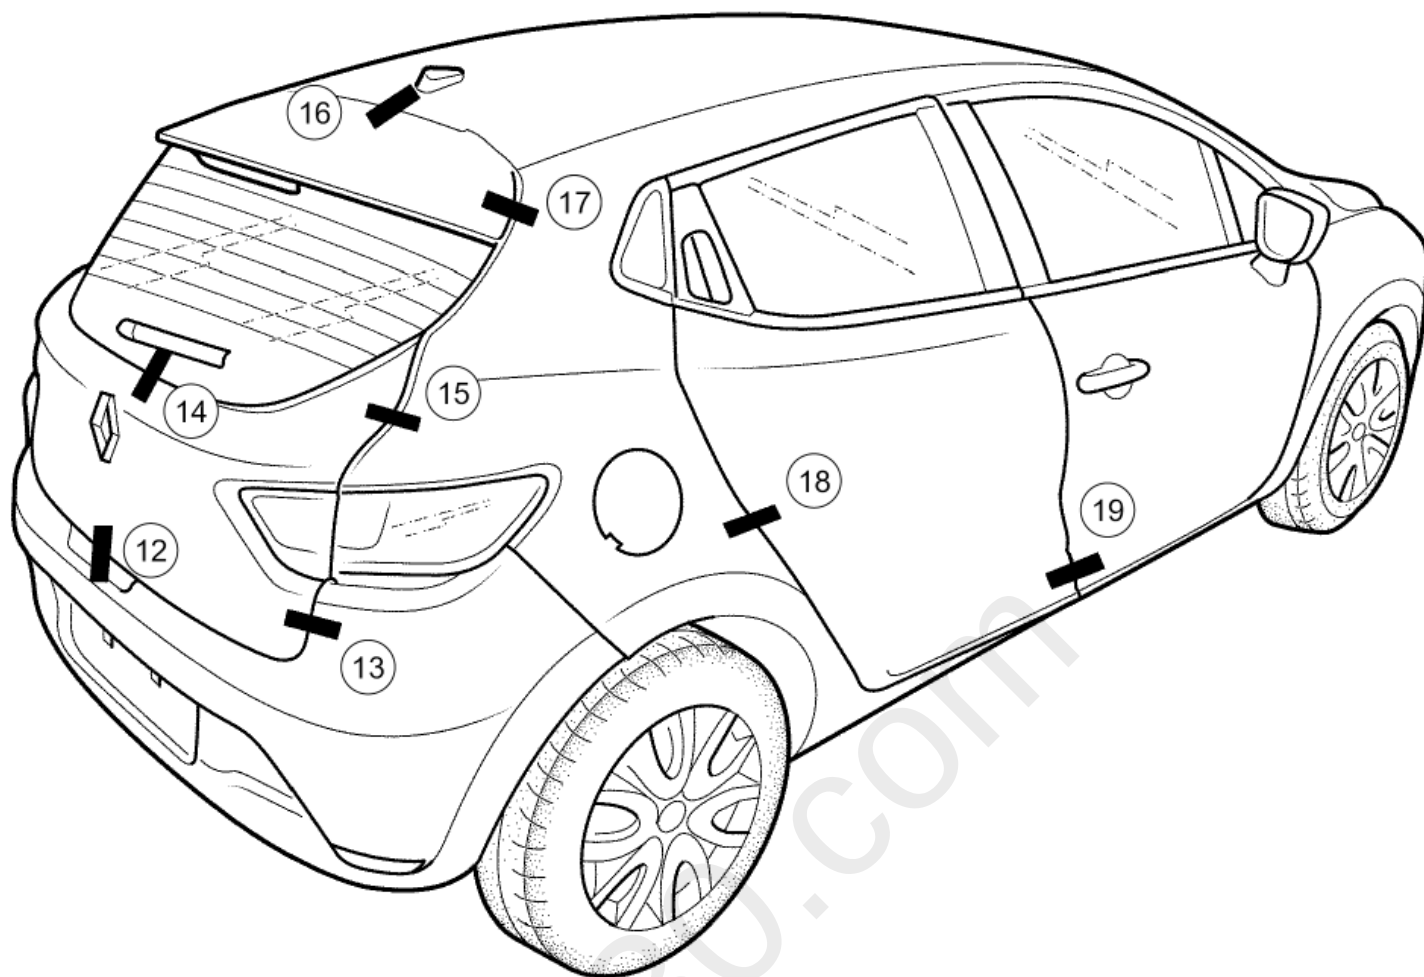

155530

No.	Location	Clearances (mm)
(12)	Luggage compartment lid - rear bumper	6 ± 2.3
(13)	Luggage compartment lid - rear bumper	4 ± 2
(14)	Rear screen - tailgate	3 ± 0.9
(15)	Body side - luggage compartment lid	4 ± 1.9
(16)	Roof - rear spoiler	5 ± 1.8
(17)	Body side - rear spoiler	4 ± 2
(18)	Rear side door - body side	4 ± 1.3
(19)	Front door protective strip - rear door protective strip	6 ± 2.8