

OPTIC PRIMER	0.5 L container	77 11 429 949
--------------	-----------------	---------------

UNDERCOAT		
-----------	--	--

LEVIA	3.5 L container	77 11 228 651
-------	-----------------	---------------

FORTIA	3.5 L container	77 11 228 650
--------	-----------------	---------------



Repair-00x01x01-02x61-1-21-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

VEHICLE: SEALING CHECK

Note:



In order to make the sealing check easier, the vehicle has been divided into several zones.

These zones are split specifically to allow for a focused search.


Note:




You will find below the links to access the methods for checking the sealing of the zones concerned.

1. DISTRIBUTION OF ZONES

ZONE 1

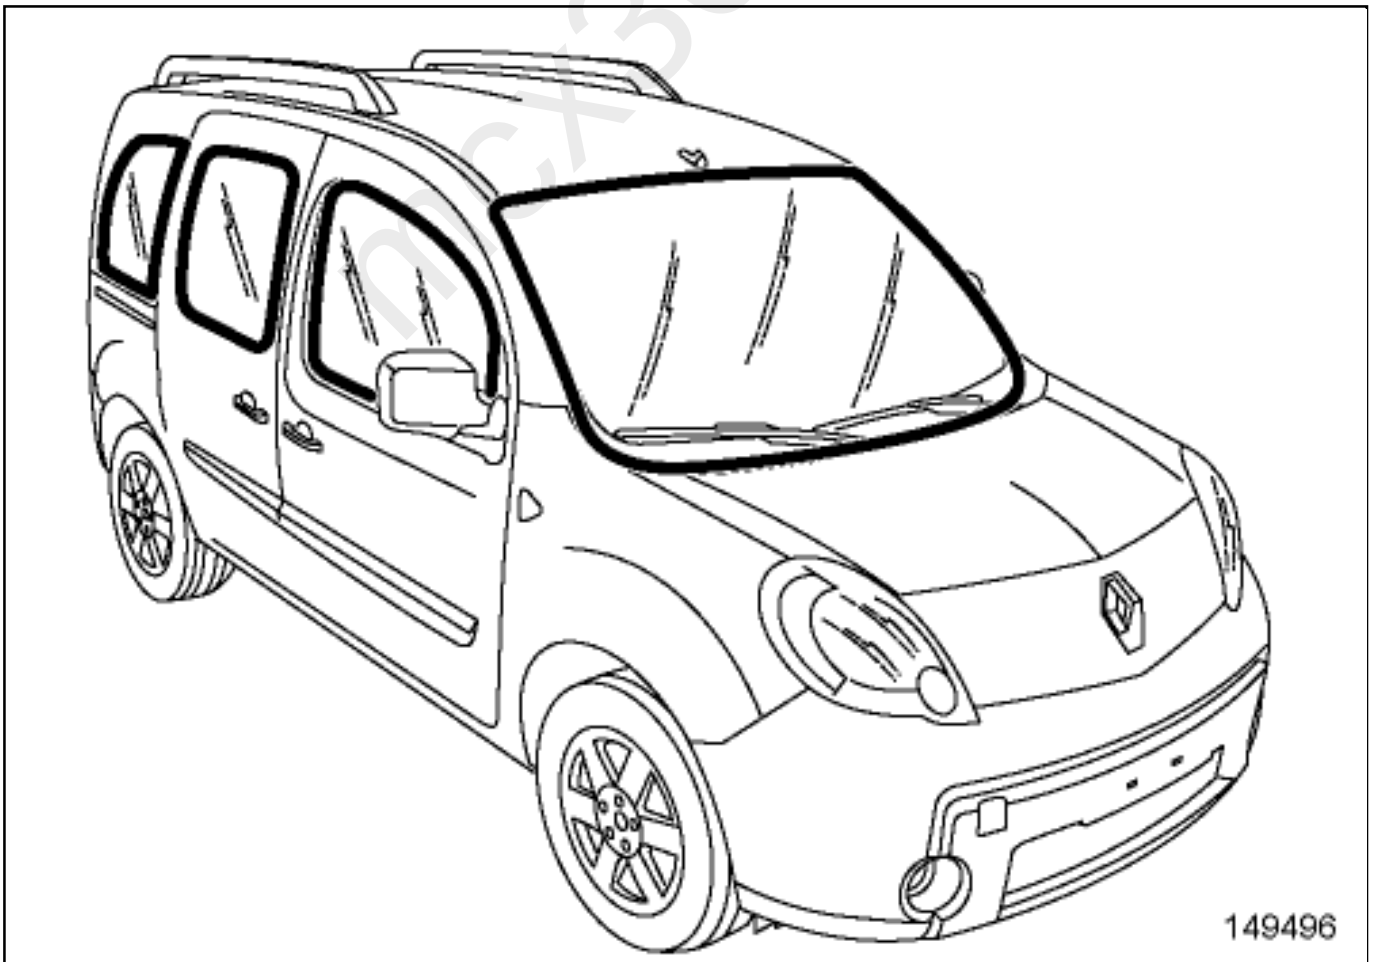

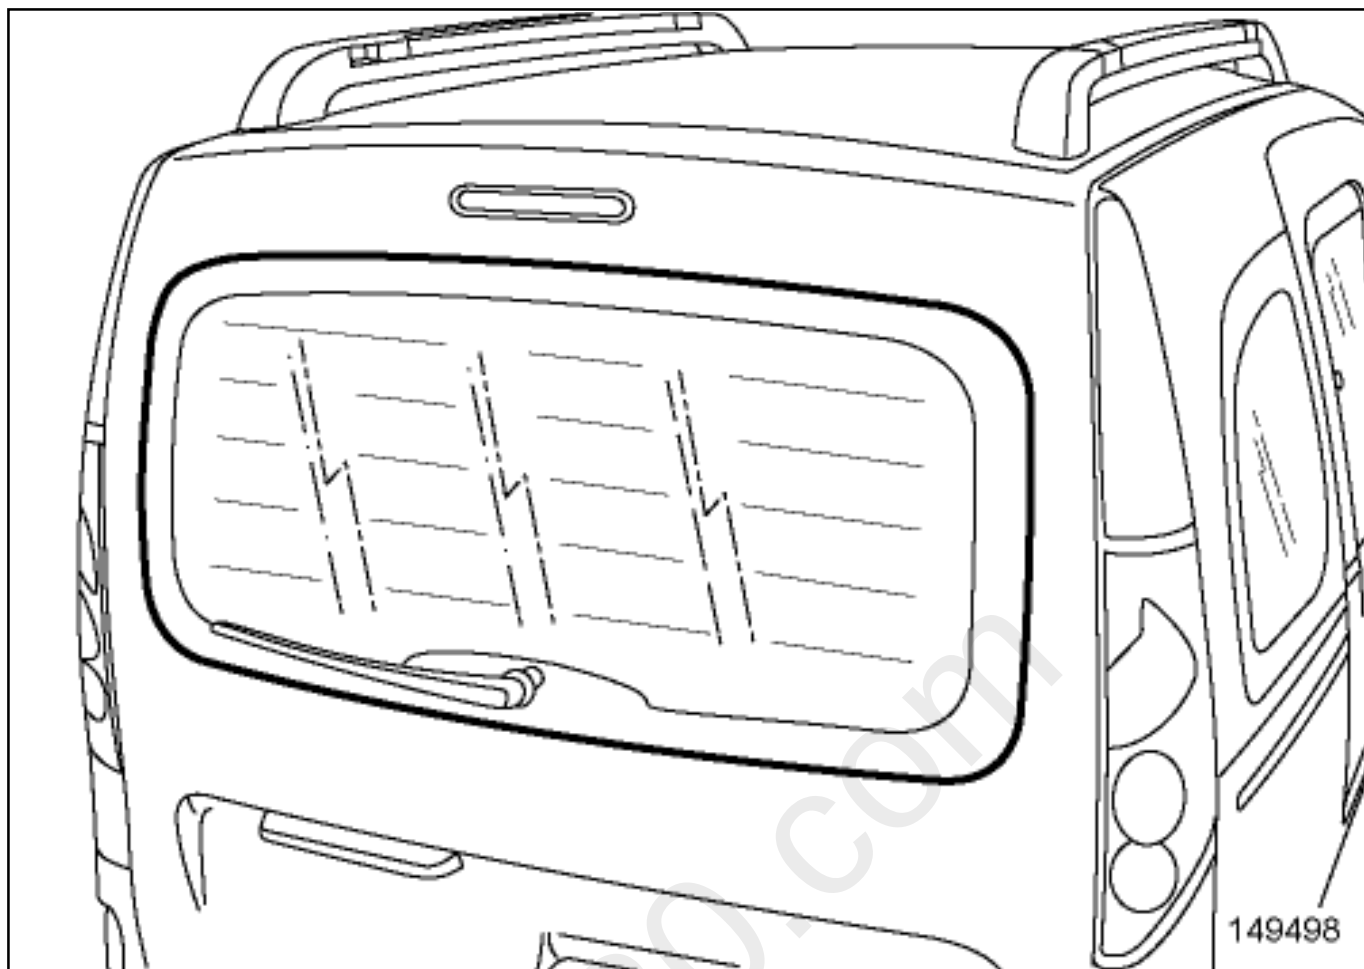


Zone 1:



Windows([see 60A, General information, Windows: Sealing check](#))

ZONE 2

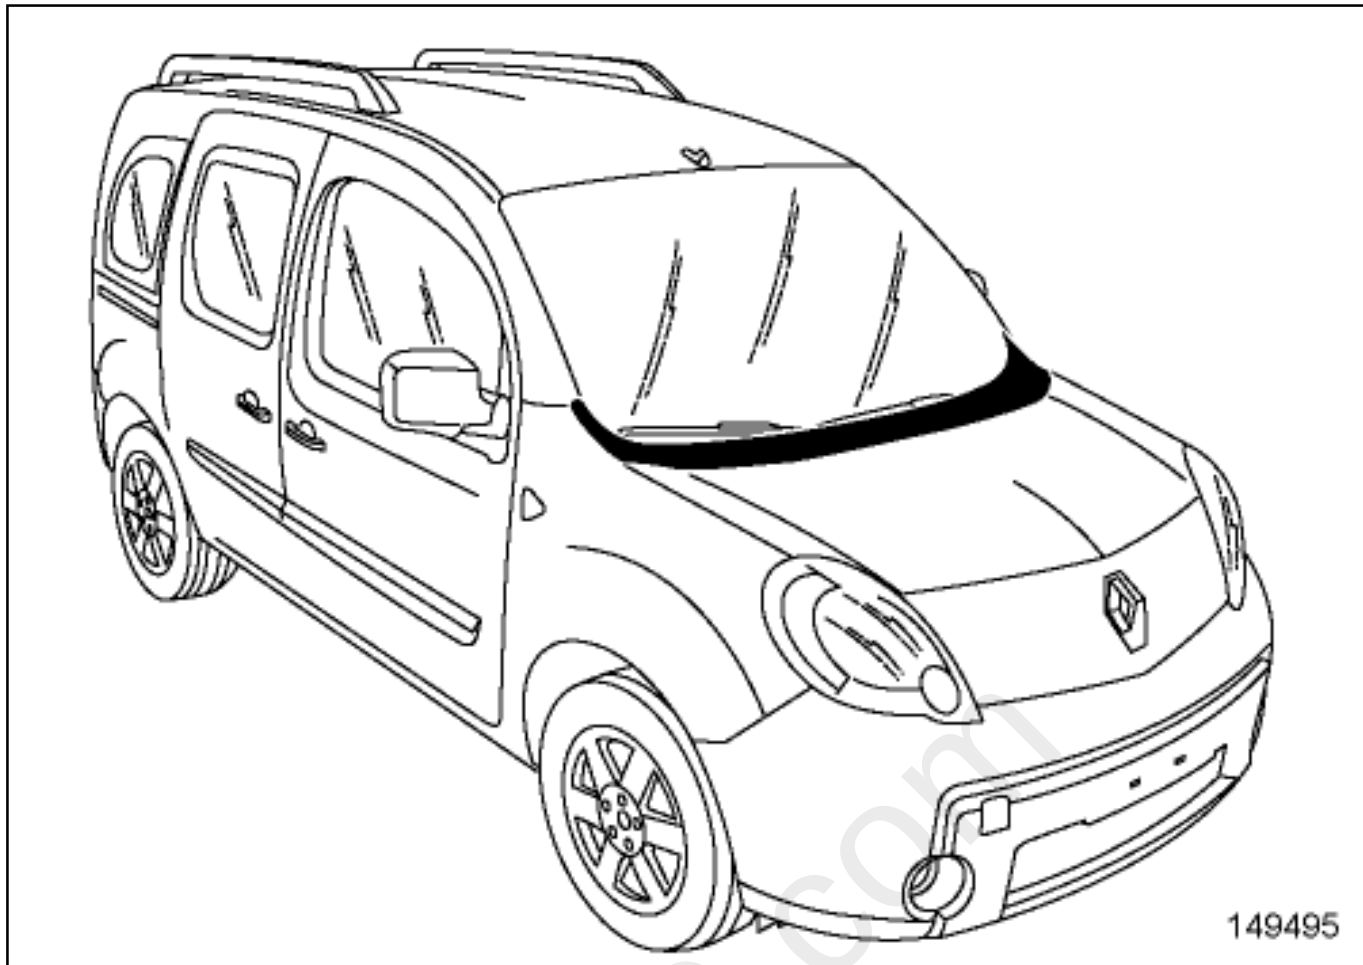


Zone 2:



Front section of the vehicle: Checking the sealing([see 60A, General information, Front section of the vehicle: Sealing check](#)).

ZONE 3

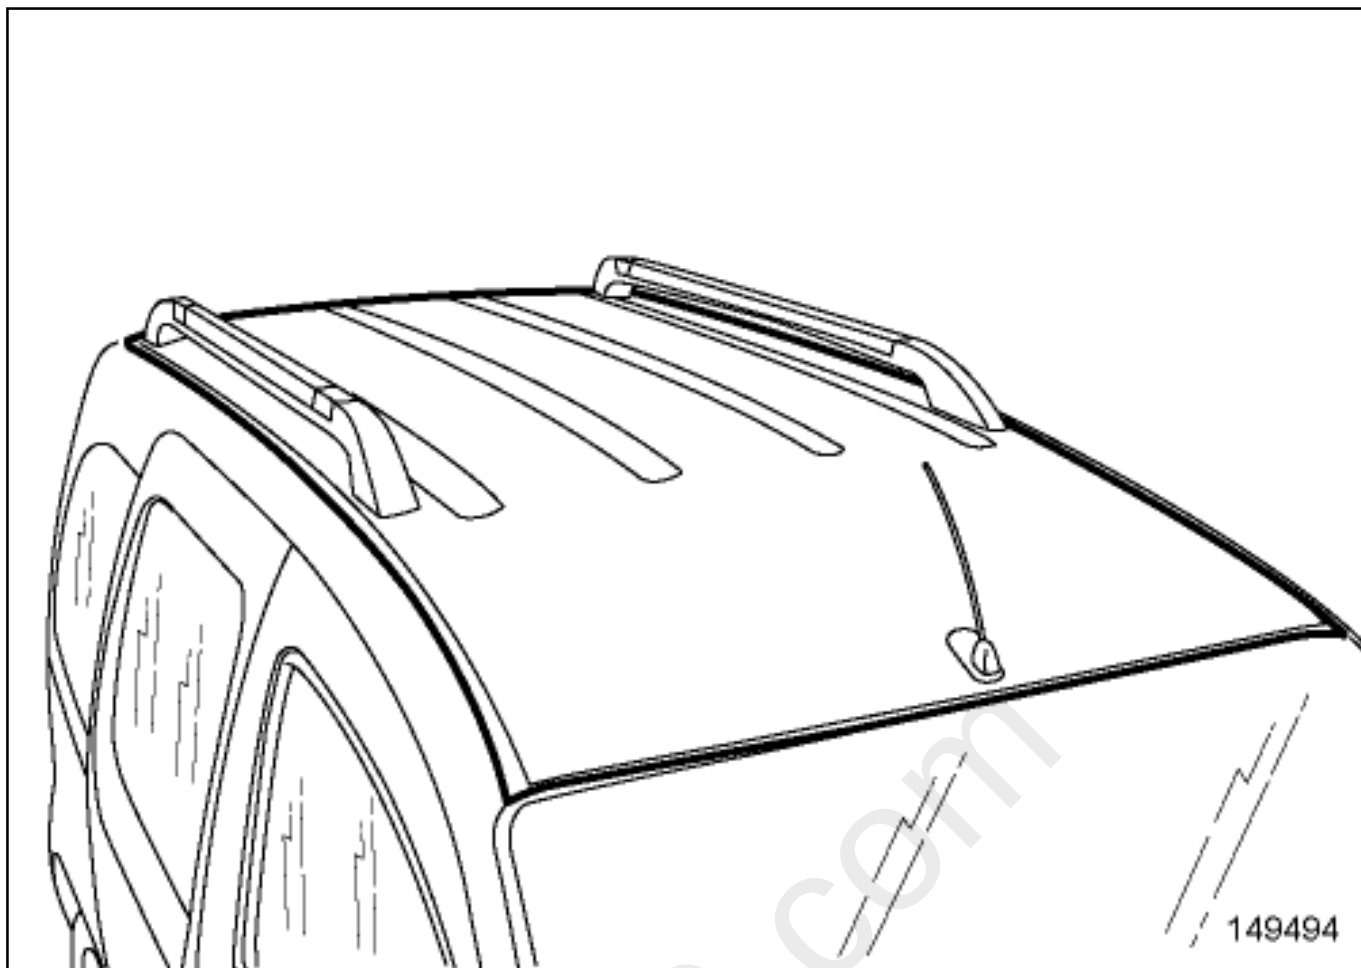


Zone 3:



Roof([see 60A, General information, Roof: Sealing check](#)) and retractable roof([see 60A, General information, Retractable roof: Sealing check](#)) .

ZONE 4

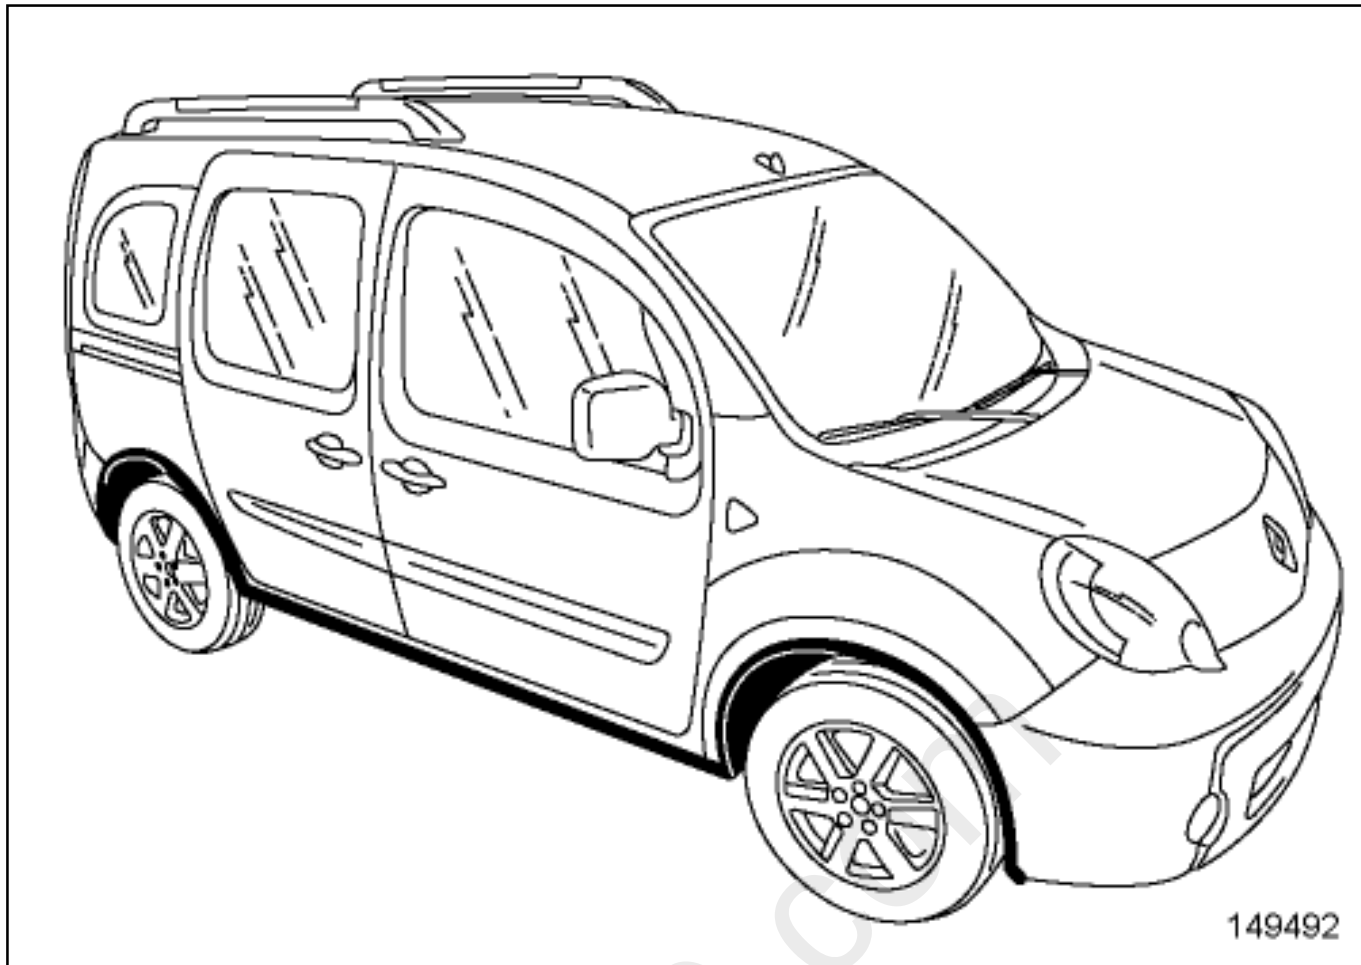


Zone 4:



Underside of the vehicle: Checking the sealing([see 60A, General information, Underside of the vehicle: Sealing check](#)).

ZONE 5

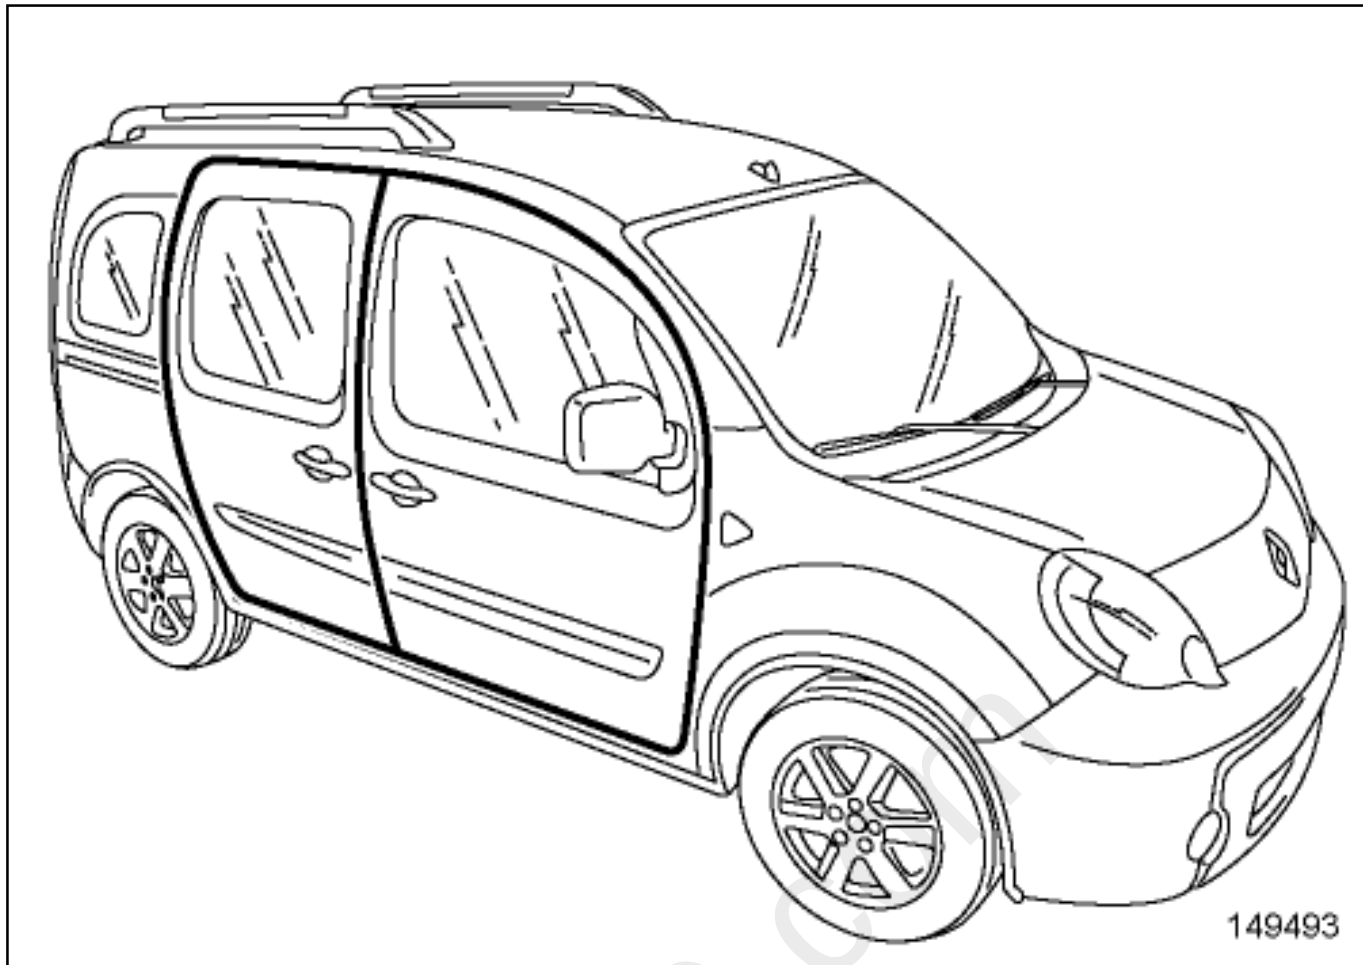


Zone 5:



Side opening elements: Checking the sealing([see 60A, General information, Side opening elements: Sealing check](#)).

ZONE 6

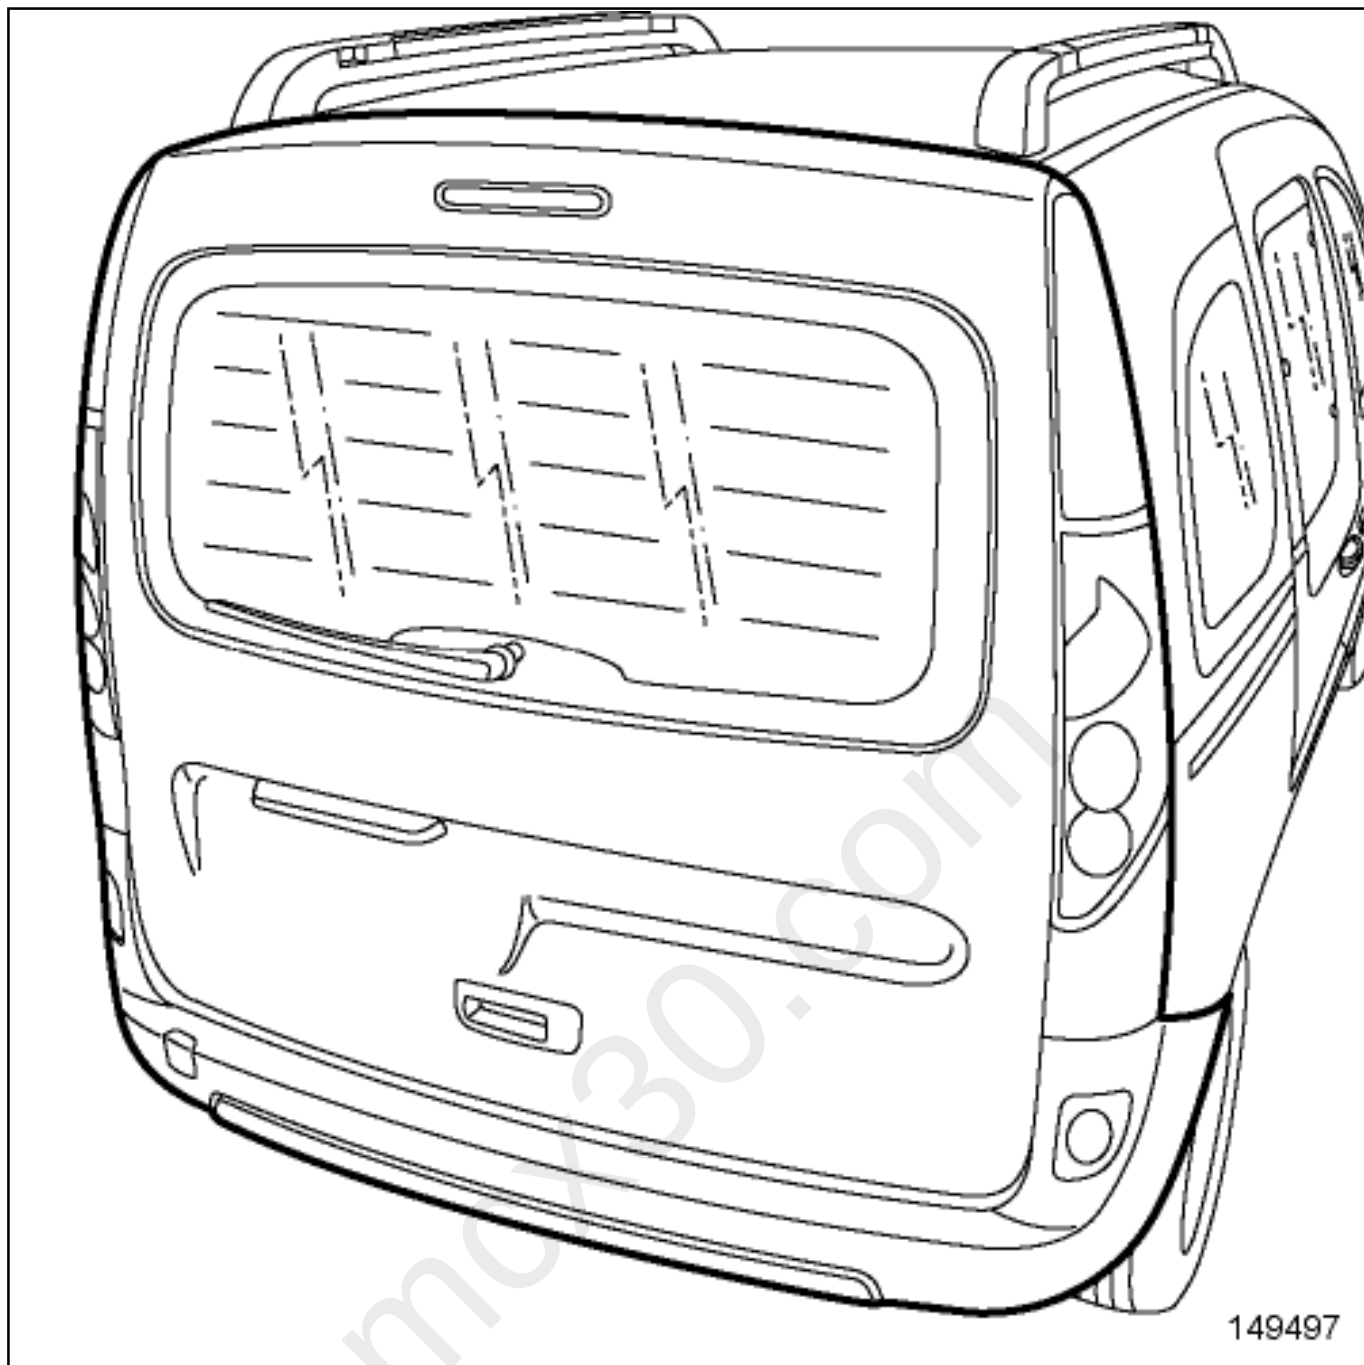

Zone 6:



Rear section of the vehicle: Checking the sealing([see 60A, General information, Rear section of the vehicle: Sealing check](#)).