

Manually pinch the windscreen aperture lower cross member towards the windscreen on the whole width.

Refit [Wiping and washing: List and location of components](#) :

-
- a new adhesive base for the rain and light sensor,
- the rain and light sensor.

Proceed in the reverse order to removal.

Carry out a sealing test (see Technical Note 0653A).



Repair-50x04x02-01x37-1-31-1.xml



WINDSCREEN WIPER MOTOR: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING

Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions [Vehicle: Precautions for the repair](#)

REMOVAL

1. REMOVAL PREPARATION OPERATION



Switch on the ignition.



CAUTION

To ensure that the wiper arms can travel smoothly, the wiper motor must be initialised.



Turn the wiper stalk from (0) to (1), and then from (1) to (0).



Switch off the ignition.



Mark the position of the windscreen wiper arms on the windscreen.



Disconnect the battery [Battery: Removal - Refitting](#) .



Note:

Mark the position of the motor shaft linkage in relation to the mechanism before removing it.

Remove [\(see 85A, Wiping - Washing, Wiping and washing: List and location of components\)](#) :

-
- the windscreen wiper arms,
- the scuttle panel grille,
- the scoop under the scuttle panel grille.

2. REMOVAL OPERATION

Remove [\(see 85A, Wiping - Washing, Wiping and washing: List and location of components\)](#) :

-
- the motor shaft linkage nut,
- the bolts from the windscreen wiper motor,
- the windscreen wiper motor.

REFITTING

1. FINAL OPERATION



CAUTION

To ensure that the wiper arms can travel smoothly, the wiper motor must be initialised.