

VEHICLE



Note, one or more warnings are present in this procedure



Equipment required

safety strap(s)

1. TOWING

CAUTION

See the current towing regulations in each country.

Never use the drive shafts as attachment points.

The towing points may only be used for towing on the road.

Never use the towing points for removing the vehicle from a ditch or to lift the vehicle, either directly or indirectly.

Screw in and lock the towing ring before towing.

1- POSITION OF FRONT ATTACHMENT POINT