

CRUISE CONTROL - SPEED LIMITER: LIST AND LOCATION OF COMPONENTS

Equipment required
Diagnostic tool


1. LIST OF COMPONENTS

1- THE "CRUISE CONTROL" FUNCTION IS COMPOSED OF:

- a control switch
- steering column switches(see **Steering assembly: Exploded view**)
- a brake pedal switch(see **Pedal assembly: Exploded view**)

2. LOCATION OF COMPONENTS

1- CONTROL SWITCH

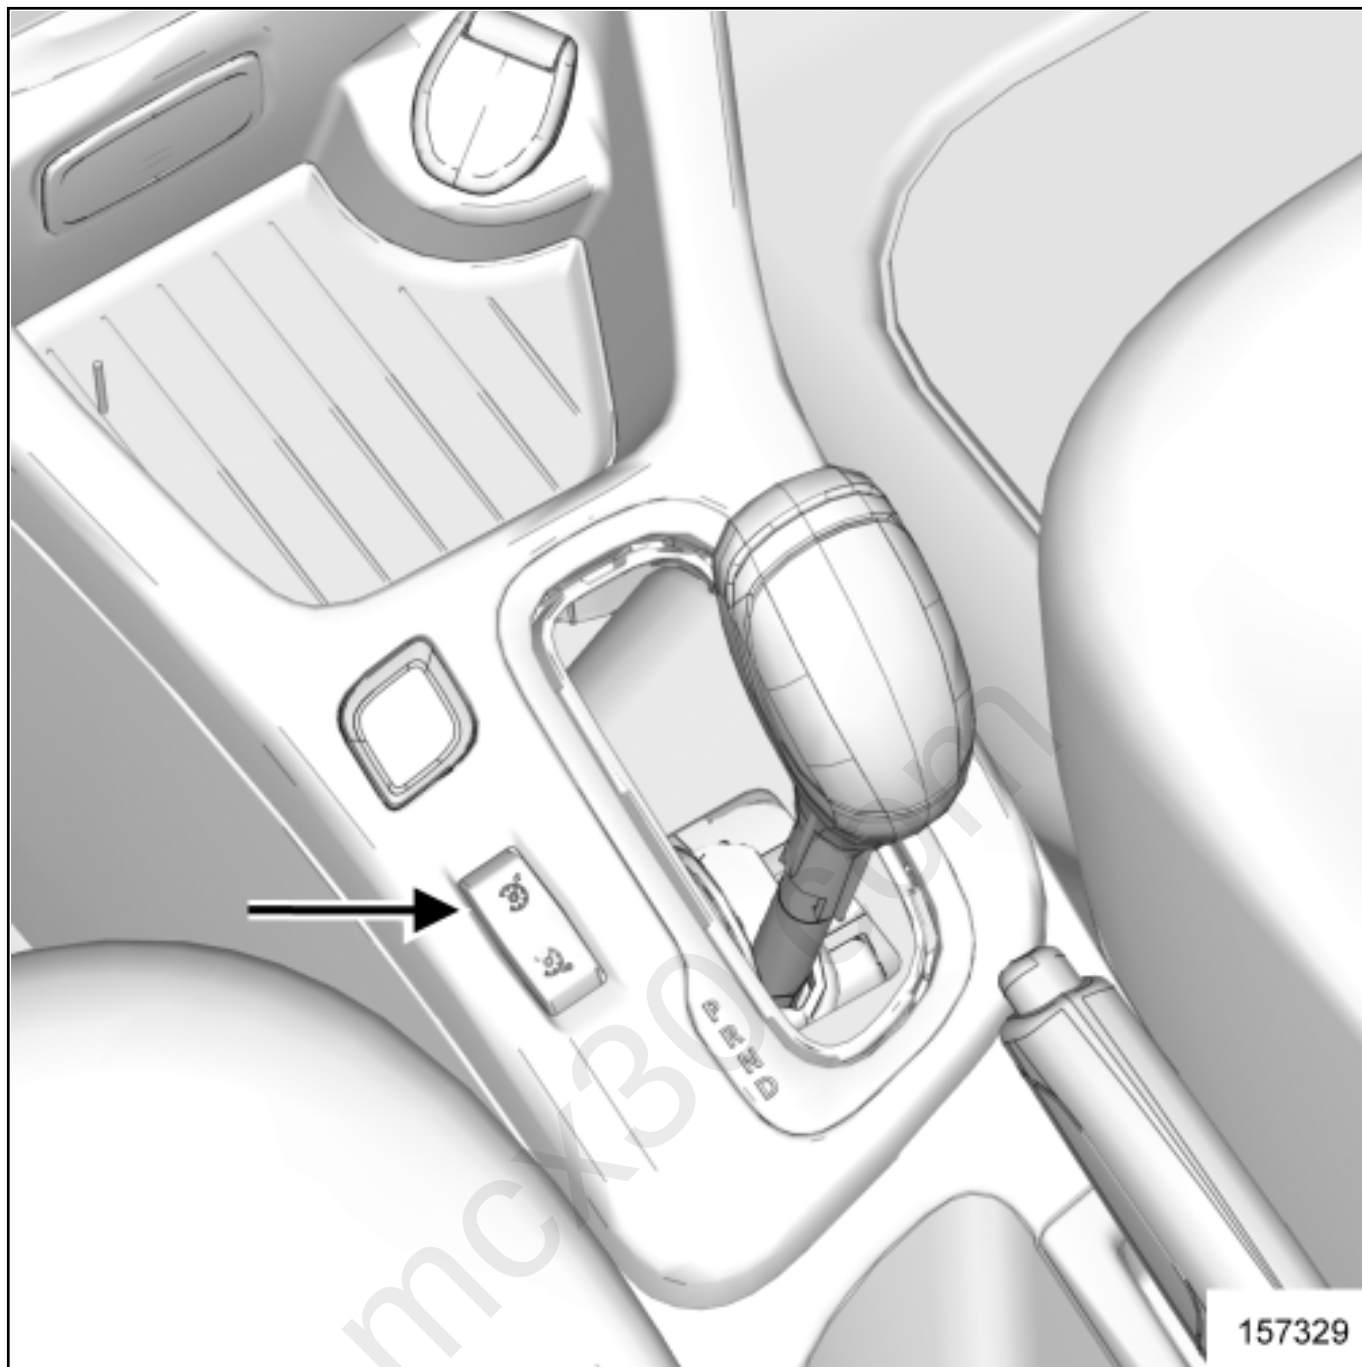

■ Apply the before / after repair procedure using the Diagnostic tool(see **Diagnostic tool : Use**) :


-Computer concerned by the Before / After repair procedure:

■"Electric vehicle central control unit",

-Component controlled by this computer concerned by the Before / After repair procedure:

■"Cruise control and speed limiter on/off control" .

2- STEERING COLUMN SWITCHES

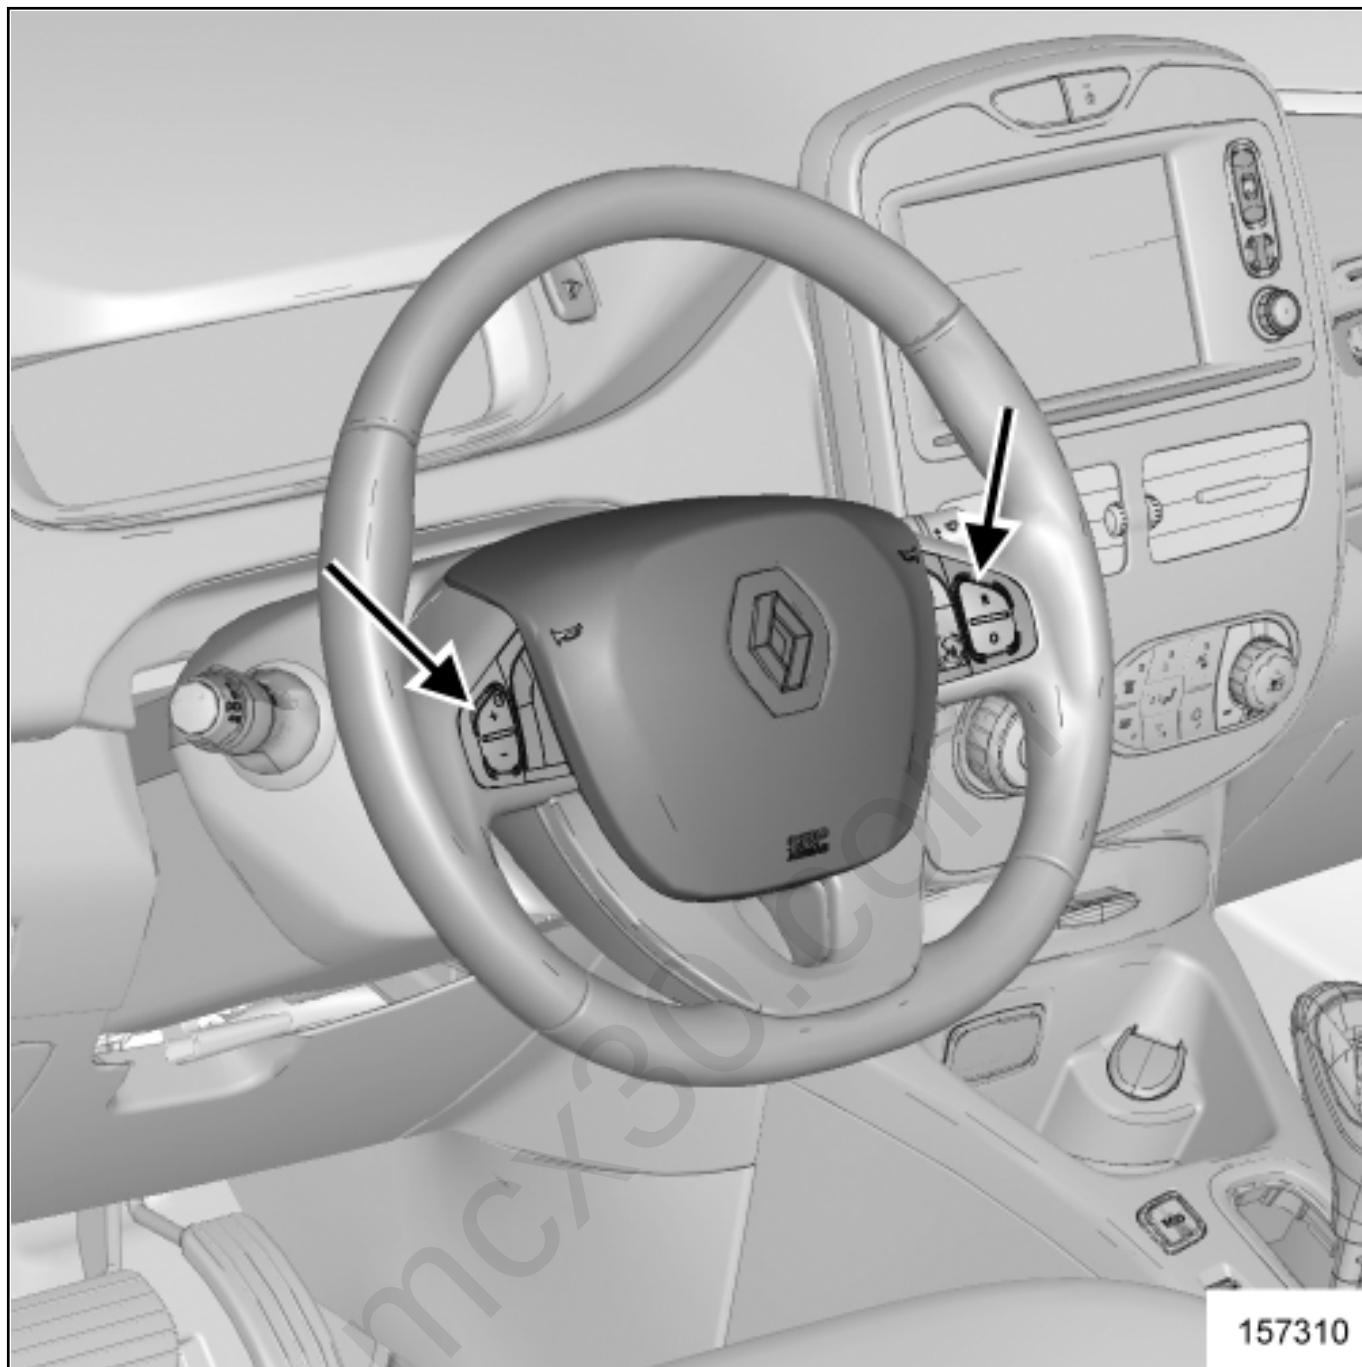

The steering column switches cannot be separated from the steering wheel.

In the event of any faults, replace the steering wheel(see **Steering assembly: Exploded view**) .


■ Apply the before / after repair procedure using the Diagnostic tool(see **Diagnostic tool : Use**) :

-Computer concerned by the Before / After repair procedure:

■"Electric vehicle central control unit" ,

-Component controlled by this computer concerned by the Before / After repair procedure:

■"Cruise control and speed limiter control" .

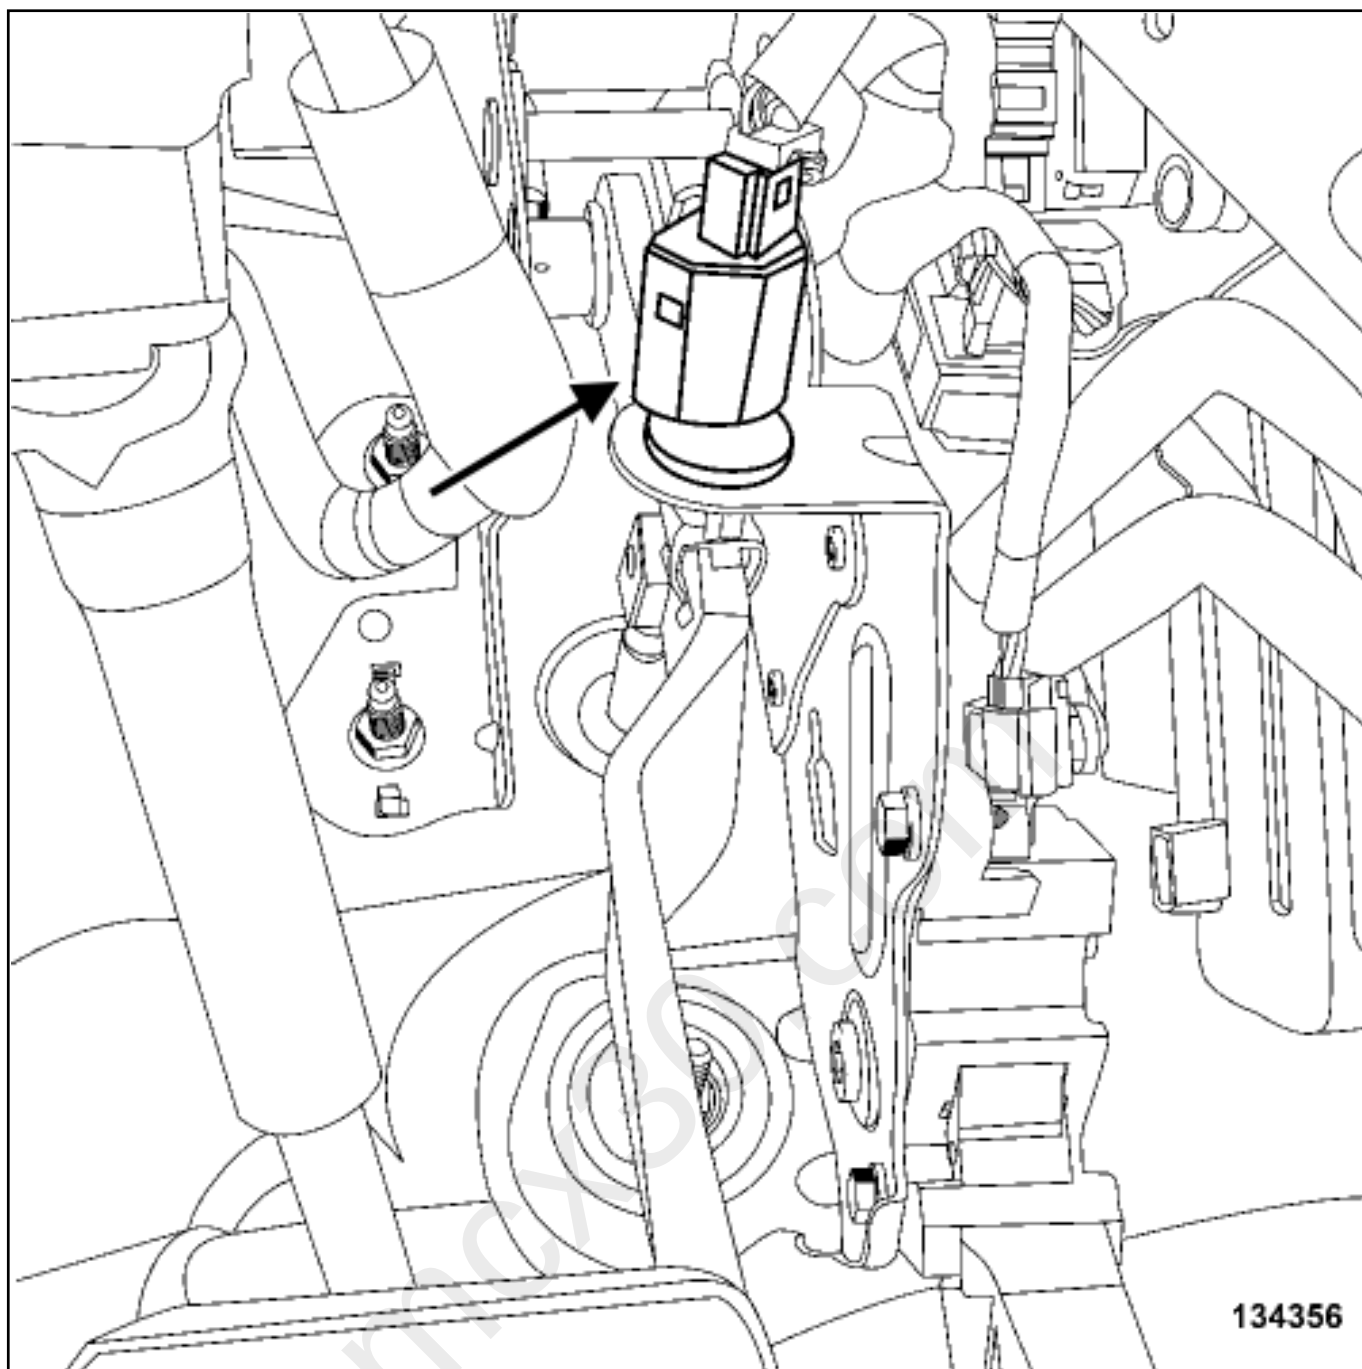

(see **Pedal assembly: Exploded view**)



Repair-30x04x08-02x51-1-23-1.xml



XSL version : 3.02 du 22/07/11