

DASHBOARD: STRIPPING-REBUILDING



Note, one or more warnings are present in this procedure



STRIPPING

1. STRIPPING PREPARATION OPERATION

WARNING

 DANGER : Risk of serious injury due to short-circuiting or untimely triggering of an electrical system (pyrotechnic components, windscreen wiper motor, fan assembly etc.) following possible re-supply of the 12-volt supply circuit by the voltage converter.

Please follow the instructions regarding disconnection of the 12-volt supply circuit.

If the procedure fails, do not continue with your task and ask an employee who is qualified and authorised to work on a high-voltage onboard network to perform fault finding [Vehicle: Precautions for the repair](#) .

■ Disconnect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .

■ Remove the dashboard [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) .

2. STRIPPING OPERATION

- Remove:
- the front left-hand side air duct [Air distribution circuit assembly: Exploded view](#) ,
 - the start button [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,
 - the tweeters [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,
 - the passenger frontal airbag screws on the dashboard [Passenger's frontal airbag: Removal - Refitting](#) ,
 - the passenger frontal airbag [Passenger's frontal airbag: Removal - Refitting](#) ,
 - the telematics computer [Navigation: List and location of components](#) ,
 - the dashboard air vents [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,
 - the solar radiation sensor [Solar radiation sensor: Removal - Refitting](#) .

REBUILDING

1. REBUILDING OPERATION

Refit:

- the solar radiation sensor [Solar radiation sensor: Removal - Refitting](#) ,
- the dashbord air vents ([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) ,
- the telematics computer [Navigation: List and location of components](#) ,
- the passenger frontal airbag [Passenger's frontal airbag: Removal - Refitting](#) ,
- the passenger frontal airbag screws on the dashboard [Passenger's frontal airbag: Removal - Refitting](#) ,
- the twetters ([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) ,
- the start button ([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) ,
- the front left-hand side air duct [Air distribution circuit assembly: Exploded view](#) .

2. FINAL OPERATION

Proceed in the reverse order to removal.

Connect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .



Repair-50x08x02x02-01x31-1-14-1.xml



XSL version : 3.02 du 22/07/11