

DISTRIBUTION MOTOR: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



Equipment required

Diagnostic tool

WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [Air conditioning: Precautions for the repair](#) ,
- [Vehicle: Precautions for the repair](#) .


Locations and specifications (tightening torques, parts to always be replaced, etc.) [\(see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Remove the glovebox [Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

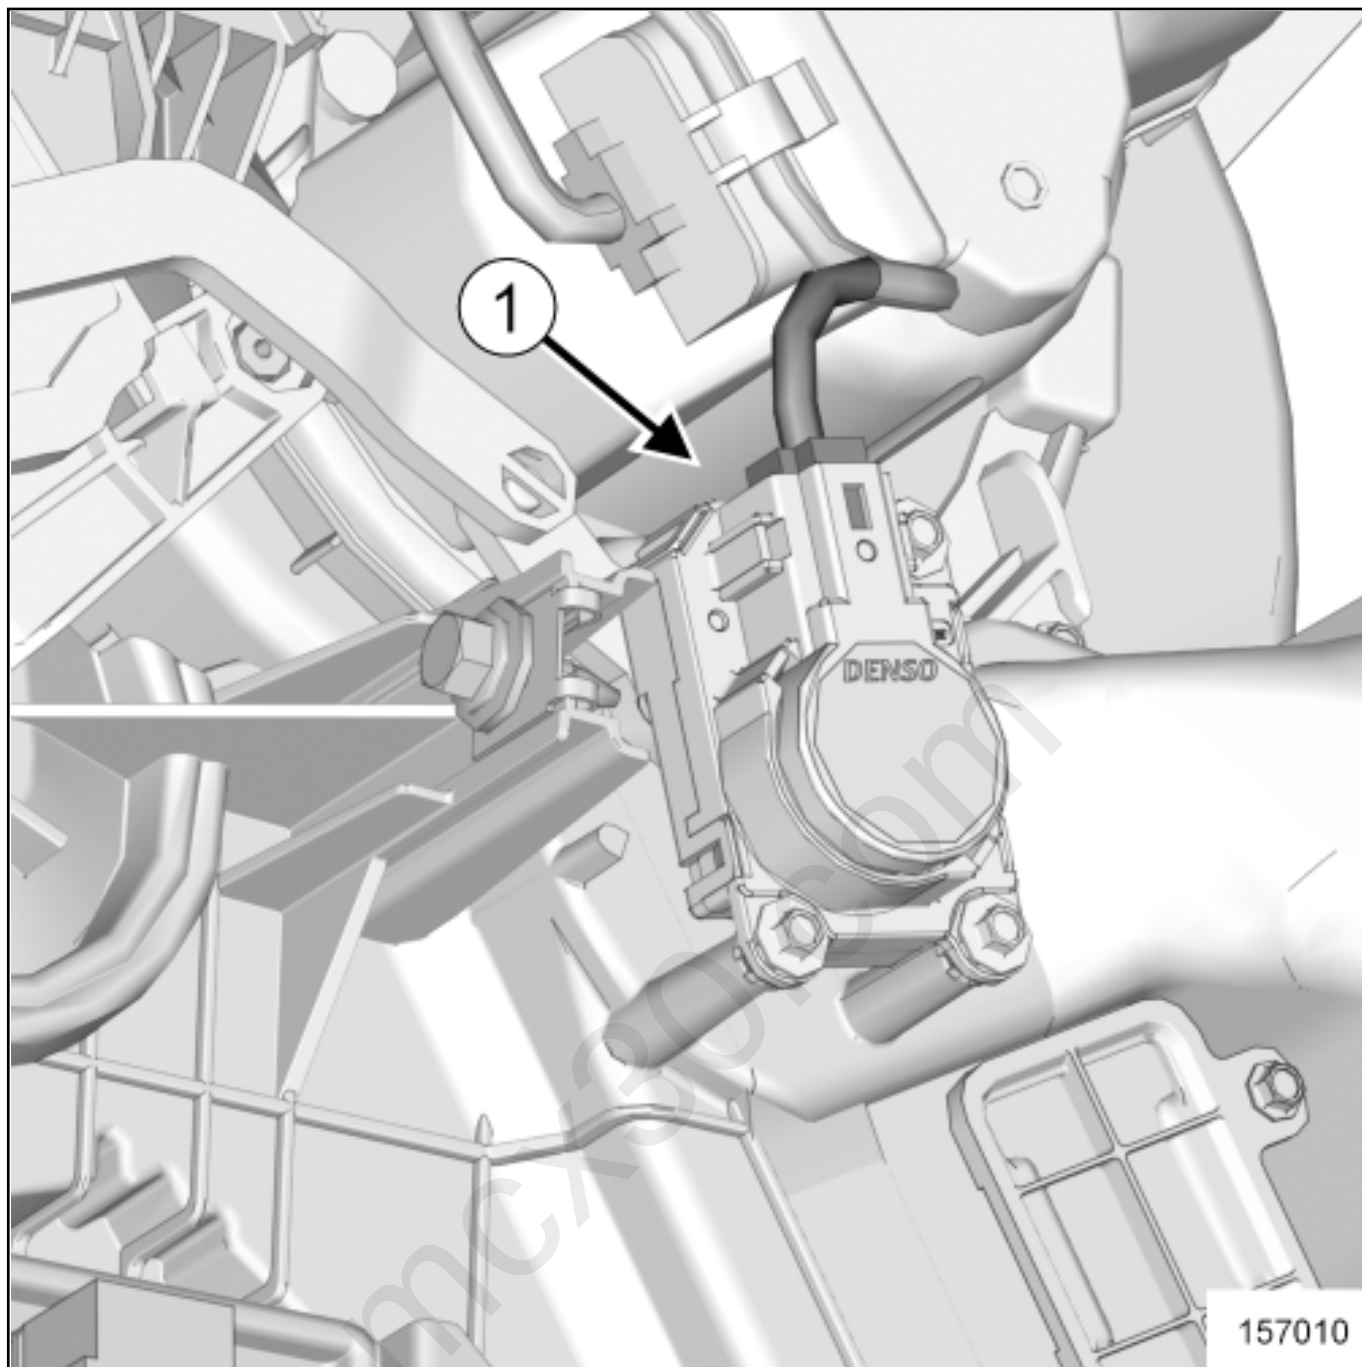

- Disconnect the distribution motor connector(1) .
- Move the bracket from the distribution motor.
- Unclip the distribution motor from the distribution unit([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#))

REFITTING

- Proceed in the reverse order to removal.

 Apply the after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerned by the After repair procedure:

■"Air conditioning computer" ,

-Component controlled by this computer concerned by the After repair procedure:

■"Distribution motor" .



Repair-30x02x04x09-01x37-1-32-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com