

DRIVER'S FRONTAL AIRBAG: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING

Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions Vehicle: Precautions for the repair



WARNING

■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- (see 88C, Airbags and pretensioners, Airbag and pretensioners: Precautions for the repair) ,
- Vehicle: Precautions for the repair .

REMOVAL

1. REMOVAL PREPARATION OPERATION



WARNING

DANGER : Risk of serious injuries due to the short-circuiting or the untimely triggering of an electrical system (pyrotechnical parts, windscreen wiper motor, electric fan, etc.) following possible loopback of the 12-volt supply circuit by the voltage transformer.


Please adhere to the instructions regarding cut-off of the 12-volt supply circuit.

If the procedure fails, do not continue with your task and ask an employee who is qualified and authorized to work on a high-voltage onboard network to perform a diagnostic Vehicle: Precautions for the repair .

■ Disconnect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .


■ Turn the steering wheel one half-turn.

2. OPERATION FOR REMOVAL OF PART CONCERNED

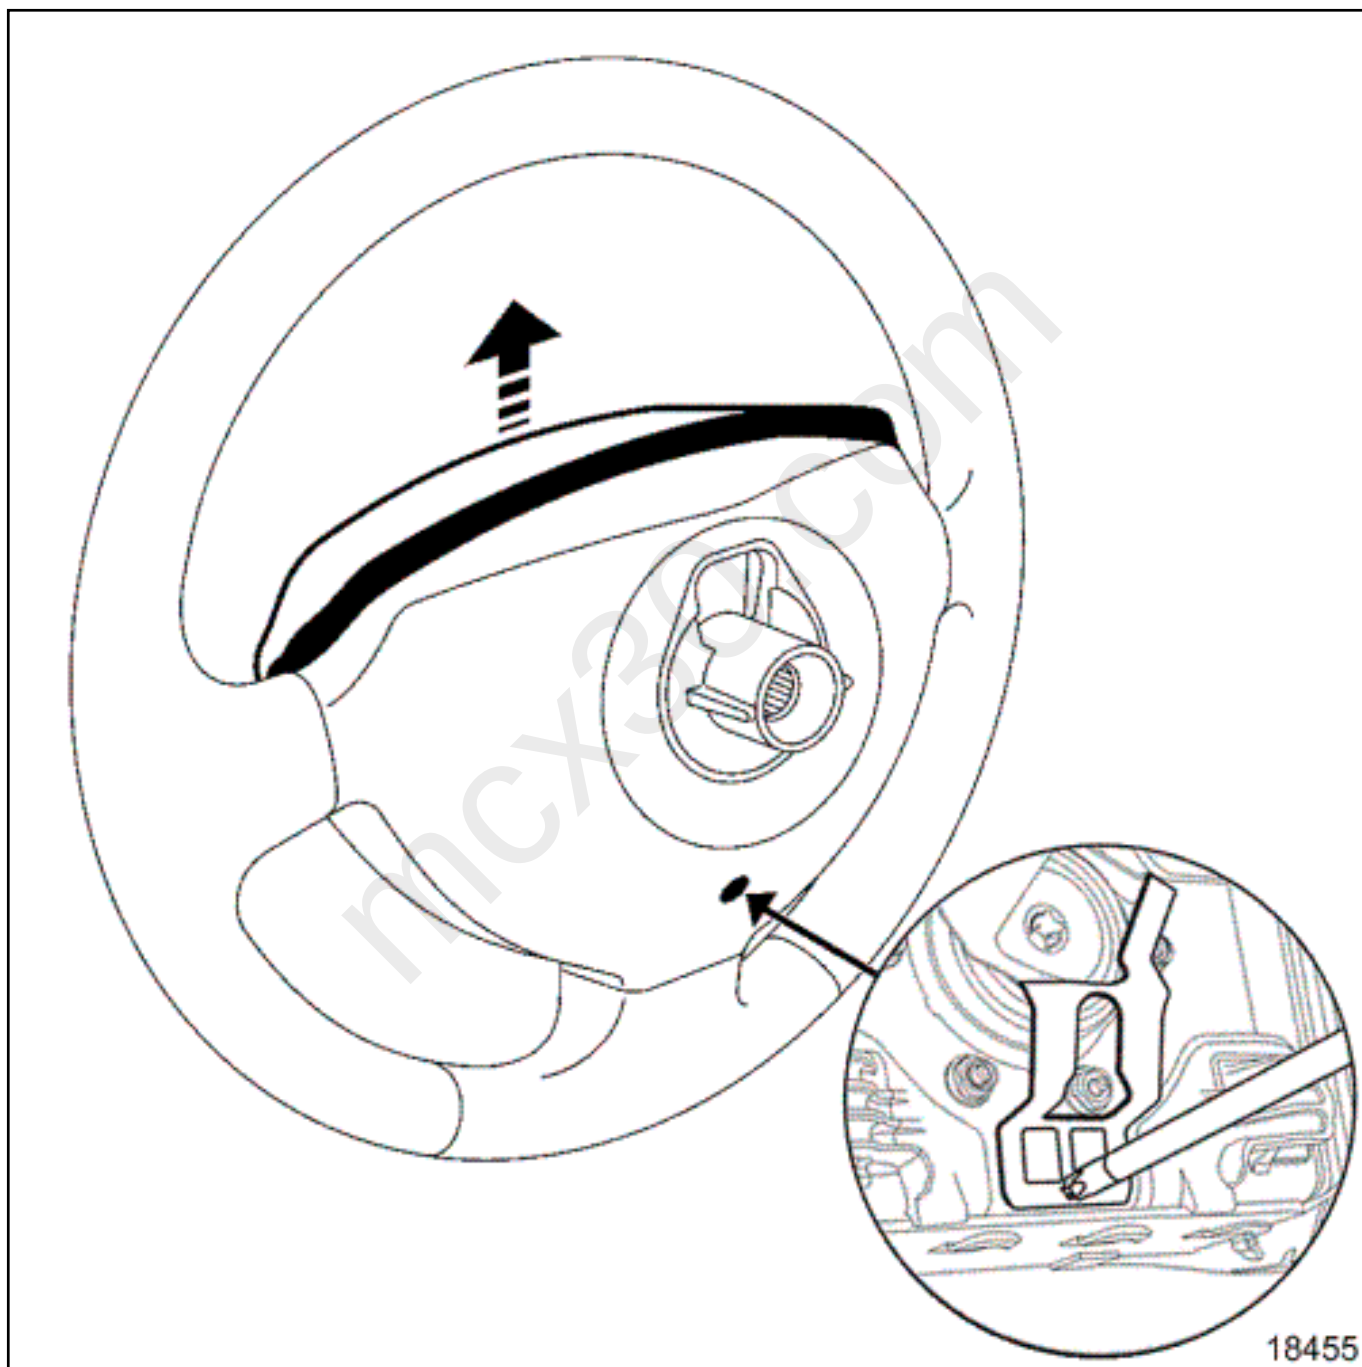

■ Insert a screwdriver (type T30) into the aperture(1) located behind the steering wheel.

■ Unclip the clip(2) by pushing the screwdriver, whilst pushing the airbag according to the direction(3) .

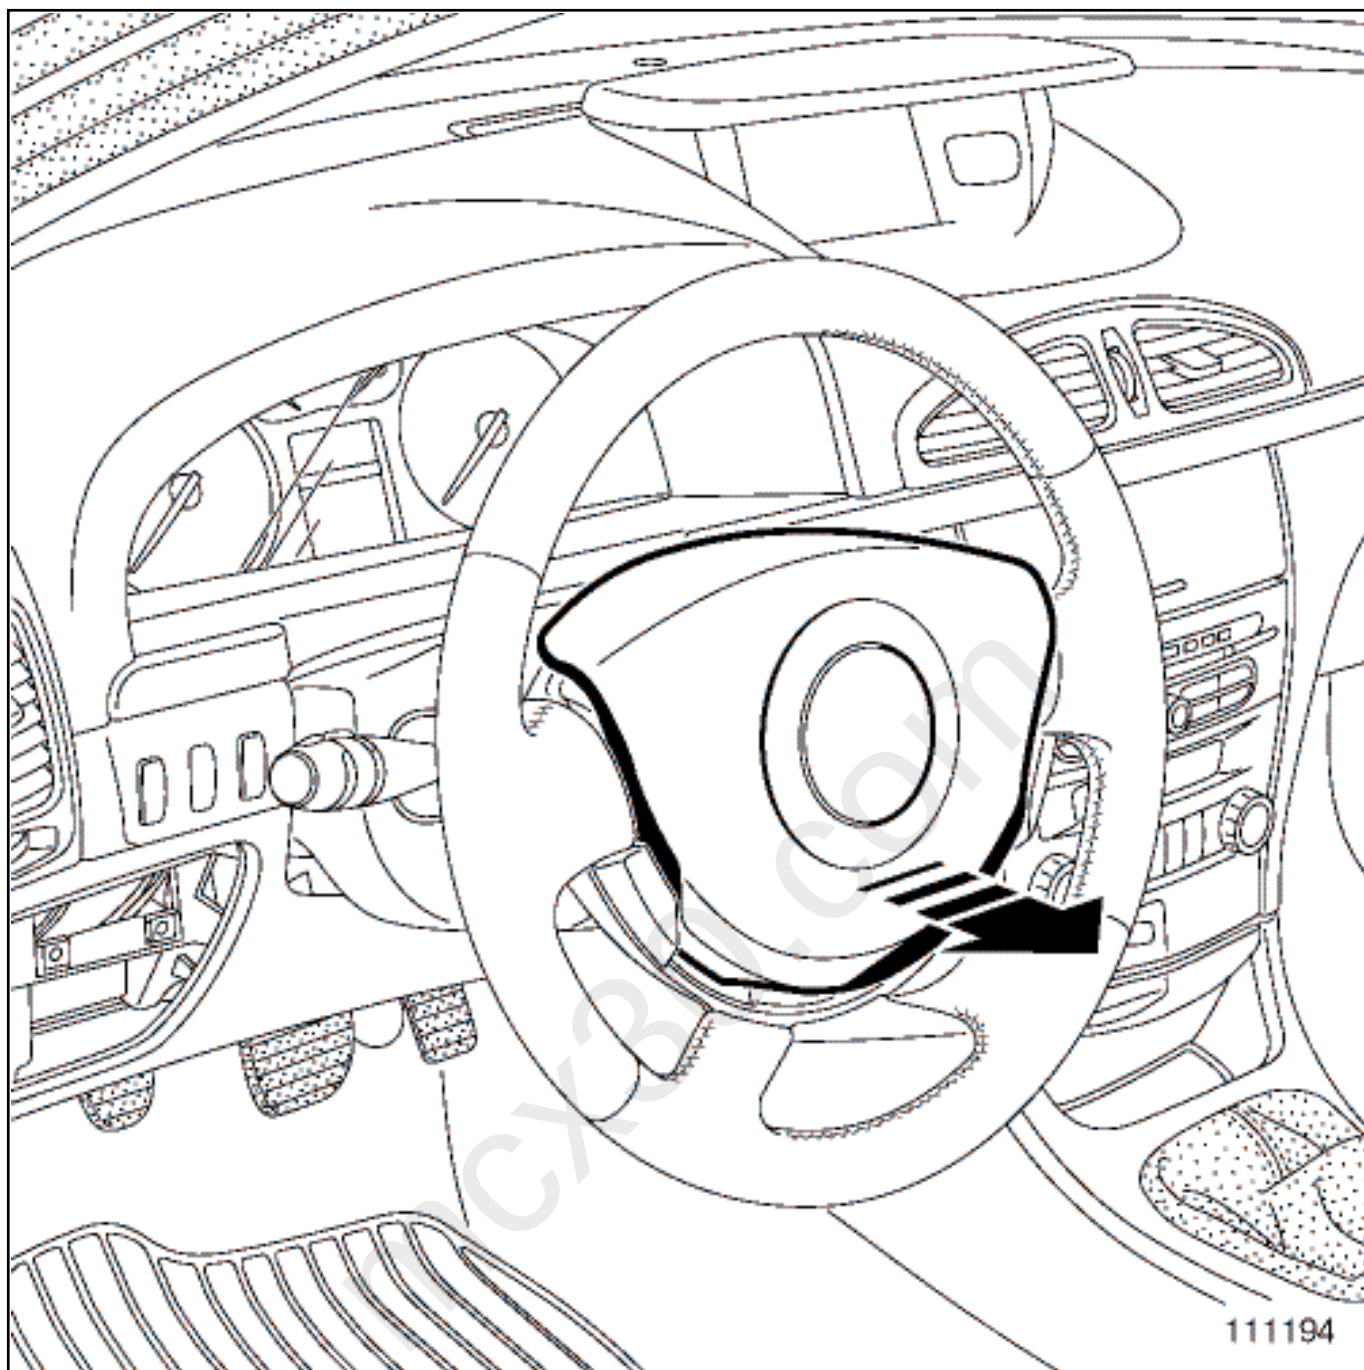

- Remove the driver's front airbag.
- Unlock the connector(s) of the driver's frontal airbag.
- Disconnect the connector(s).

REFITTING

1. REFITTING OPERATION FOR PART CONCERNED

- Proceed in the reverse order to removal.

2. FINAL OPERATION

- Connect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .

3. CHECKING AFTER REPAIR

- Switch on the ignition.
- Check that there are no faults on the instrument panel.



Repair-31x02x01x15-01x37-1-7-1.xml



XSL version : 3.02 du 22/07/11