

DRIVESHAFTASSEMBLY:EXPLODEDVIEW



Note, one or more warnings are present in this procedure



Special tooling required	
Type clip pliers for driveshafts with a thermoplastic gaiter.	Tav. 1168
Pliers for the driveshaft gaiter collar.	Tav. 1784
Tool for fitting differential output seals	Bvi. 1960



WARNING

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [\(see 29A, Driveshafts, Driveshaft: Precautions for the repair\)](#).
- [Vehicle: Precautions for the repair](#).

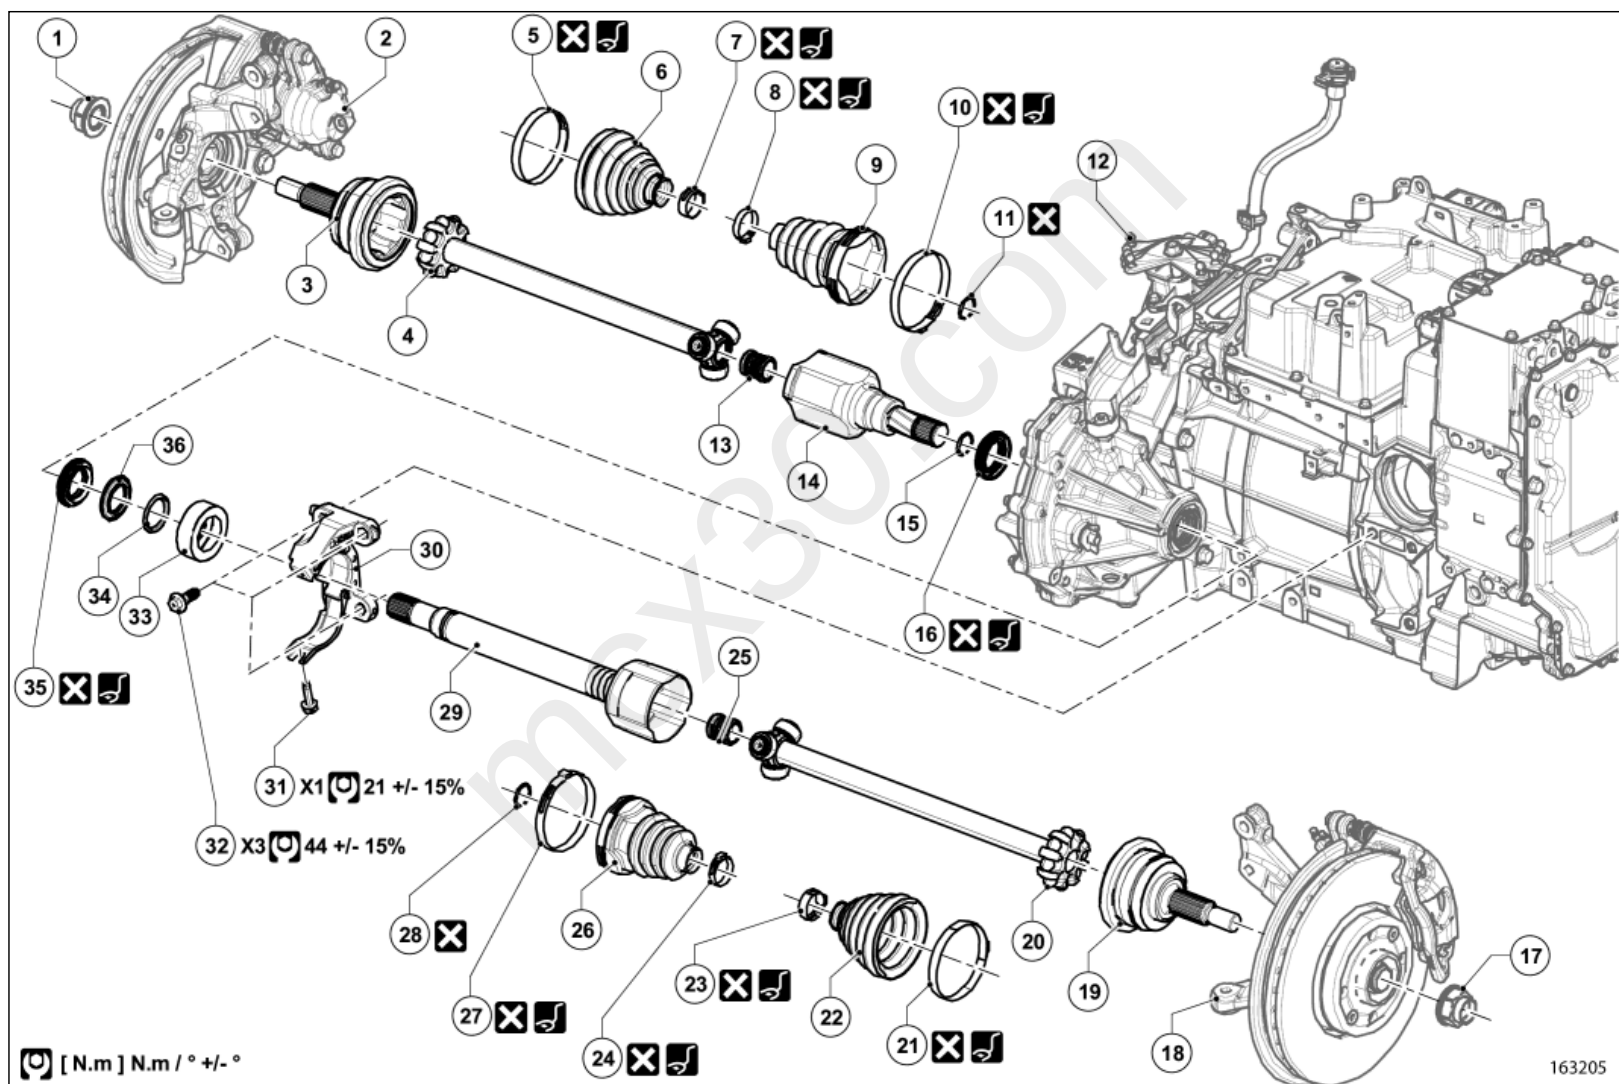


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Driveshaft nut	
2	Front hub carrier assembly	Front hub carrier assembly: Exploded view
3	Spider bowl	(see Front left-hand driveshaft gaiter, gearbox side: Removal - Refitting)
4	Front left-hand driveshaft	(see 29A, Driveshafts , Front left-hand driveshaft: Removal - Refitting)
5	Large clip of front driveshaft gaiter, wheel side	Type clip pliers for driveshafts with a thermoplastic gaiter.(Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
6	Front driveshaft gaiter, wheel side	(see 29A, Driveshafts , Front driveshaft gaiter, wheel side: Removal - Refitting)
7	Small clip of front driveshaft gaiter, wheel side	(see 29A, Driveshafts , Front driveshaft gaiter, wheel side: Removal - Refitting) Type clip pliers for driveshafts with a thermoplastic gaiter. (Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
8	Small clip of front left-hand driveshaft gaiter, gearbox side	(see 29A, Driveshafts , Front driveshaft gaiter, wheel side: Removal - Refitting) Type clip pliers for driveshafts with a thermoplastic gaiter. (Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
9	Front left-hand driveshaft gaiter, gearbox side	(see Front left-hand driveshaft gaiter, gearbox side: Removal - Refitting)
10	Large clip of front left-hand driveshaft gaiter, gearbox side	Differential output seal : Removal - Refitting Type clip pliers for driveshafts with a thermoplastic gaiter.(Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
11	Spider circlip	(see Front left-hand driveshaft gaiter, gearbox side: Removal - Refitting)
12	Gearbox assembly	
13	Spring	
14	Spider	(see Front left-hand driveshaft gaiter, gearbox side: Removal - Refitting)
15	Driveshaft circlip	
16	Left-hand differential seal	Differential output seal : Removal - Refitting Tool for fitting differential output seals(Bvi. 1960) -L
17	Driveshaft nut	
18	Front hub carrier assembly	
19	Spider bowl	(see Front left-hand driveshaft gaiter, gearbox side: Removal - Refitting)
20	Right-hand Driveshaft	(see 29A, Driveshafts , Front right-hand driveshaft: Removal - Refitting)
21	Large clip of front driveshaft gaiter, wheel side	Type clip pliers for driveshafts with a thermoplastic gaiter.(Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
22	Front driveshaft gaiter, wheel side	(see 29A, Driveshafts , Front driveshaft gaiter, wheel side: Removal - Refitting)
23	Small clip of front driveshaft gaiter, wheel side	(see 29A, Driveshafts , Front driveshaft gaiter, wheel side: Removal - Refitting) Type clip pliers for driveshafts with a thermoplastic gaiter. (Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
24	Small clip of front right-hand driveshaft gaiter, gearbox side	Type clip pliers for driveshafts with a thermoplastic gaiter.(Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
25	Spring	
26	Front right-hand driveshaft gaiter, gearbox side	(see Front right-hand driveshaft gaiter, gearbox side: Removal - Refitting)

27	Large clip of front right-hand driveshaft gaiter, gearbox side	Type clip pliers for driveshafts with a thermoplastic gaiter.(Tav. 1168) ; Pliers for the driveshaft gaiter collar.(Tav. 1784)
28	Clip	
29	Relay shaft	(see 29A, Driveshafts , Relay shaft bearing: Removal - Refitting)
30	Relay shaft bearing housing	
31	Bolt	
32	Bolt	
33	Relay shaft bearing	(see 29A, Driveshafts , Relay shaft bearing: Removal - Refitting)
34	Relay shaft bearing circlip	(see 29A, Driveshafts , Relay shaft bearing: Removal - Refitting)
35	Right-hand differential seal	Differential output seal : Removal - Refitting Tool for fitting differential output seals(Bvi. 1960) -R
36	Dust seal washer	