

EARTHS ON BODY: LIST AND LOCATION OF COMPONENTS



Note, one or more warnings are present in this procedure




CAUTION

To avoid damaging the vehicle's electrical and electronic components, disconnect the earths of any wiring near the weld area.


Position the welding machine earth as close as possible to the weld zone (see MR 400).

For the earth stud replacement procedure [Earth screw connection: Description](#) .

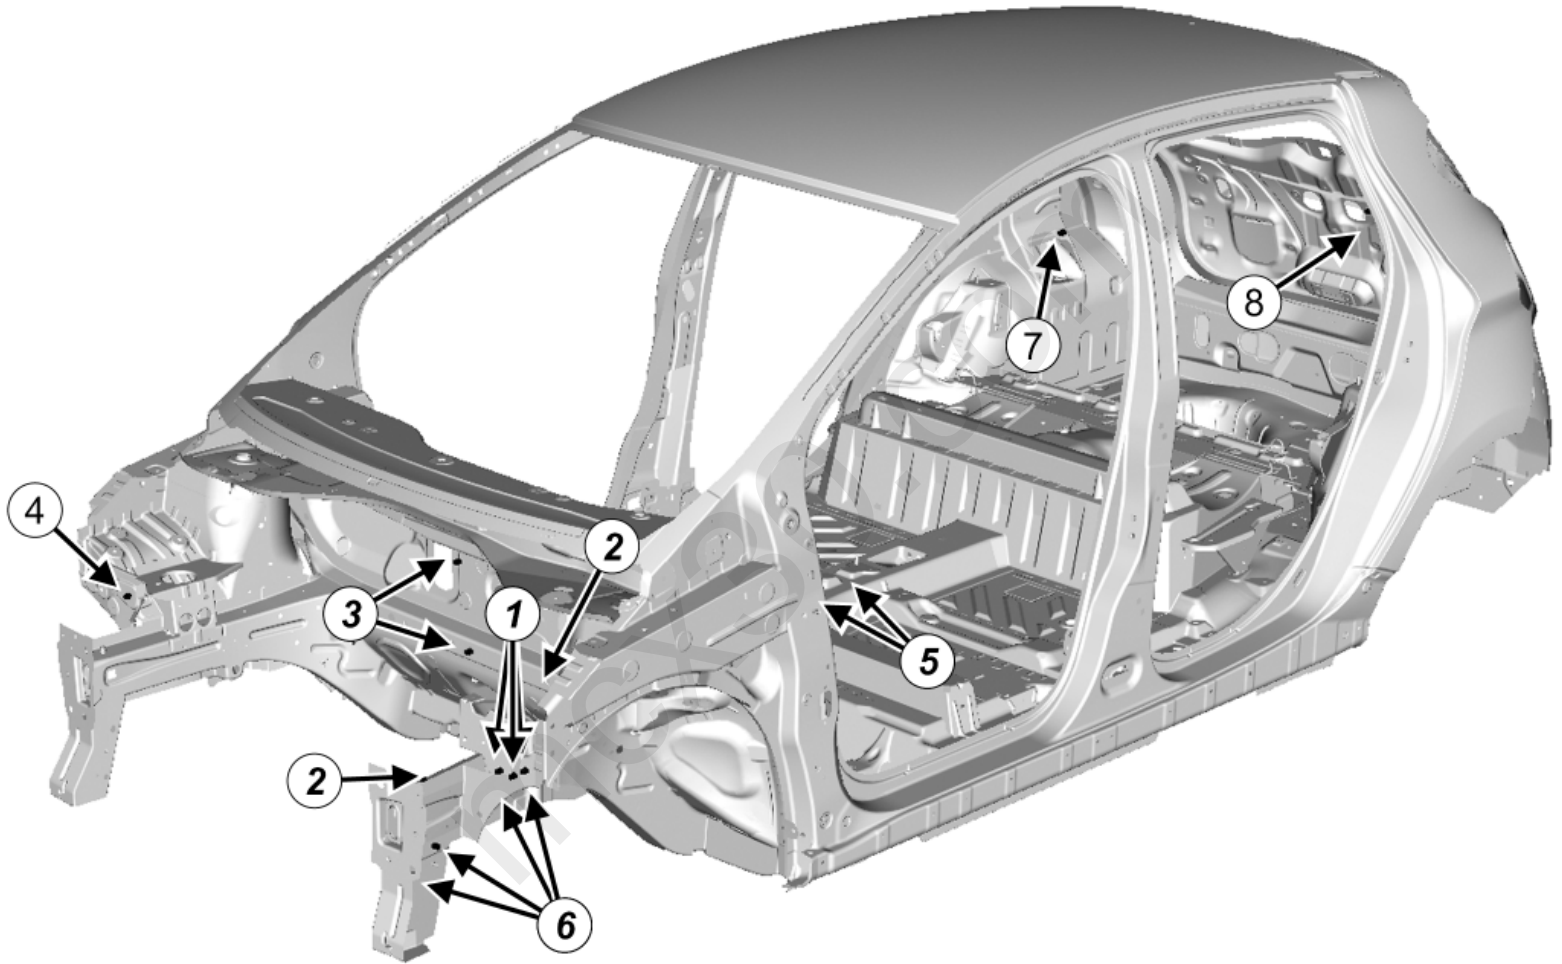


157178

1. DETAILED VIEW OF THE POSITION OF EARTHS ON THE VEHICLE

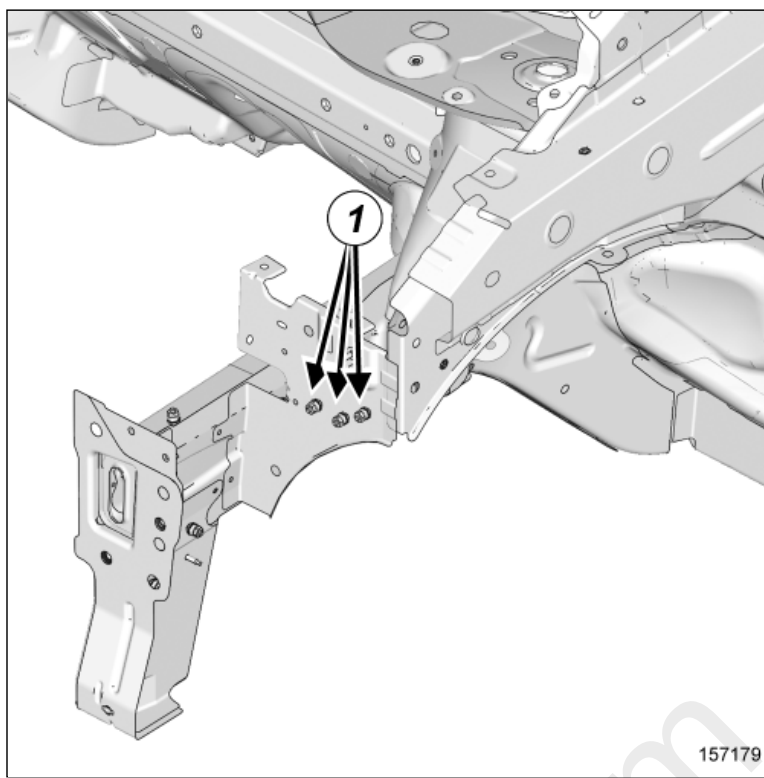


Earth studs on the connection component between the front left-hand side member and the left-hand A-pillar lining(1) .

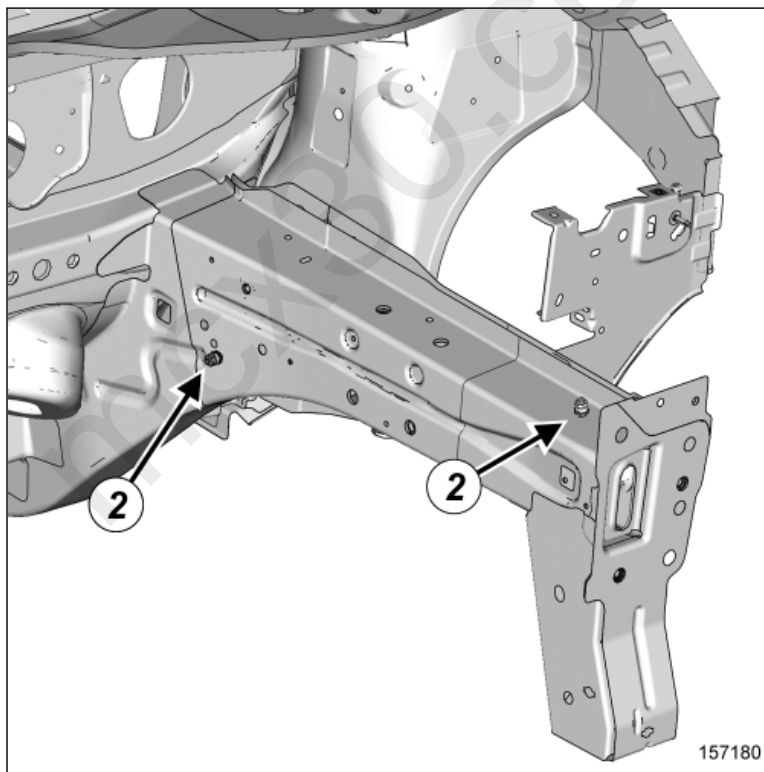


Earth stud on the left-hand front end side cross member(2) .


Earth stud on left-hand front half unit(2) .

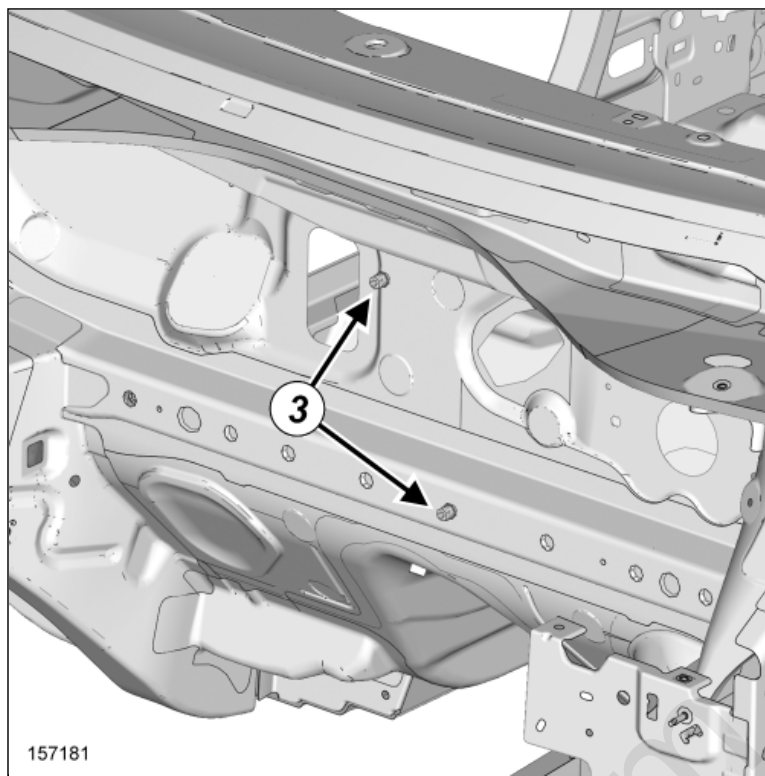


Earth studs on bulkhead(3) .

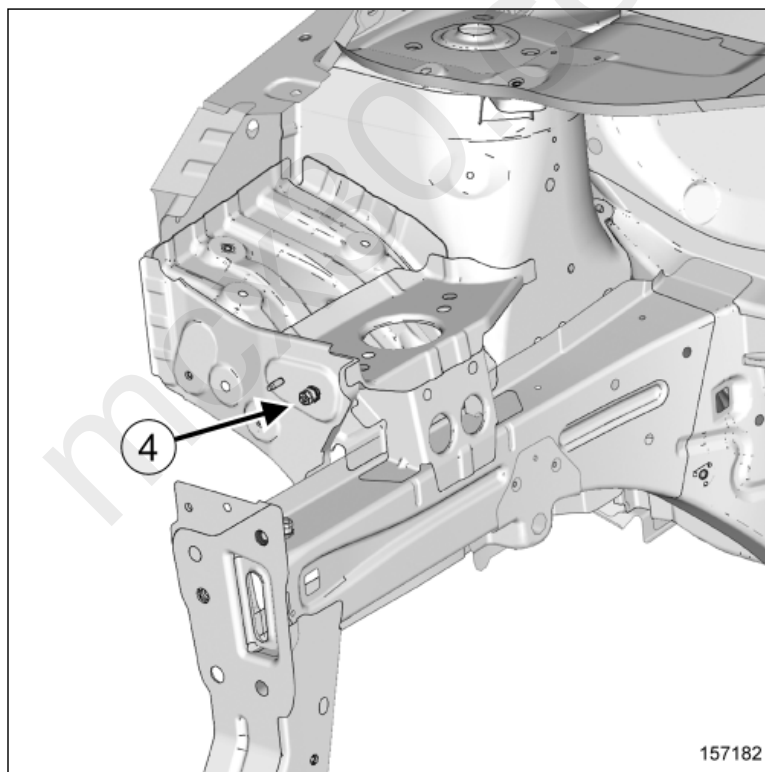



Earth stud on the connection component between the front right-hand side member and the right-hand A-pillar lining(4) .

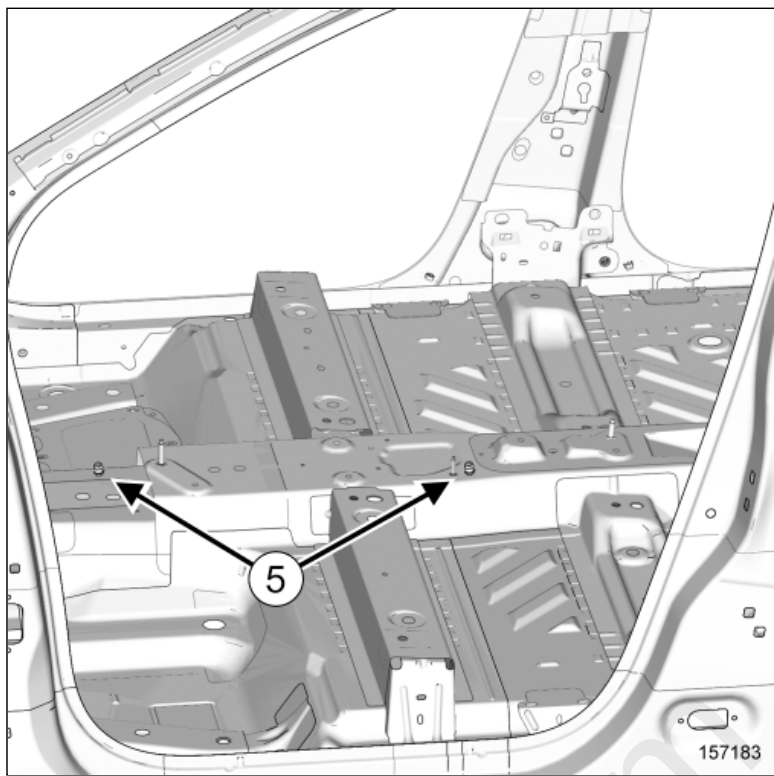

Earth studs on the centre floor tunnel(5) .

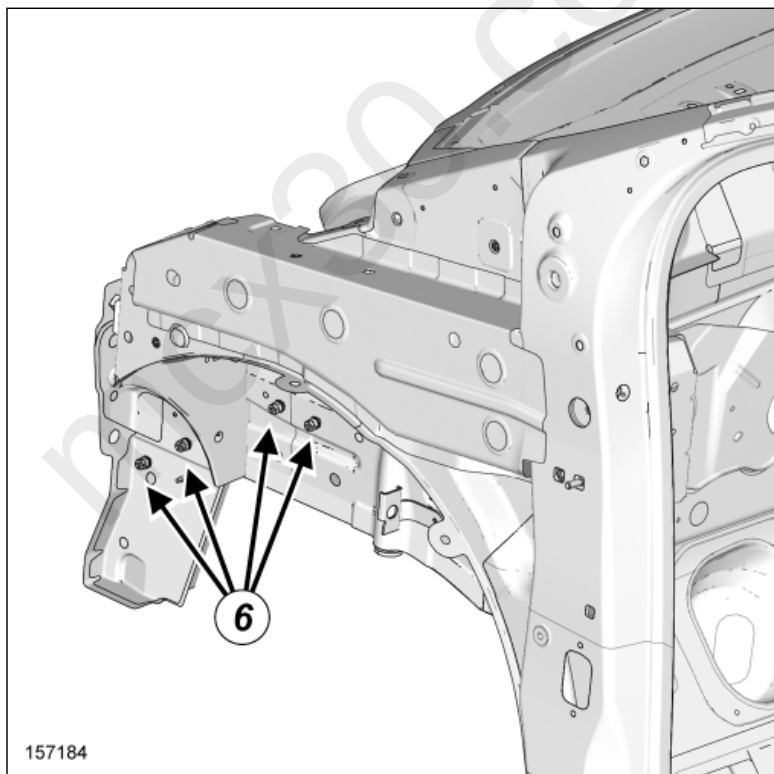

Earth studs on the front left-hand side member(6) .

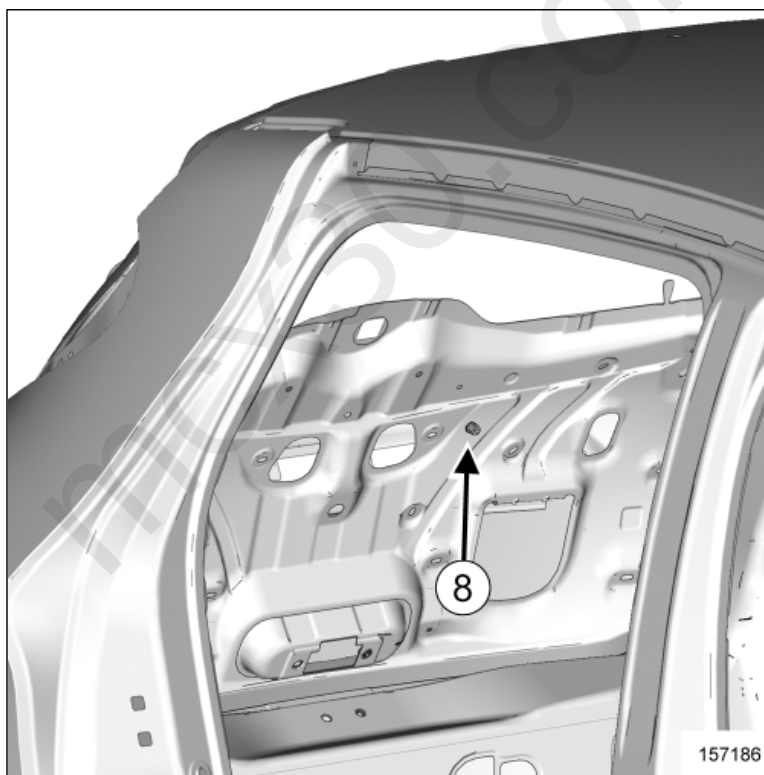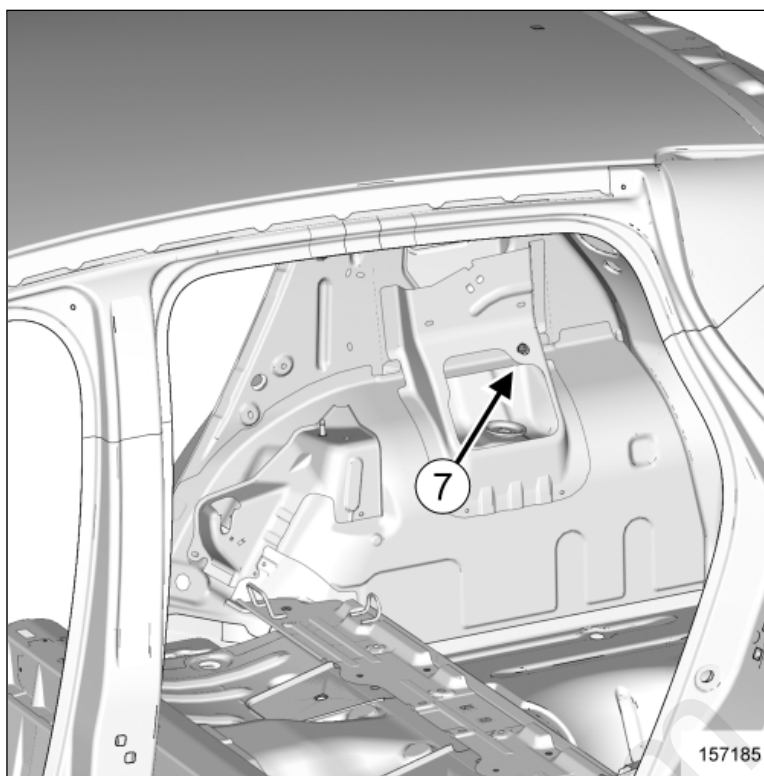

Earth stud on right-hand inner wheel arch(7) .

Earth stud on the tailgate(8) .



Repair-40x01x16-02x51-1-21-1.xml

