

ELECTRIC POWER TRAIN ASSEMBLY : EXPLODED VIEW

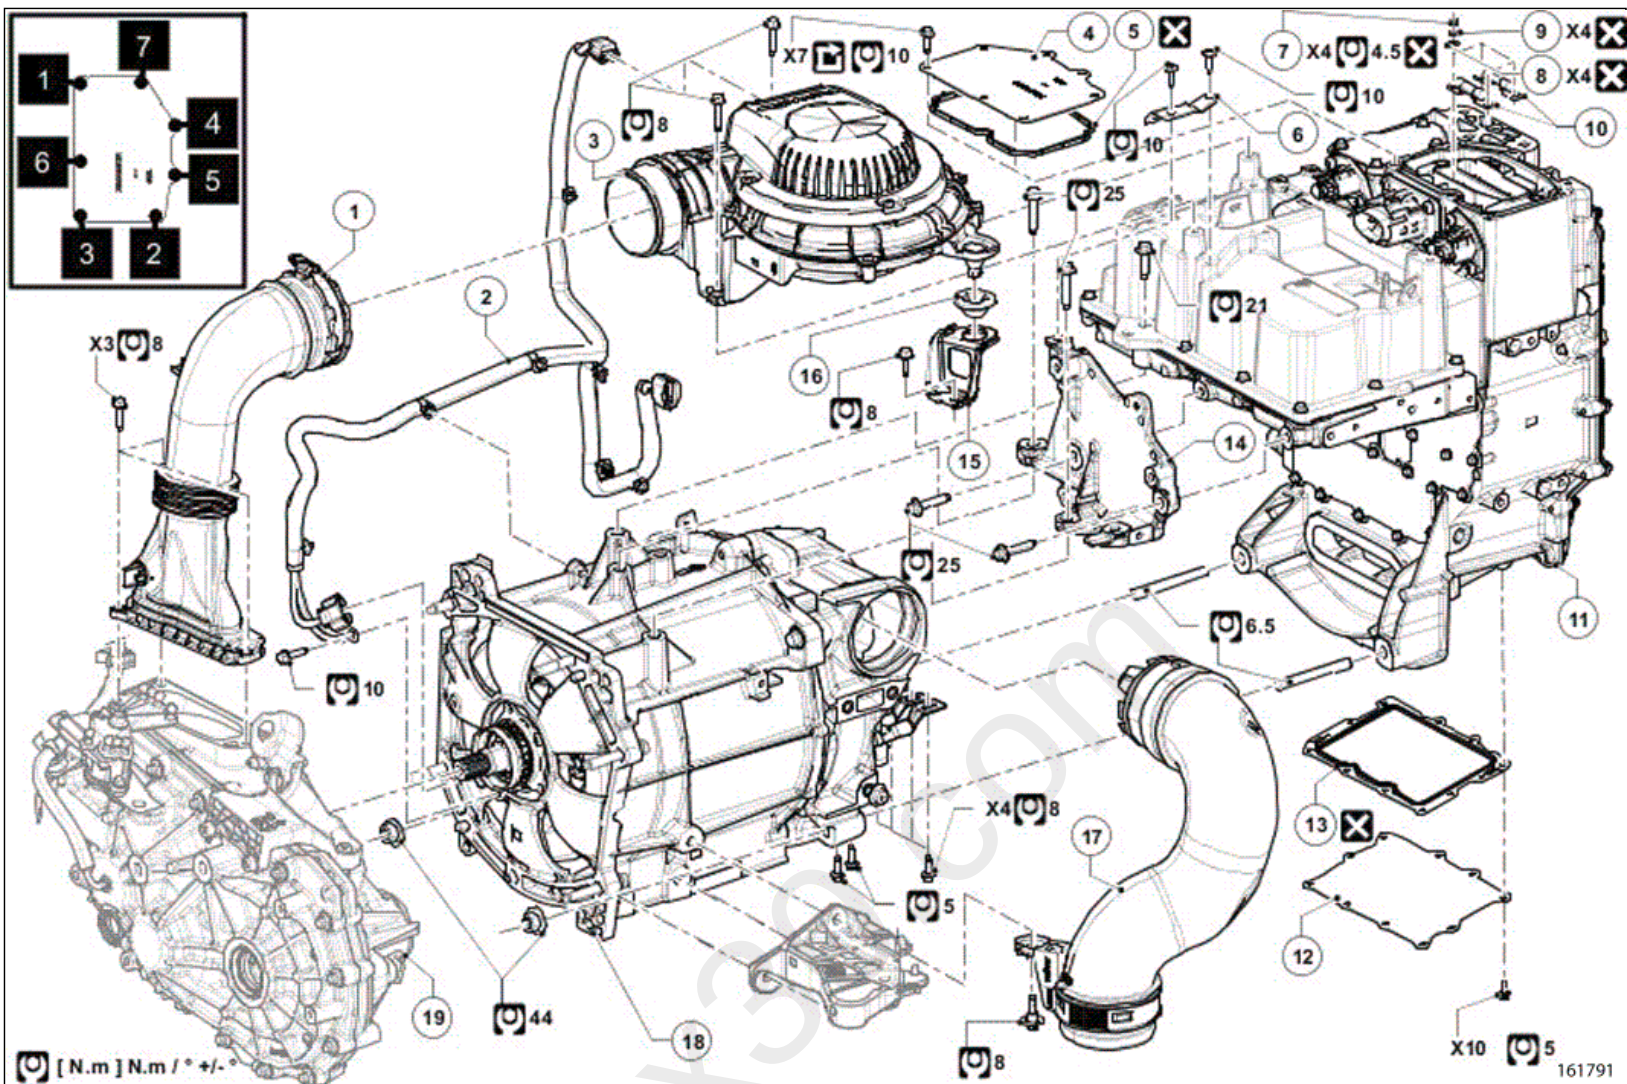


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#).

Marks	Designations	Informations
1	Front air distribution duct	
2	Electric traction motor signal wiring	(see 17E, Power electronics, Electric powertrain assembly wiring : Removal - Refitting)
3	Electric traction motor fan assembly	Electric traction motor fan assembly : Removal - Refitting
4	Fuse flap	(see 17E, Power electronics, Electric traction power electronics fuses : Removal - Refitting)
5	Fuse flap seal	(see 17E, Power electronics, Electric traction power electronics fuses : Removal - Refitting)
6	Charger and converter support	
7	Nut	
8	Fuse washer	(see 17E, Power electronics, Electric traction power electronics fuses : Removal - Refitting)
9	Fuse washer	(see 17E, Power electronics, Electric traction power electronics fuses : Removal - Refitting)
10	Fuse	(see 17E, Power electronics, Electric traction power electronics fuses : Removal - Refitting)
11	Electric vehicle charger and converter	(see 17E, Power electronics, Electric vehicle charger and converter: Removal - Refitting)
12	Access flap to engine electrical connections of electric vehicle charger and converter	
13	Access flap seal to engine electrical connections of electric vehicle charger and converter	
14	Charger and converter support	
15	Electric motor cooling fan assembly mounting	
16	Rubber pad	
17	Rear air outlet duct	
18	Electric traction motor assembly	(see 17E, Power electronics, Electric powertrain assembly : Removal - Refitting)
19	Electric traction reducer assembly	