

EVAPORATOR SENSOR: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [\(see 62A, Air conditioning, Air conditioning: Precautions for the repair\)](#) ,
- [Vehicle: Precautions for the repair](#) .


Locations and specifications (tightening torques, parts to always be replaced, etc.) [Passenger compartment heating and ventilation assembly: Exploded view](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Unclip the left-hand trim of the centre console.

2. REMOVAL OPERATION

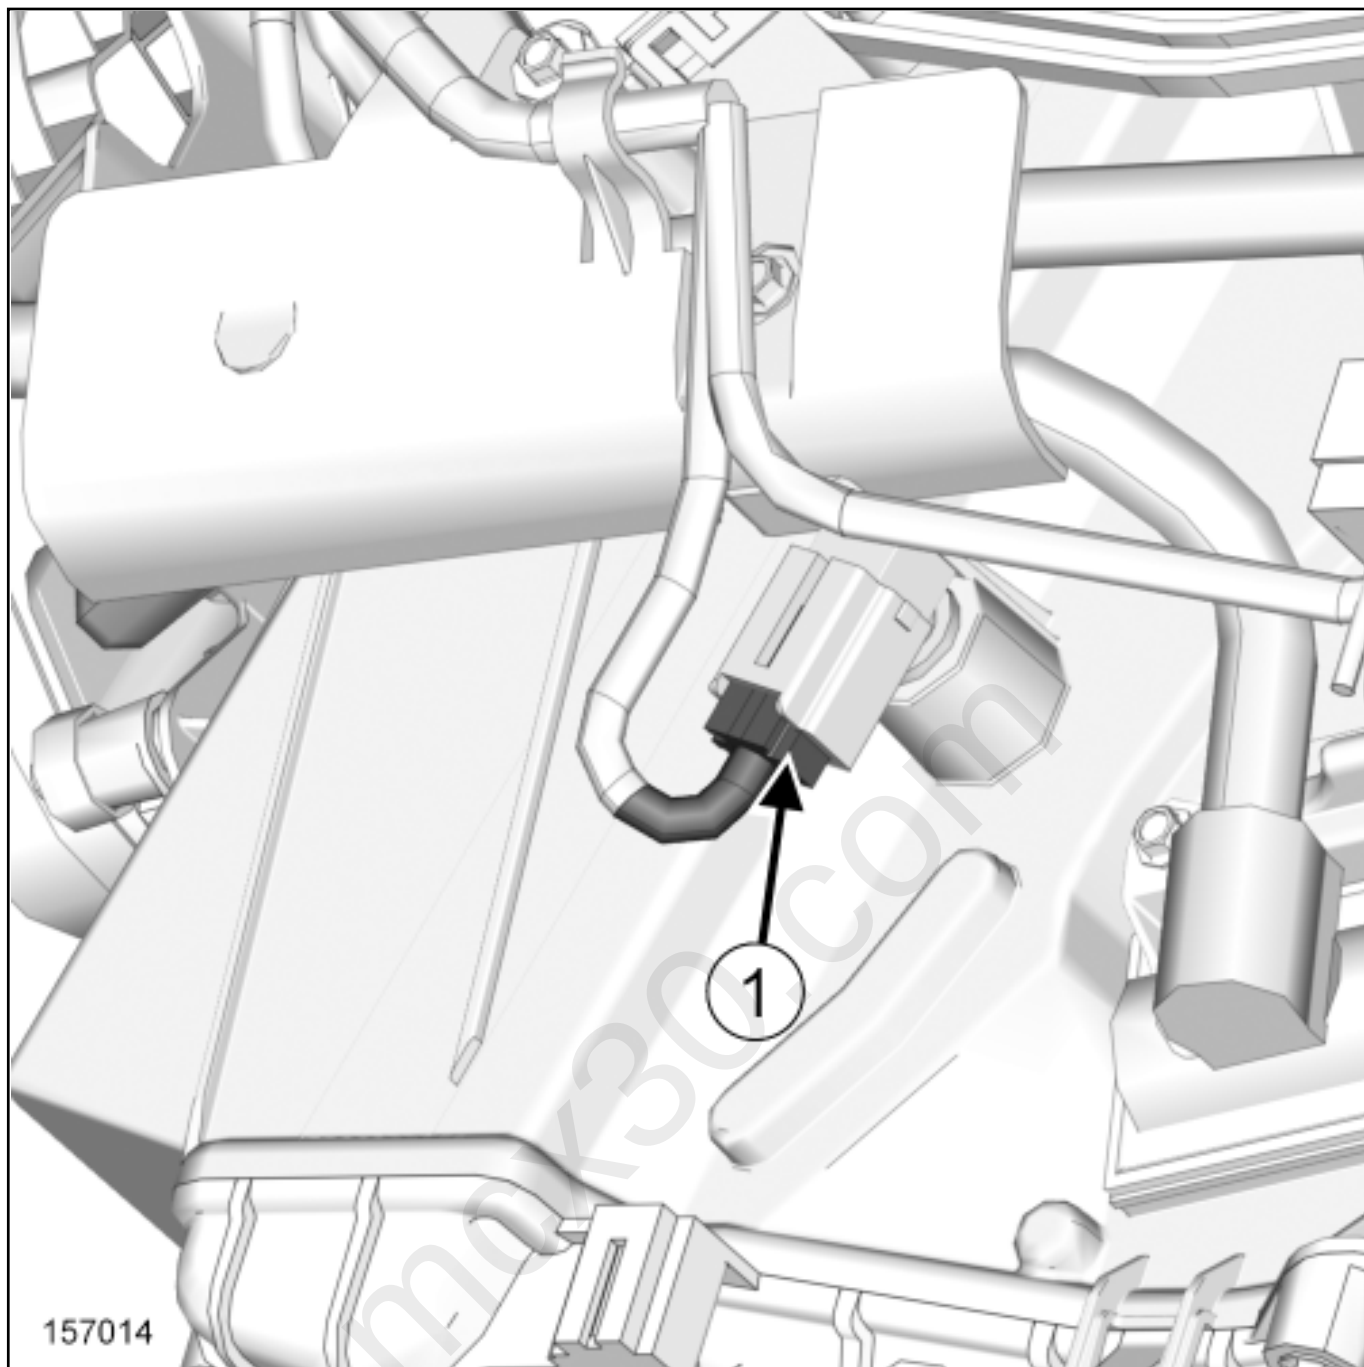

- Disconnect the evaporator sensor connector(1) .
- Remove the evaporator sensor [Passenger compartment heating and ventilation assembly: Exploded view](#) .


REFITTING

- Proceed in the reverse order to removal.

1. REMOVAL PREPARATION OPERATION

- Unclip the left-hand trim of the centre console.

2. REMOVAL OPERATION

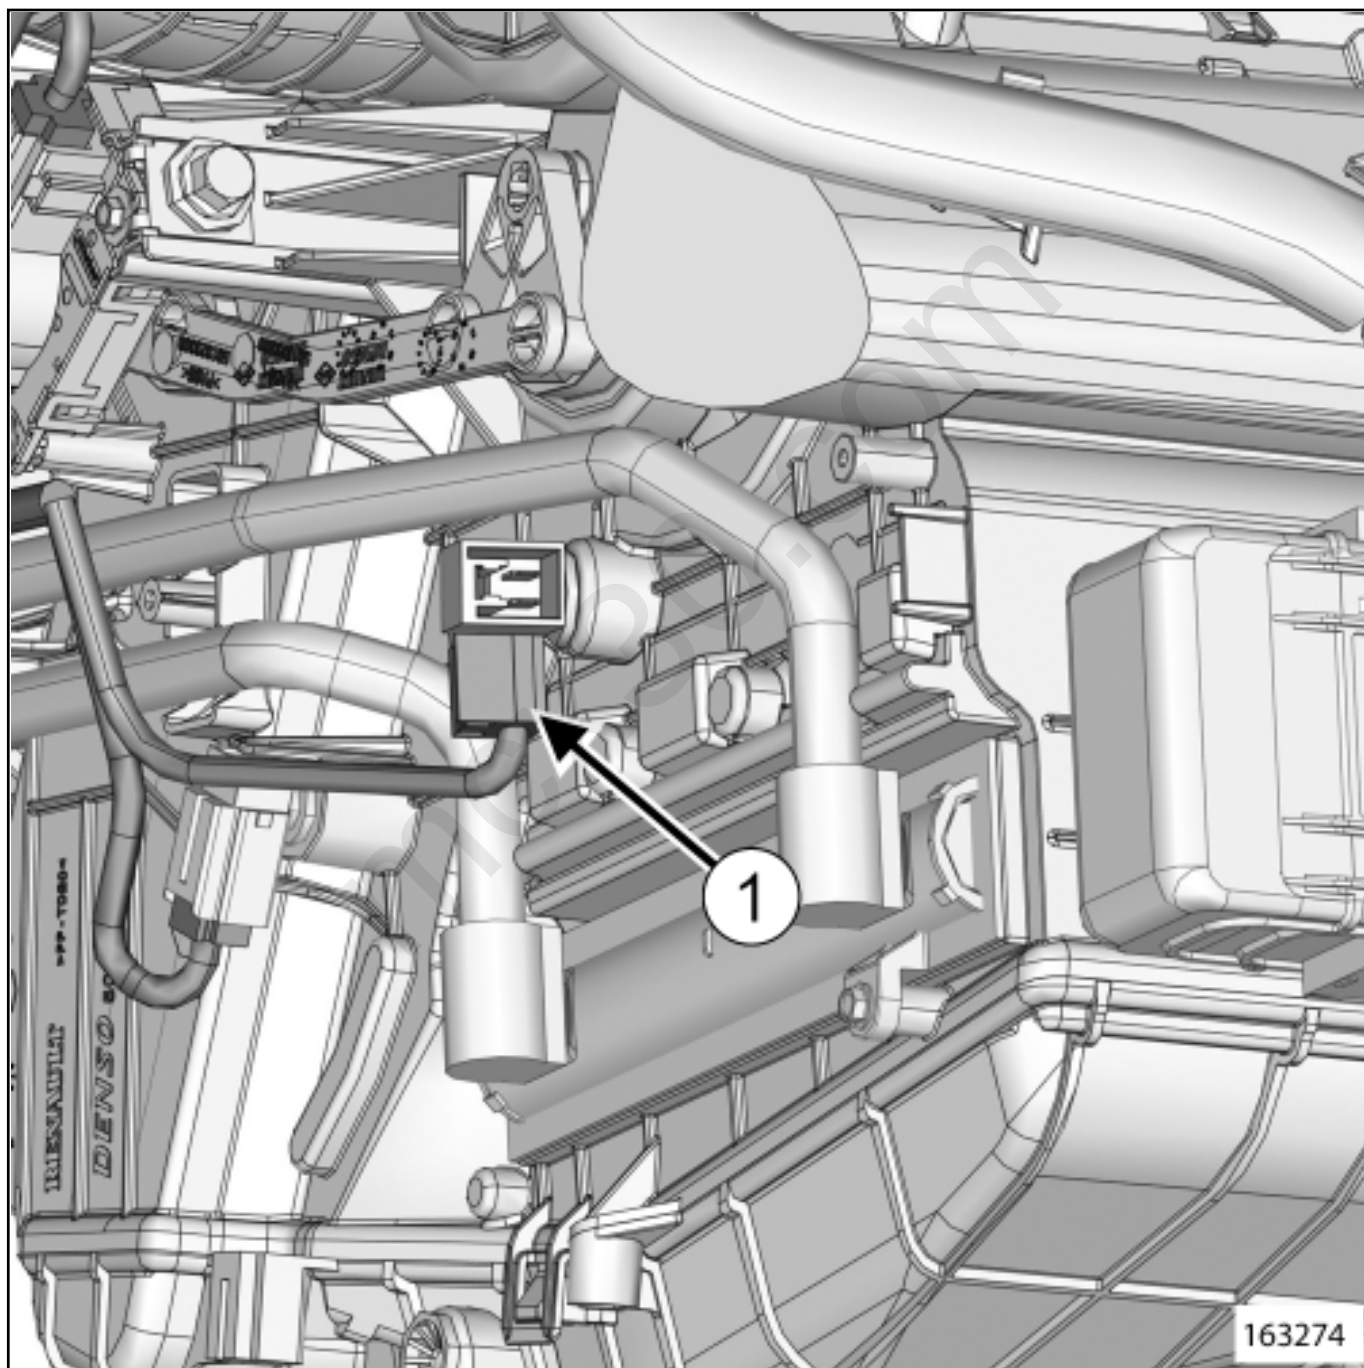

- Disconnect the inner condenser sensor temperature(1) .

- Remove the inner condenser sensor temperature [Passenger compartment heating and ventilation assembly:](#)

REFITTING

 Proceed in the reverse order to removal.



Repair-30x02x02x08-01x37-1-20-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com