

# EXTERIOR TEMPERATURE SENSOR: REMOVAL - REFITTING



Note:

The exterior temperature sensor is located in the door mirror on the right-hand side.

## REMOVAL


### 1. REMOVAL PREPARATION OPERATION

- Remove [Door mirror: Removal - Refitting](#) :
  - the right-hand door mirror glass,
  - the right-hand door mirror casing.

- Move the right-hand door mirror glass support.

### 2. REMOVAL OPERATION

- Remove the exterior temperature sensor from its mounting.

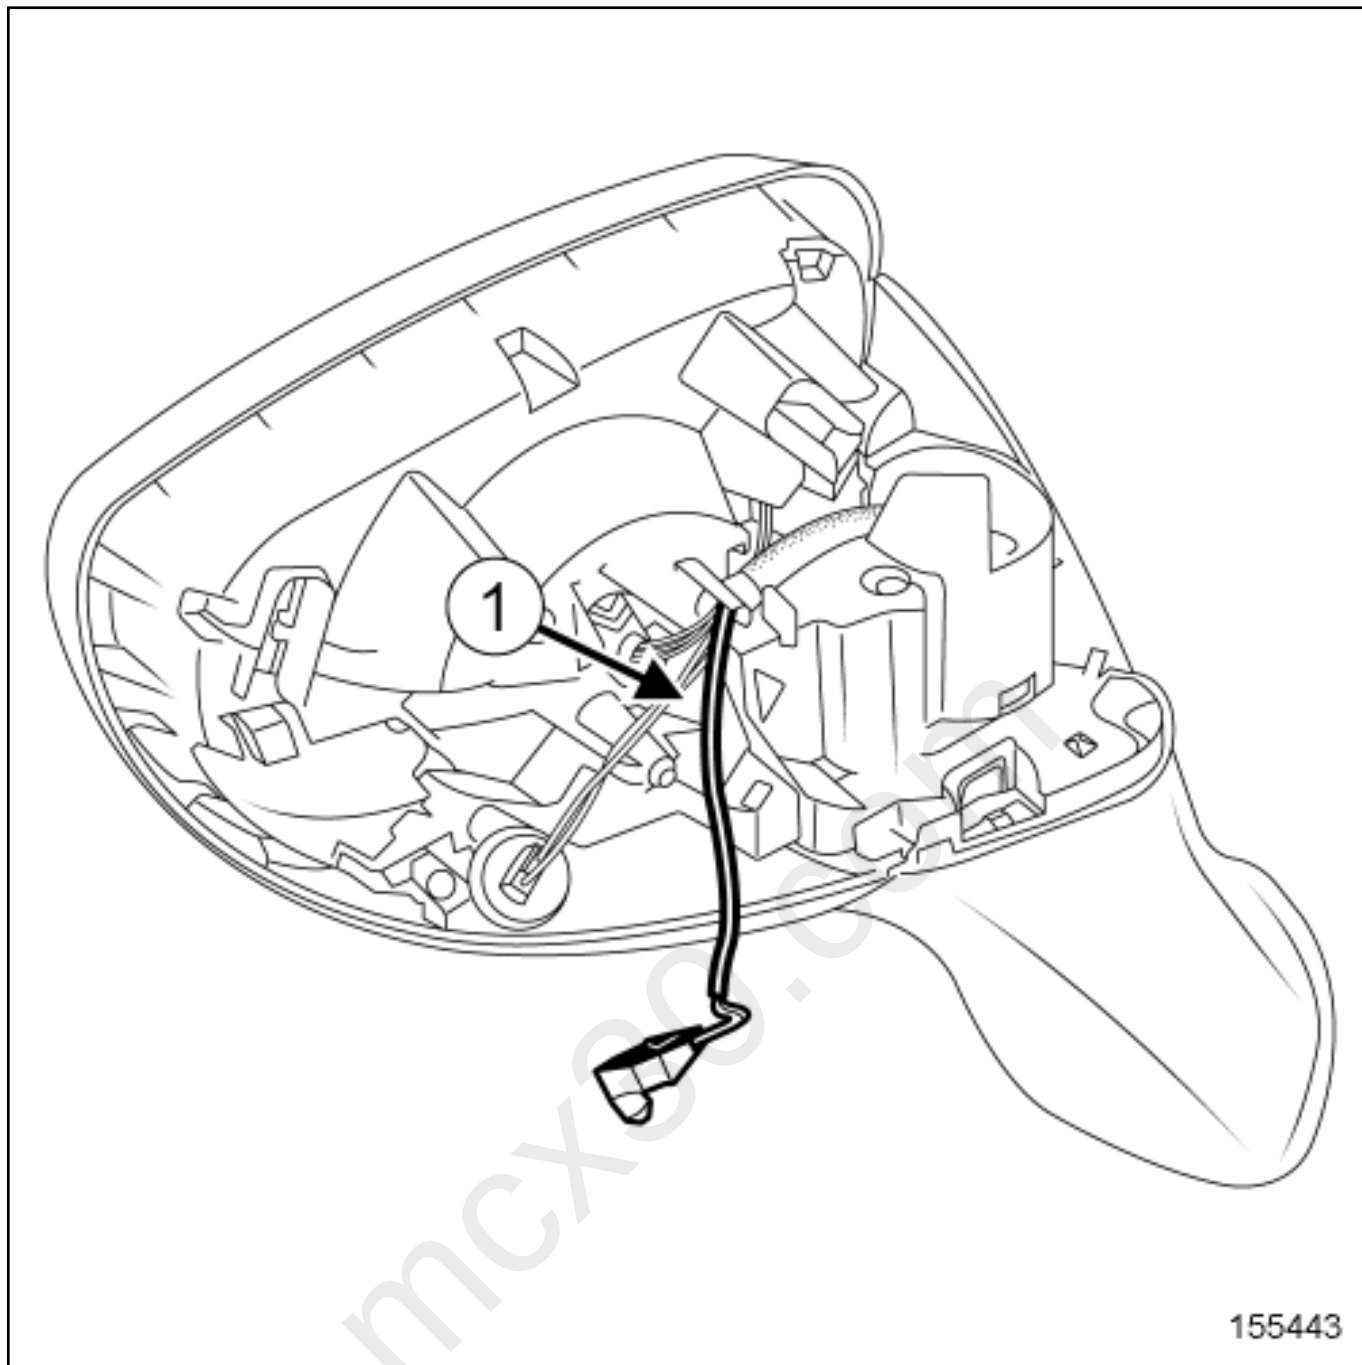

- Cut the wires(1) of the exterior temperature sensor (see Wiring: Repair) (Technical Note 6015A, 88A, Wiring).

## REFITTING

### 1. REFITTING OPERATION

- Solder the wires of the exterior temperature sensor (see Wiring: Repair) (Technical Note 6015A, 88A, Wiring).

 Refit the exterior temperature sensor onto its mounting.

## 2. FINAL OPERATION

 Proceed in the reverse order to removal.



Repair-30x02x04x13-01x37-1-22-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com