

FRONT AXLE ASSEMBLY: EXPLODED VIEW

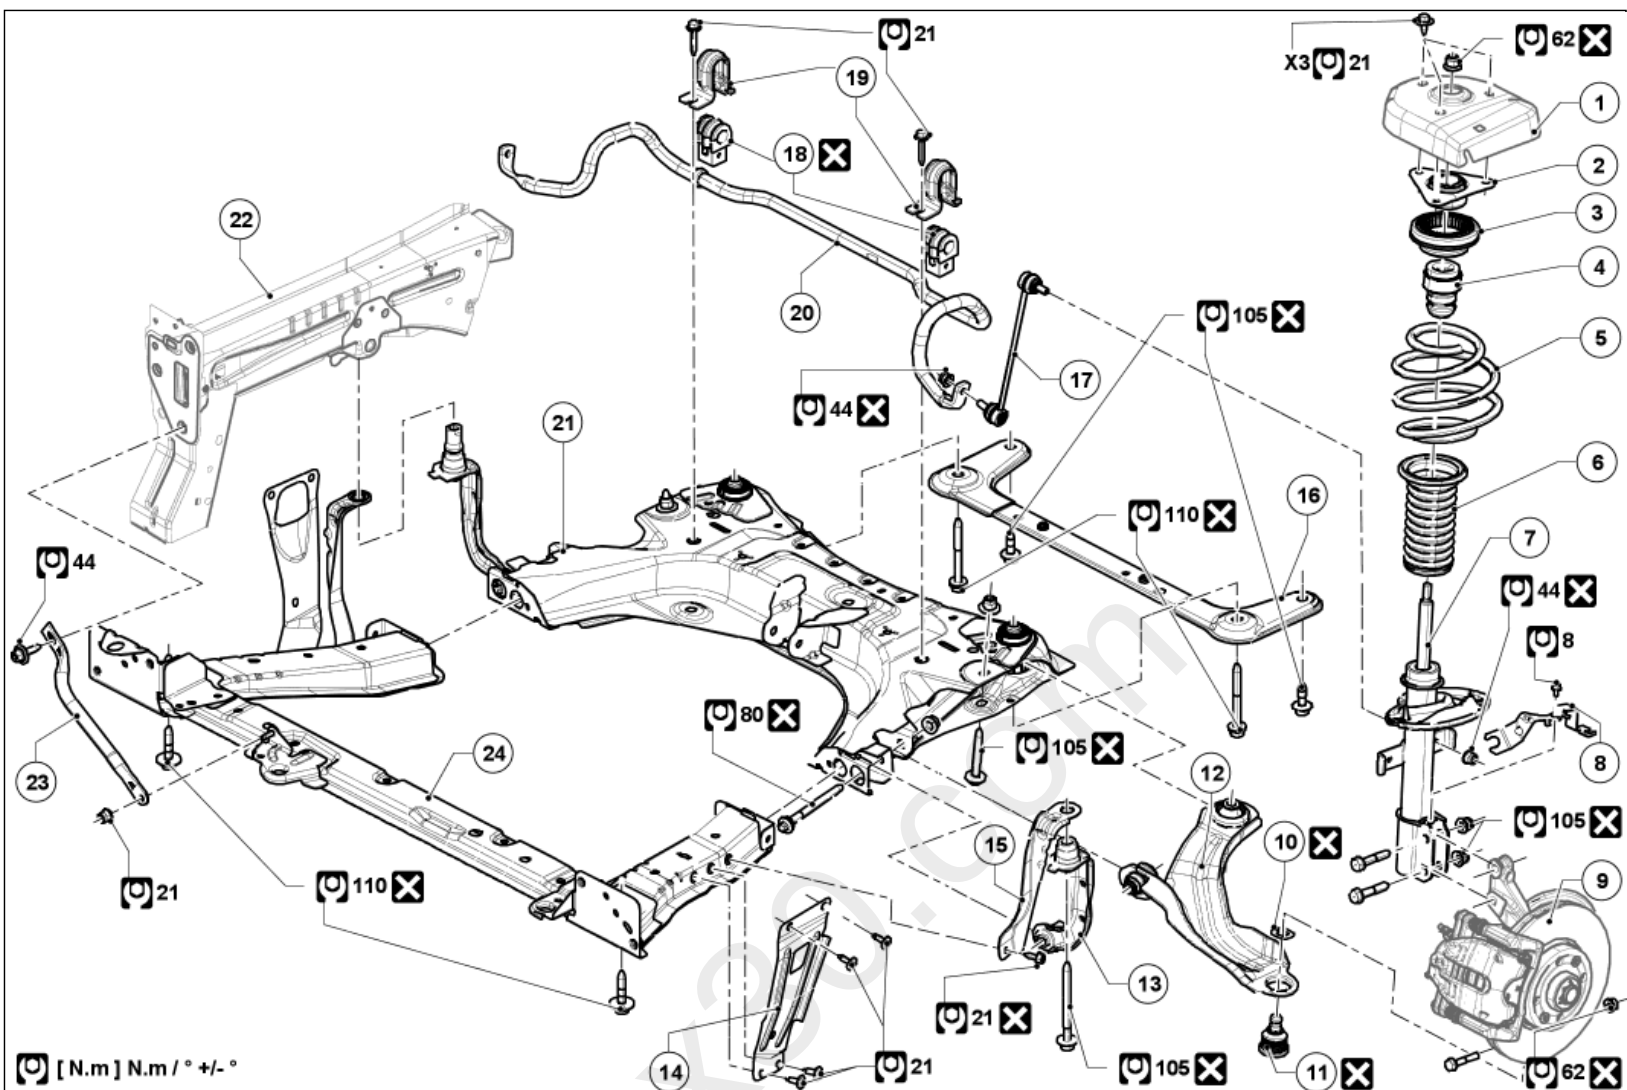


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#).

Marks	Designations	Informations
1	Upper cup of shock absorber	
2	Rotating stop	
3	Rotating stop	
4	Impact stop	(see Filter unit assembly: Removal - Refitting)
5	Spring	
6	Protective shock absorber rod	
7	Front shock absorber	(see 31A, Front axle components, Front shock absorber and spring: Removal - Refitting)
8	Lug supporting of hose	
9	Driveshaft hub carrier	(see Front driveshaft hub carrier: Removal - Refitting) [Ensemble porte-moyeu avant : Vue éclatée@13,02,03,21-02,50-1]
10	Lower ball joint protector	
11	Lower ball joint	(see Front driveshaft lower arm ball joint: Removal - Refitting)
12	Front driveshaft lower arm	(see 31A, Front axle components, Front driveshaft lower arm: Removal - Refitting)
13	Subframe tether	
14	Cheek of absorber-shock of subframe	
15	Strap of shock-absorber of subframe	
16	Crossbar of screed setting	
17	Front anti-roll bar tie rod	
18	Bush of antiroll bar	
19	Clamp of antiroll bar	
20	Front anti-roll bar	(see Front anti-roll bar: Removal - Refitting)
21	Front axle subframe	(see Front axle subframe: Removal - Refitting)
22	Spar	
23	Stay of shock absorber of subframe	
24	Absorber of shock of front subframe	(see Radiator mounting cross member: Removal - Refitting)



Repair-13x02x01-02x50-1-5-1.xml



XSL version : 3.02 du 22/07/11