

FRONT FOOTWELL AIR DISTRIBUTION DUCT: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [Air conditioning: Precautions for the repair](#) ,
- [Vehicle: Precautions for the repair](#) .

Locations and specifications (tightening torques, parts to always be replaced, etc.)([see 61A, Heating, Air distribution circuit assembly: Exploded view](#)) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

1- RIGHT-HAND SIDE

■ Remove:

- the glovebox[Dashboard assembly: Exploded view](#) ,
- the centre console(see **Centre console: Removal - Refitting**) ,
- the blanking cover of dashboard side panel[Dashboard assembly: Exploded view](#) ,
- the right-hand lower bolt of the dashboard[Dashboard assembly: Exploded view](#) .

2- LEFT-HAND SIDE

■ Remove:

- the front left-hand lower pillar trim[Interior body side trim assembly: Exploded view](#) ,
- the dashboard lower trim[Dashboard assembly: Exploded view](#) ,
- the centre console(see **Centre console: Removal - Refitting**) ,
- the left-hand lower bolt of the dashboard[Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

- Remove [\(see 61A, Heating, Air distribution circuit assembly: Exploded view\)](#) :
 - the front footwell air distribution duct clip,
 - the front footwell air distribution duct.

REFITTING

- Proceed in reverse order to removal.



Repair-30x02x01x37-01x37-1-22-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com