


FRONT OPENING ELEMENT: ADJUSTMENT

Location and specifications (tightening torques, parts always to be replaced, etc.) [Front opening element mechanism assembly : Exploded view](#) .


ADJUSTMENT VALUES

■ For all information about bonnet adjustment values [Vehicle panel gaps: Adjustment value](#) .

ADJUSTMENT

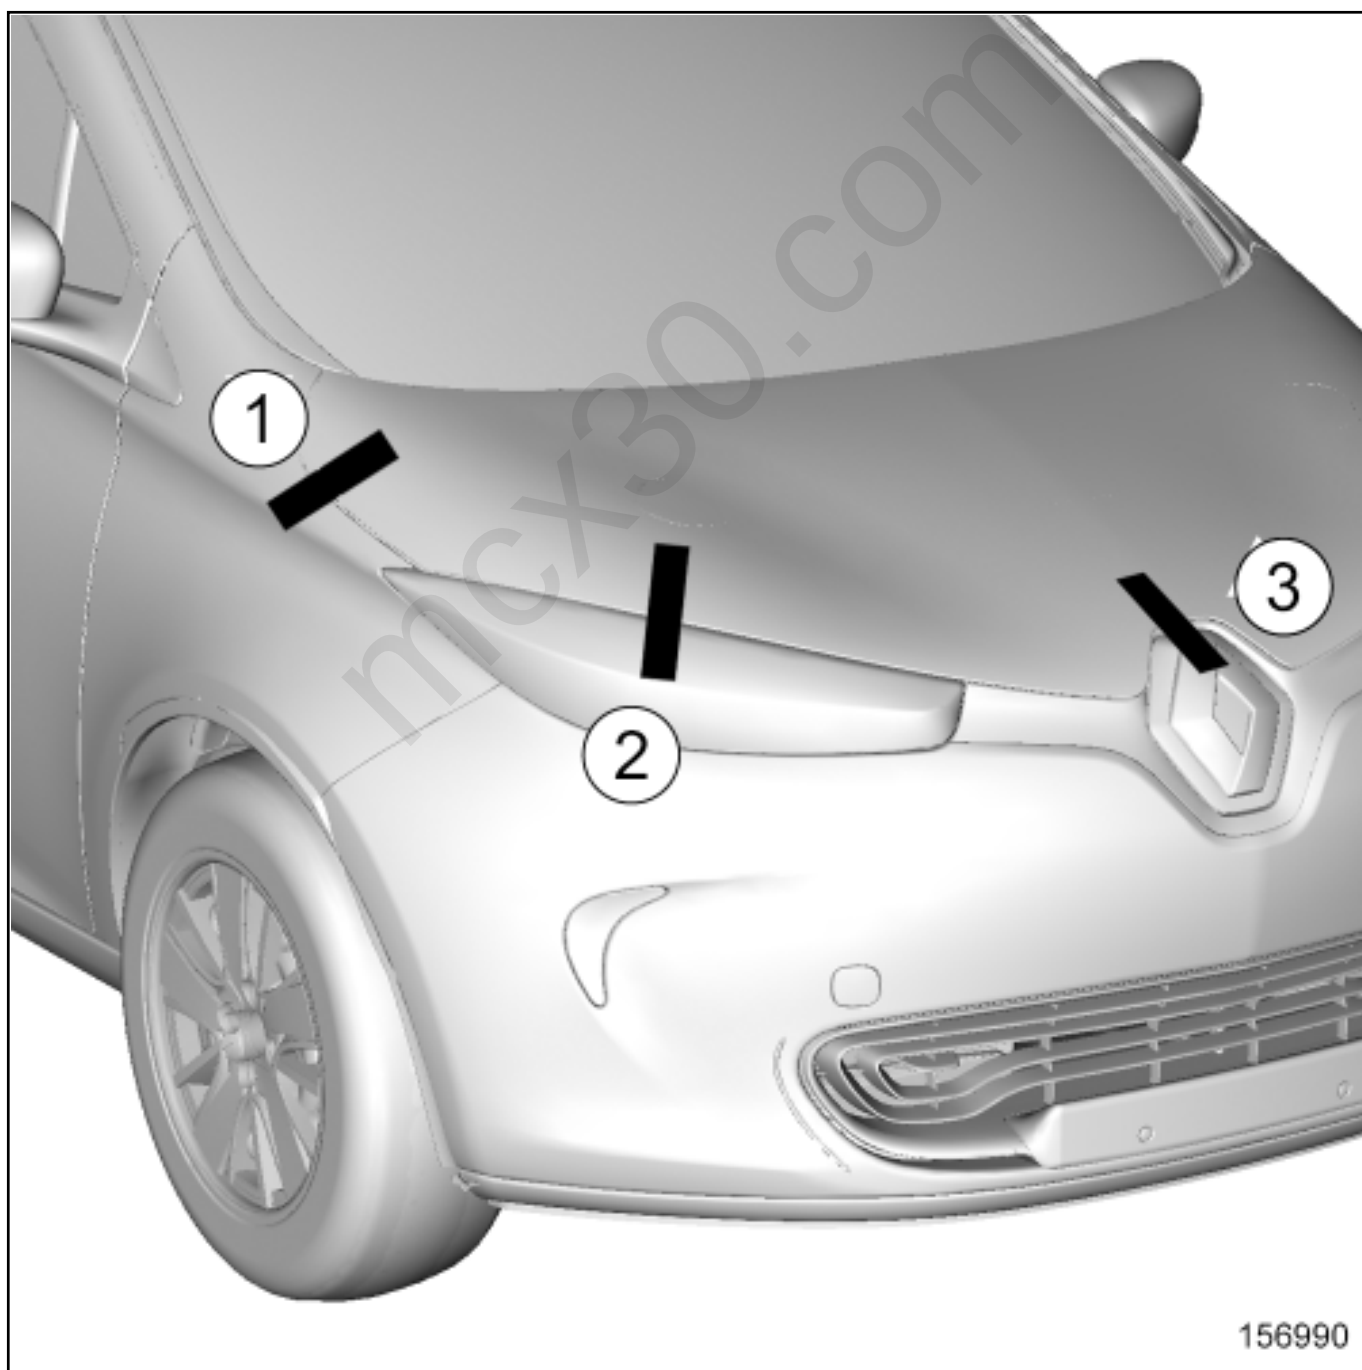

■ Observe the adjustment sequence(1) , (2) and (3) .

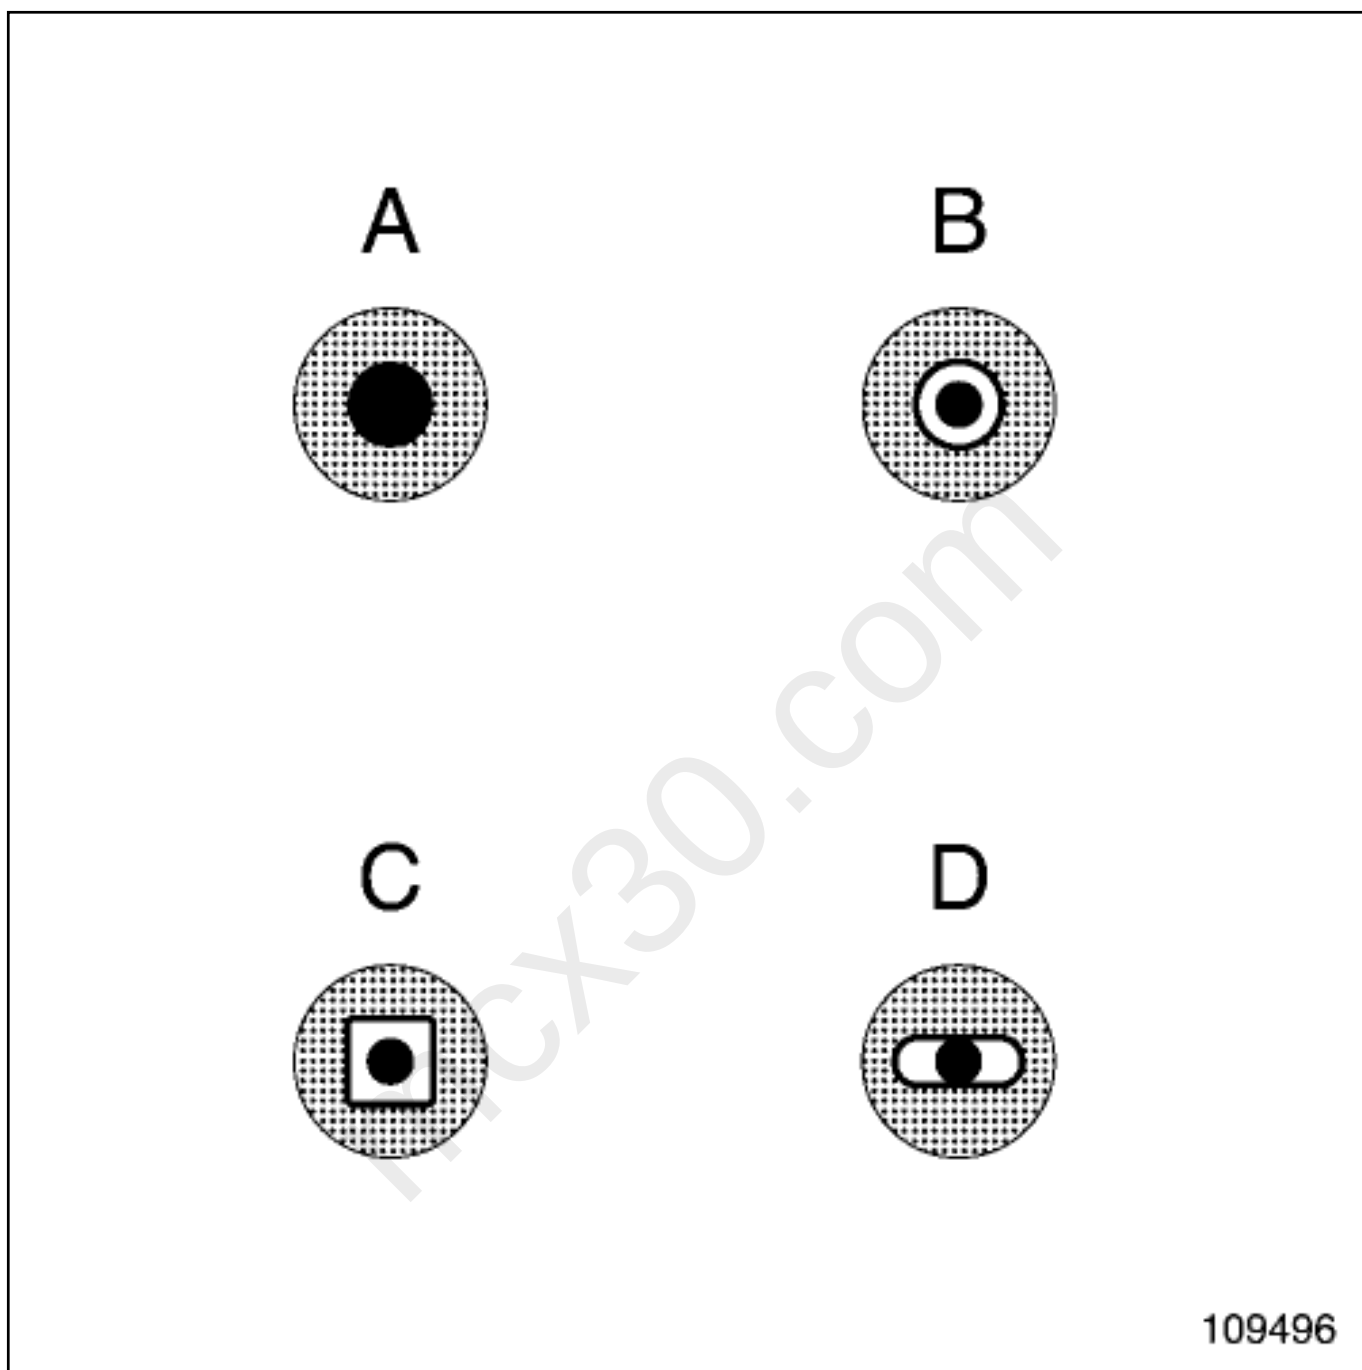


■ Symbols A, B, C and D show the adjustment options.


The black dot in the centre represents the body of the bolt.

The grey section represents the component to be adjusted.

The white section represents the adjustment area.

1. ADJUSTMENT BY MEANS OF THE BONNET BOLTS

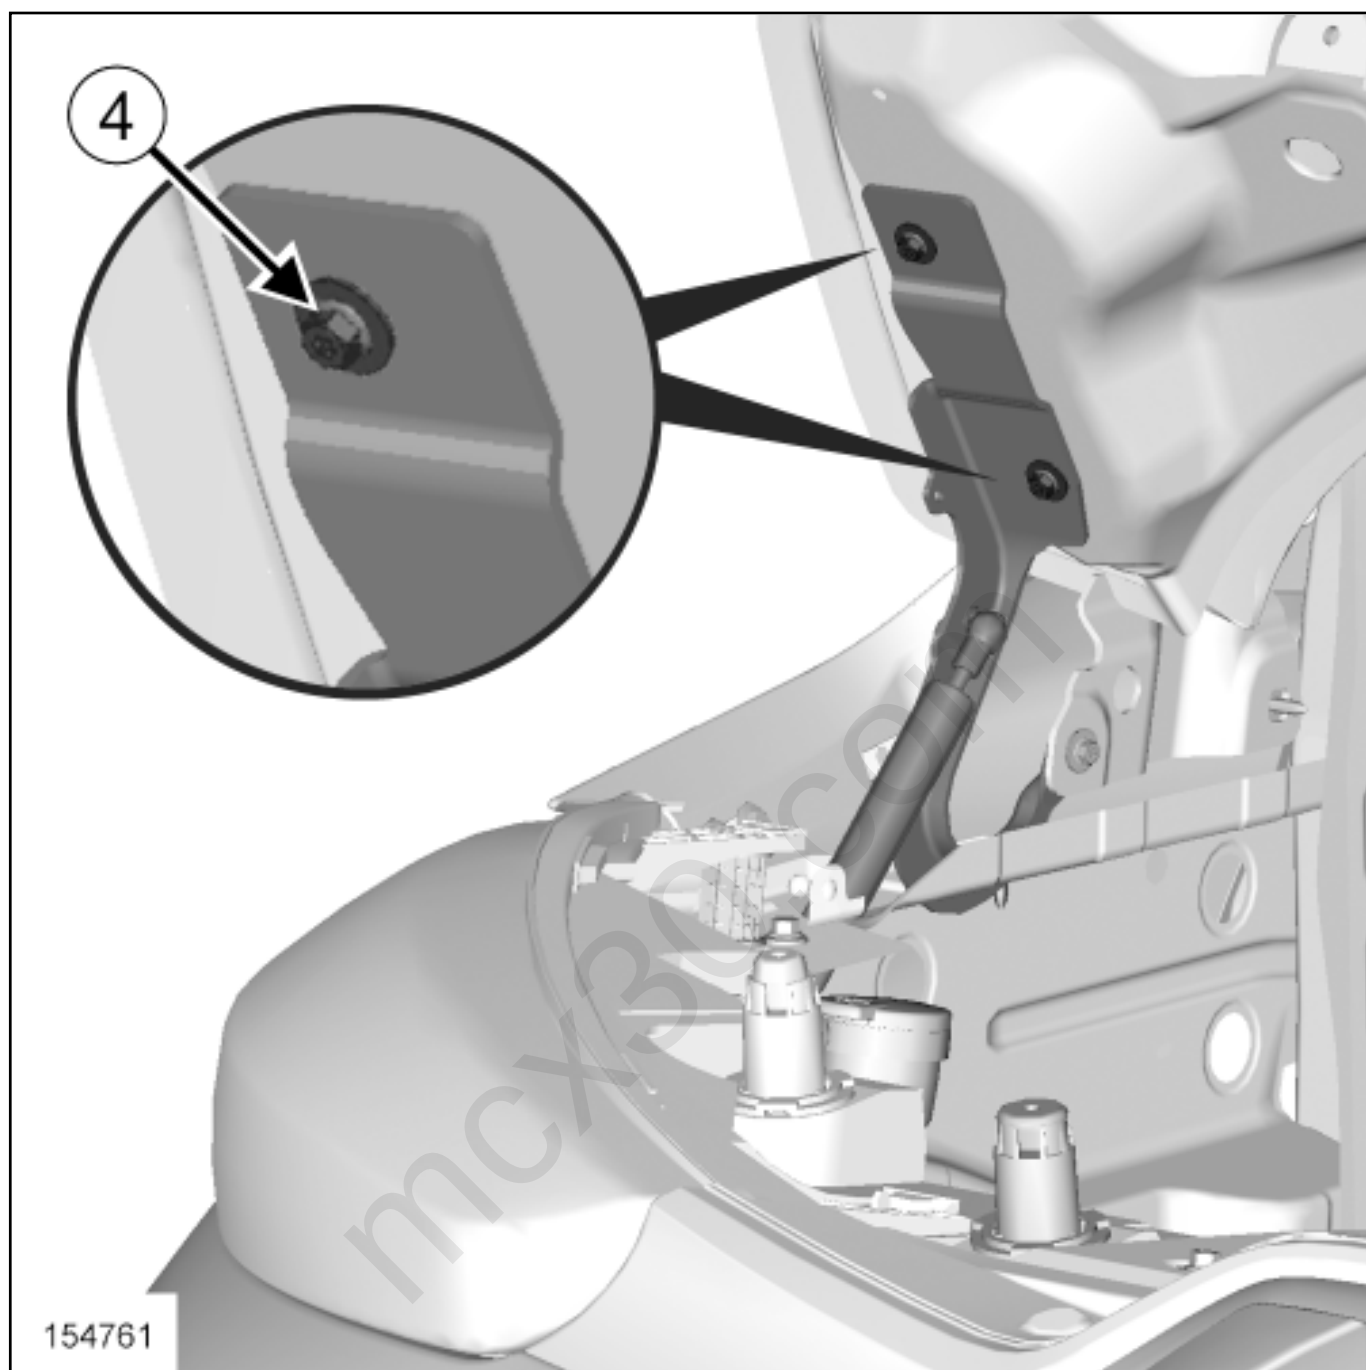

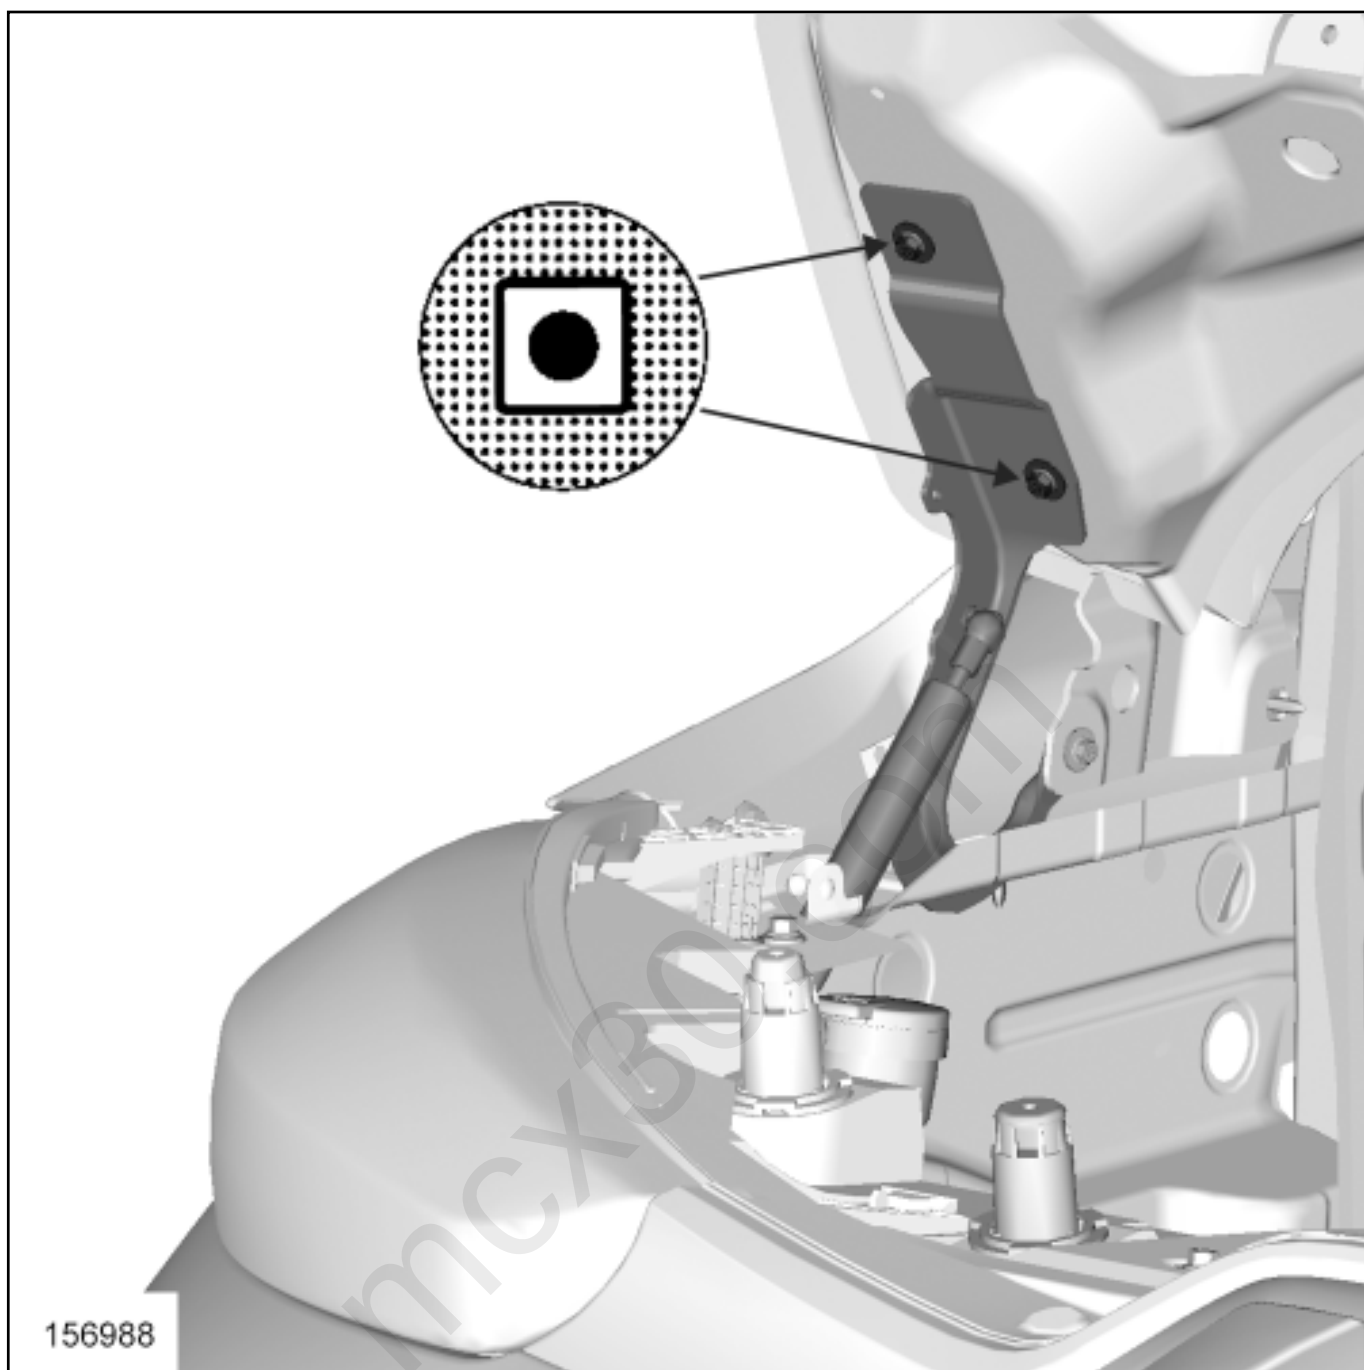

Loosen the bonnet bolts(4) .

Adjust the gaps and flush fittings of the bonnet.

Tighten the bonnet bolts(4) .



mcx30.com