

FRONT SEATBACK TRIM: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING



To avoid any risk of triggering when working on or near a pyrotechnic component (airbags or pretensioners), lock the airbag computer using the diagnostic tool.

When this function is activated, all the trigger lines are inhibited and the airbag warning light on the instrument panel lights up continuously (ignition on).



WARNING

Never handle the pyrotechnic systems (pretensioners or airbags) near to a source of heat or naked flame - they may be triggered.

Location and specifications (tightening torques, parts always to be replaced, etc.) [Front seat assembly: Exploded view](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

WARNING




DANGER: Risk of serious injury due to short-circuiting or untimely triggering of an electrical system (pyrotechnic components, windscreen wiper motor, fan assembly etc.) following possible re-supply of the 12-volt supply circuit by the voltage converter.

Please follow the instructions regarding lockout of the 12 V supply circuit.

If the procedure fails, do not continue with your task and ask an employee who is qualified and authorised to work on a high-voltage onboard network to perform fault finding [Vehicle: Precautions for the repair](#) .

■ Disconnect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .

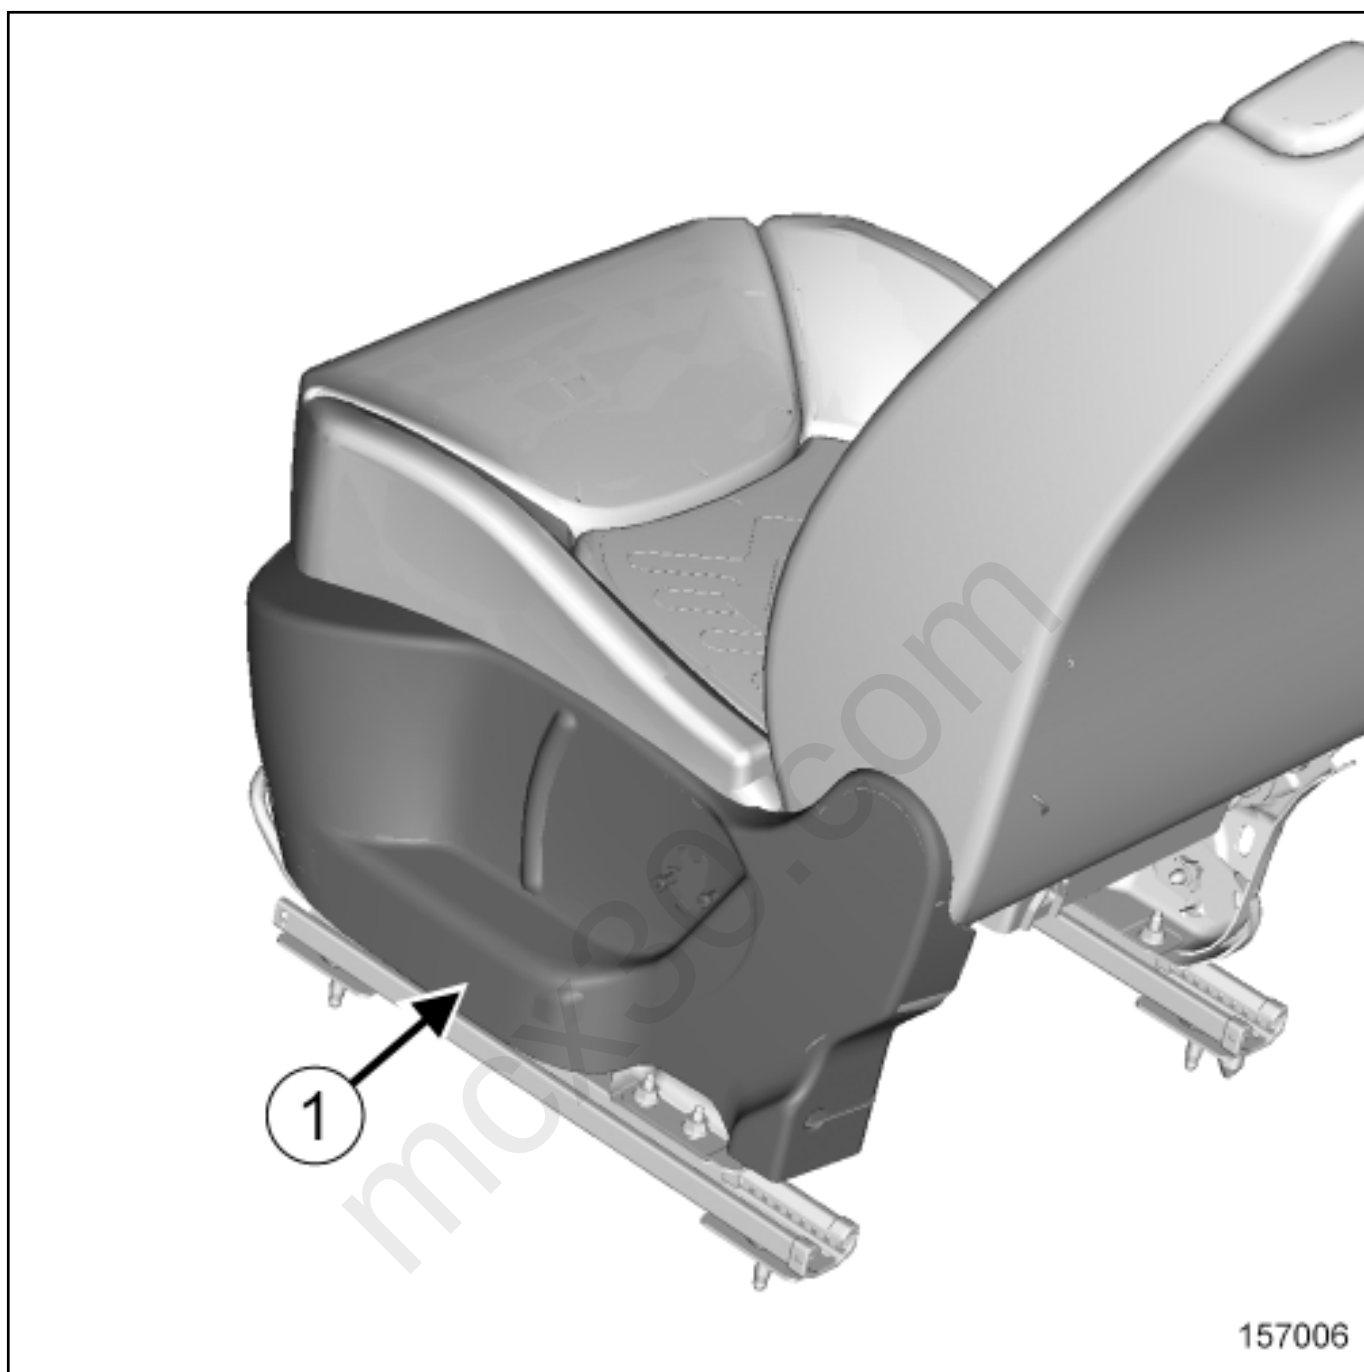


■ Remove:


- the front seat [Front seat assembly: Exploded view](#) ,
- the front seat base casing(1) .

■ Unclip the front seatback angle adjustment control [Front seat assembly: Exploded view](#) .

2. REMOVAL OPERATION

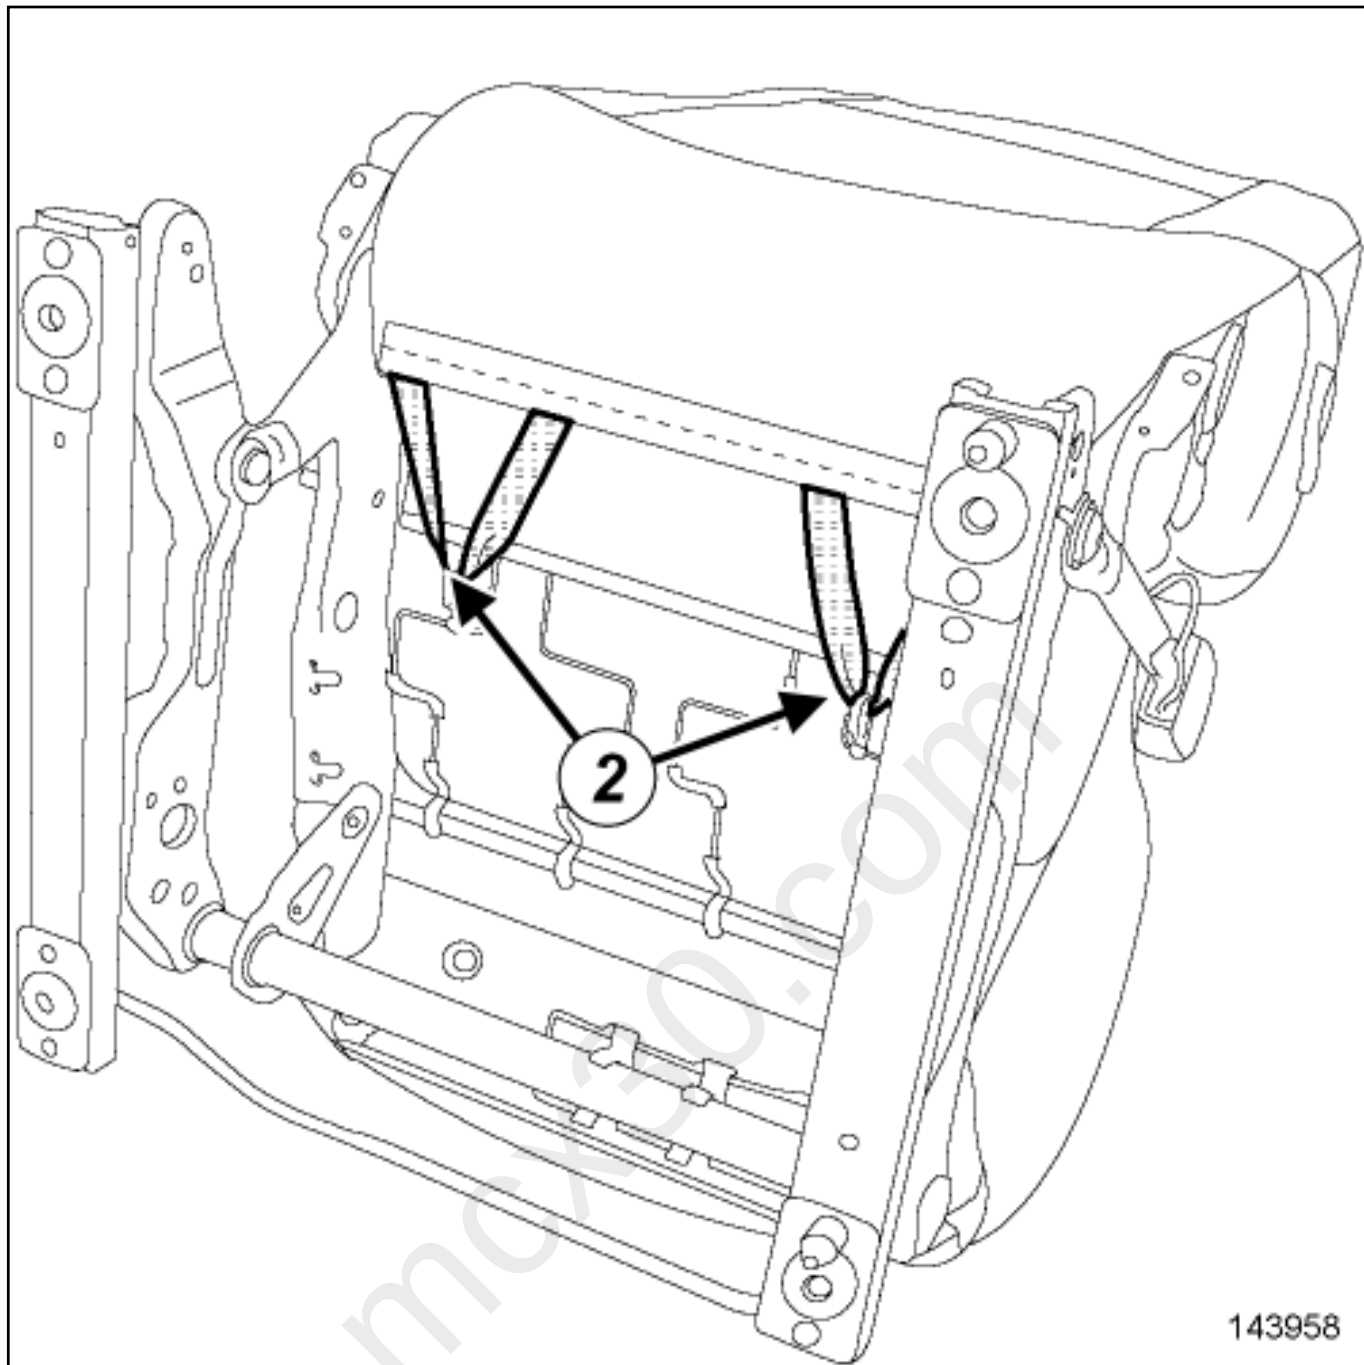

143958

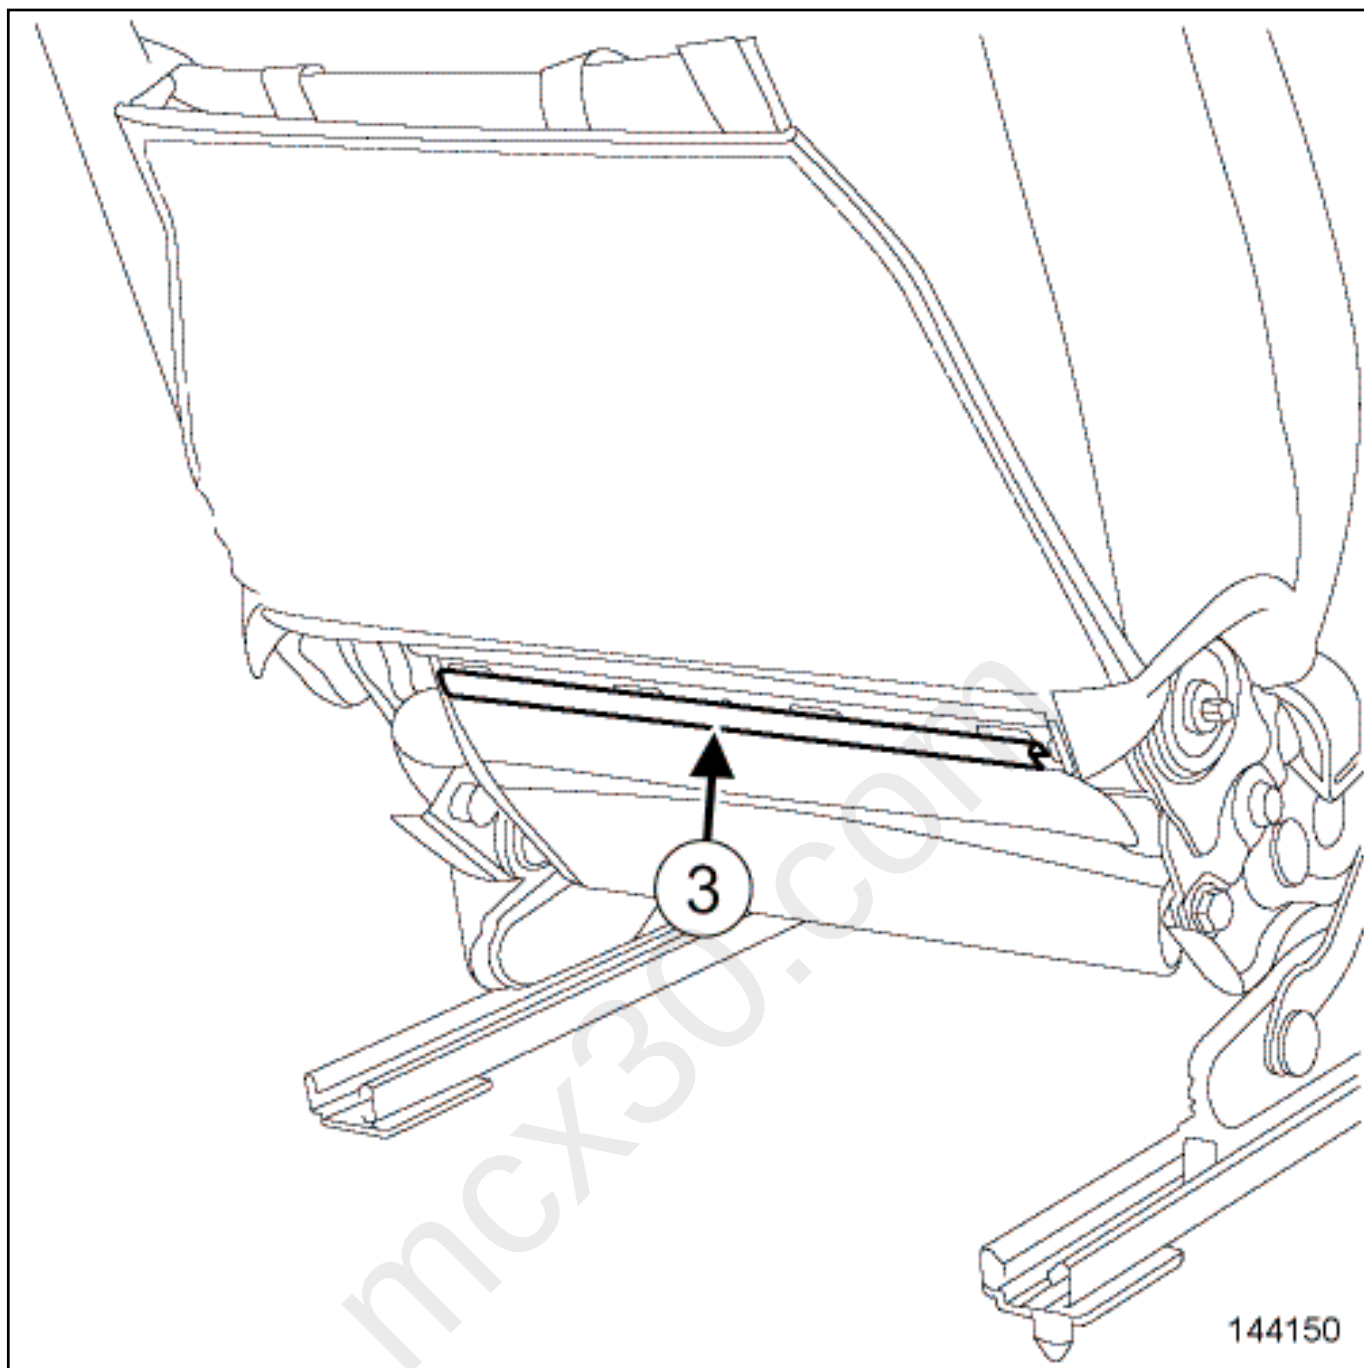


■ Remove the elastic securing straps of the front seatback cover(2) .

■

Unclip the lower retaining section of the front seatback cover(3) .


■

Remove the front seat seatback cover partially.

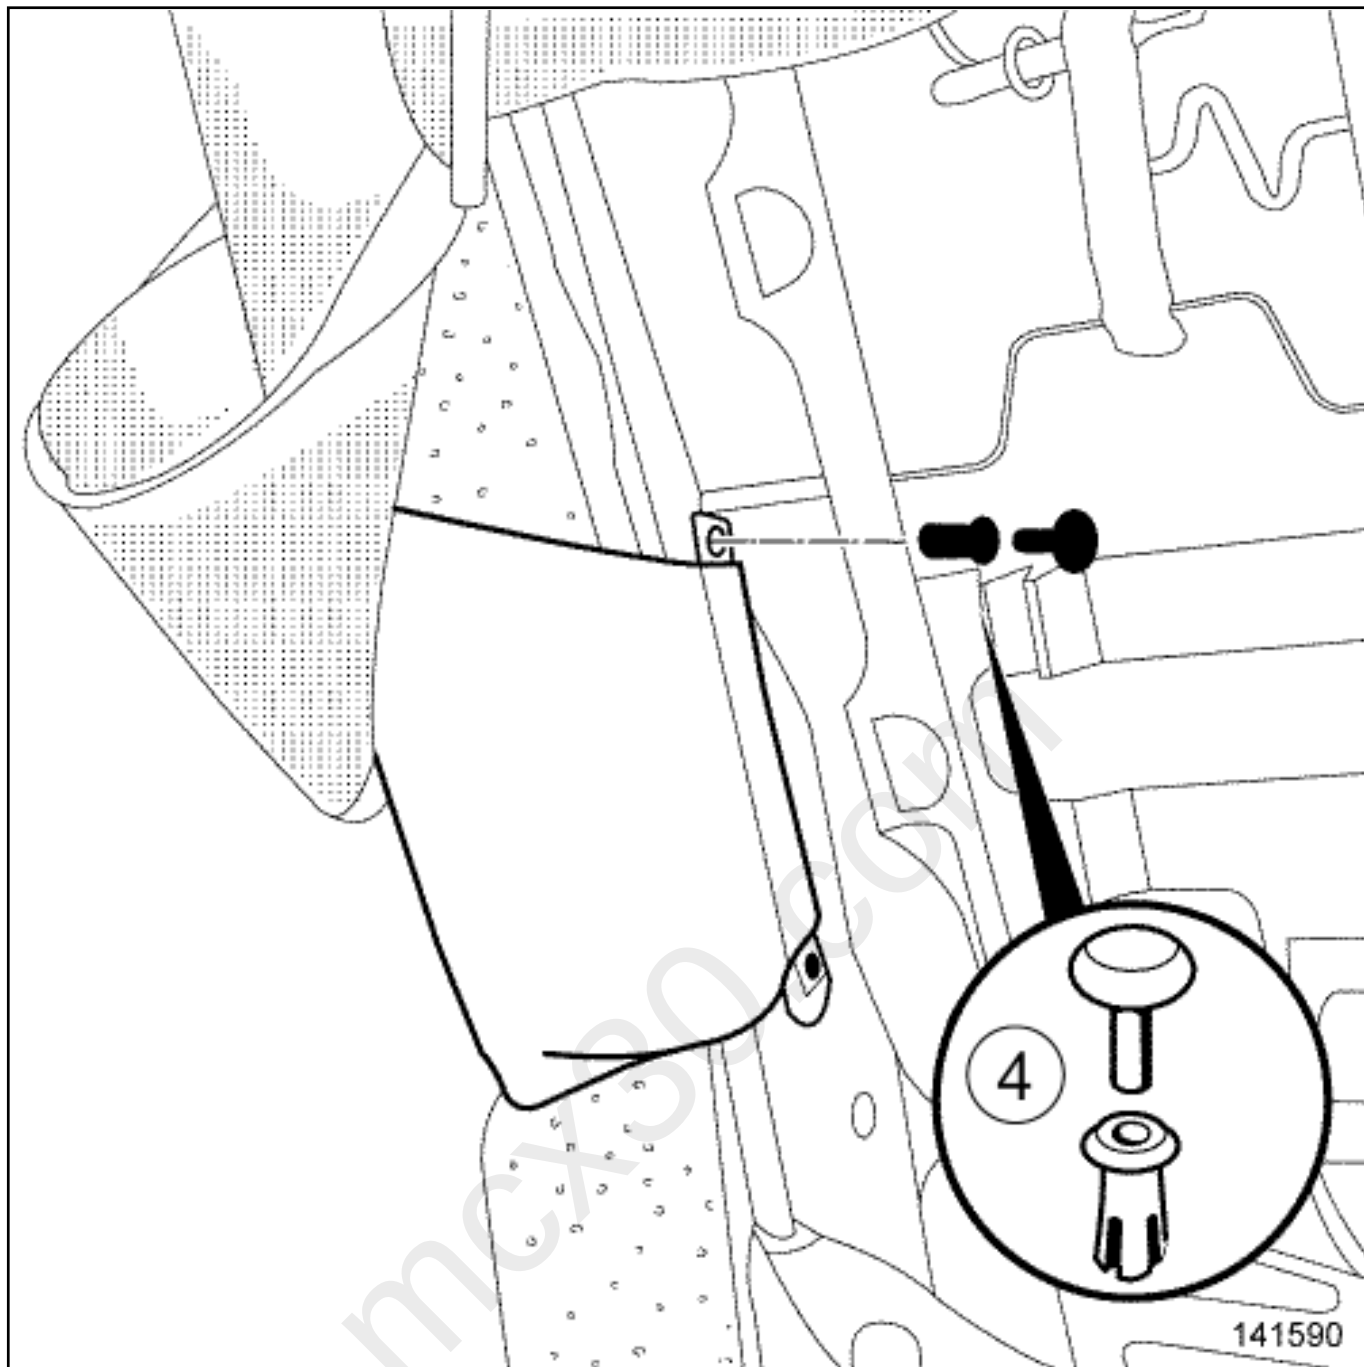

Unlock the retaining section pin of the front seat (chest-level) side airbag concentrator.

Remove the retaining section pin(4) from the front seat (chest-level) side airbag concentrator.

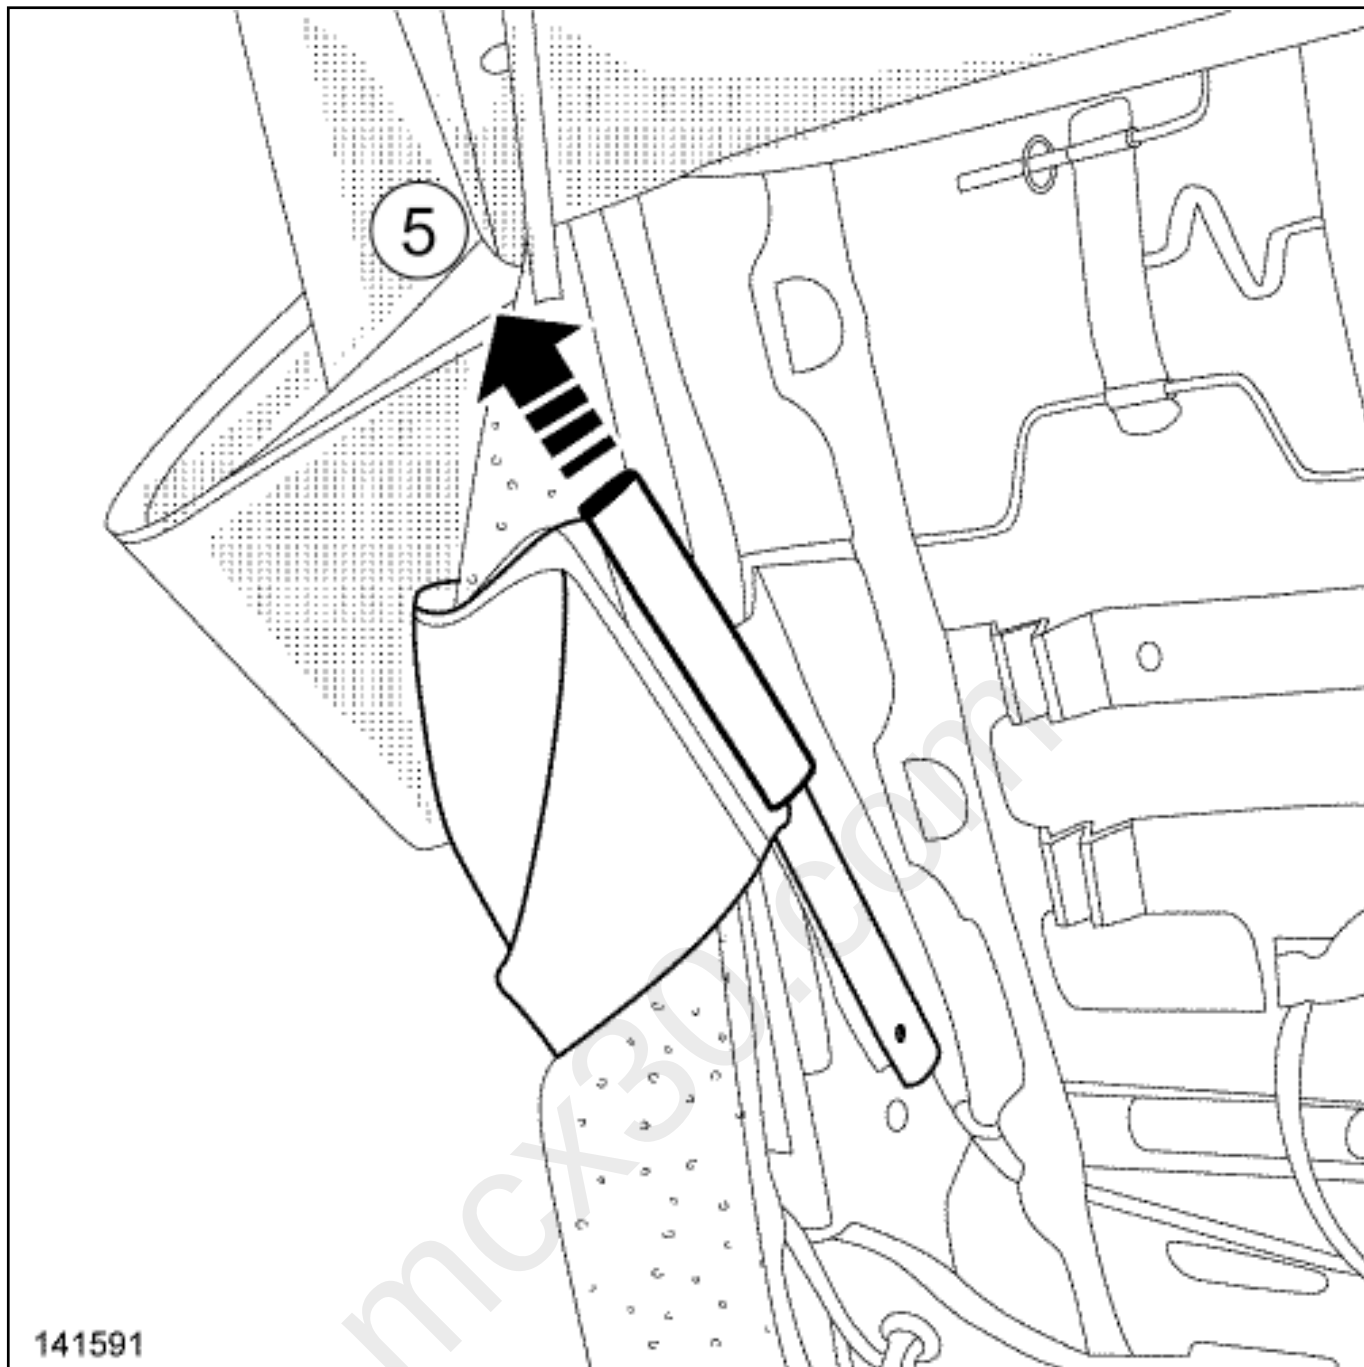

Detach the retaining section of the front seat side (chest-level) airbag concentrator at(5) by sliding it.



Remove the front seatback "foam - cover - headrest" assembly [Front seat assembly: Exploded view](#) .



Note:

Unclip the headrest from the headrest guide by the interior of the seatback to extract the front seatback "foam - cover - headrest" assembly.

REFITTING

1. REFITTING OPERATION



Proceed in the reverse order to removal.

2. FINAL OPERATION



Connect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .



Repair-70x10x02x06-01x37-1-42-1.xml



XSL version : 3.02 du 22/07/11