

HEATING RESISTORS: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [Air conditioning: Precautions for the repair](#) ,
- [Vehicle: Precautions for the repair](#) .

Locations and specifications (tightening torques, parts to always be replaced, etc.) ([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

WARNING

DANGER: HIGH VOLTAGE VEHICLE.




Risks of serious burns or electric shocks that may prove fatal.

Before carrying out any work on the vehicle, it is essential that you follow the instructions regarding vehicle lockout. This work must be carried out by an employee who is qualified and authorised to work on a high-voltage onboard network [Vehicle: Precautions for the repair](#) .

■ Remove the lockout of the vehicle [Vehicle: Lockout - Removal of lockout](#) .

■ Remove the dashboard [Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

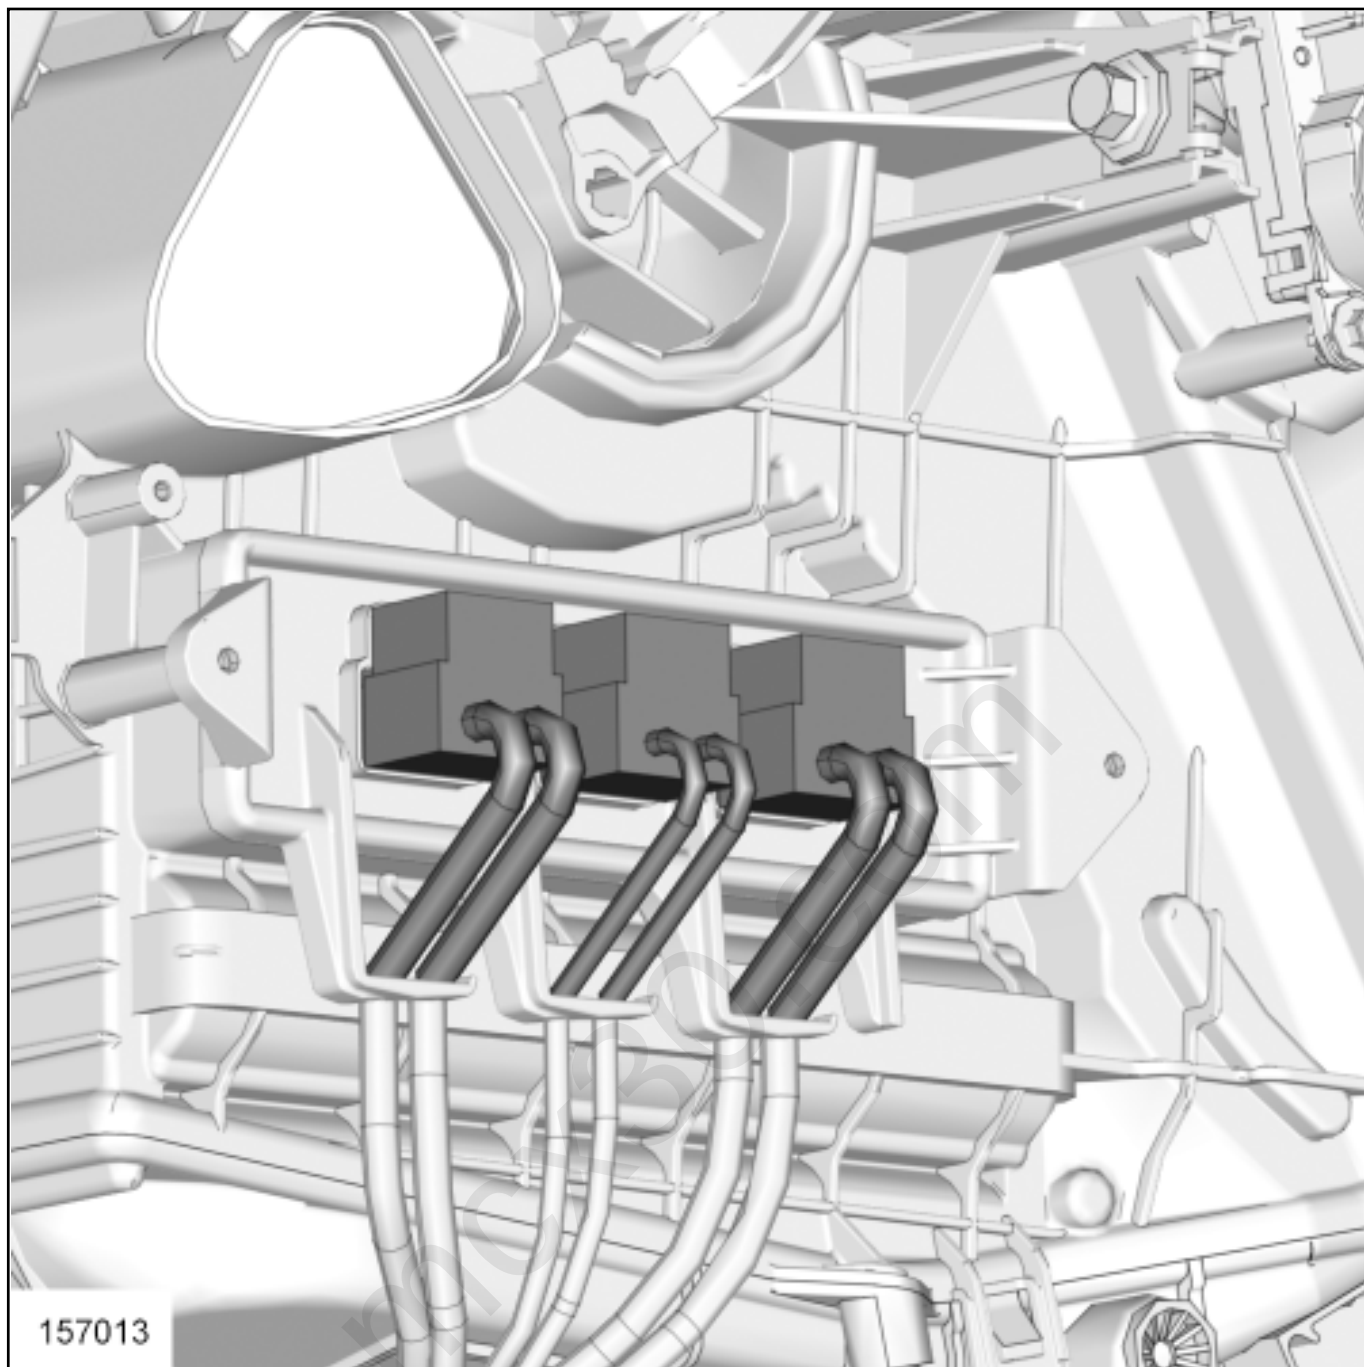

- Disconnect the heating resistors connectors.
- Remove the heating resistors bolts([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .
- Take the heating resistors out of their housing([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .

REFITTING

■ Proceed in the reverse order to removal.

■ Lockout the vehicle [Vehicle: Lockout - Removal of lockout](#) .



Repair-30x02x01x05-01x37-1-37-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com