

# NAVIGATION: LIST AND LOCATION OF COMPONENTS



Note, one or more warnings are present in this procedure



## Equipment required

Diagnostic tool

### 1. LIST OF COMPONENTS

#### 1- THE "NAVIGATION" EQUIPMENT CONSISTS OF:

TCU VER 0 GEN 1(TCU0G1)

- a telematics computer

### 2. LOCATION OF COMPONENTS



#### CAUTION


To prevent damaging the navigation system, wait 1 minute after switching off the + after ignition feed.



#### CAUTION

- To ensure correct operation:
  - do not pinch the aerial cable,
  - do not bend the aerial cable,
  - do not force the aerial cable when refitting.

## 1- TELEMATICS COMPUTER

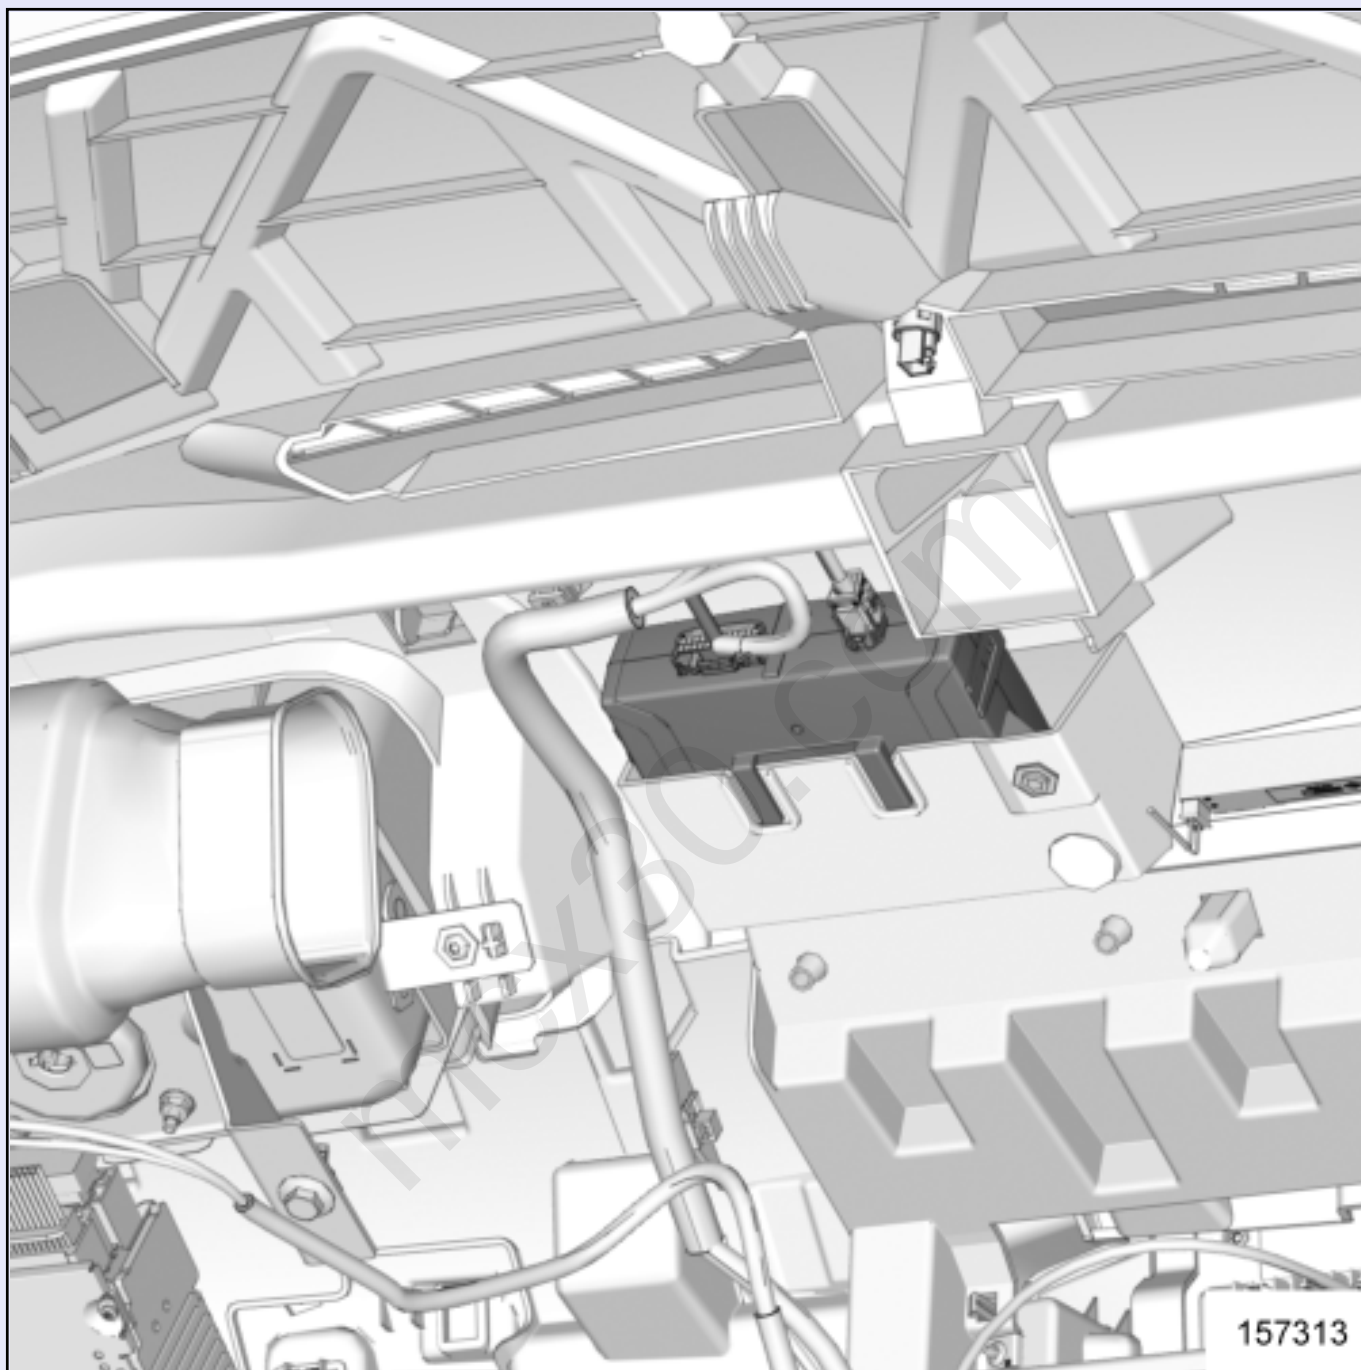

The telematics computer is located on the upper centre inner part of the dashboard.

□ Apply the before / after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerned by the Before / After repair procedure:

■ "TCU" .

## WARNING

DANGER : Risk of serious injury due to short-circuiting or untimely triggering of an electrical system (pyrotechnic components, windscreen wiper motor, fan assembly etc.) following possible re-supply of the 12-volt supply circuit by the voltage converter.



Please follow the instructions regarding disconnection of the 12-volt supply circuit.

If the procedure fails, do not continue with your task and ask an employee who is qualified and authorised to work on a high-voltage onboard network to perform fault finding [Vehicle: Precautions for the repair](#) .

Disconnect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .

Remove the dashboard [Dashboard assembly: Exploded view](#) .

Disconnect the telematics computer connectors.

 Remove:

- the telematics computer screw,
- the telematics computer.



Repair-30x04x09x10-02x51-1-23-1.xml



XSL version : 3.02 du 22/07/11